

Calypso K5677/2

Calypso Unisex Digital Quartz Watch User Manual

Model: K5677/2 | Brand: Calypso

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Calypso Digital Quartz Watch. This manual provides essential information for the proper use and maintenance of your watch. Please read it carefully before operating your device.

This Calypso watch features a durable polycarbonate round case with a stainless steel case back and a comfortable, water-resistant silicone strap. It is designed for everyday wear and offers practical functions.



Figure 1: Front view of the Calypso Digital Quartz Watch (Model K5677/2) in purple.

This image displays the watch face with a digital display showing "16:16" and "ALARM". The watch has a round purple case and a matching silicone strap. Buttons are visible on the sides of the case.

Key Features:

- Polycarbonate round case with stainless steel case back
- Water-resistant plastic strap
- Water resistance up to 100 meters (330 feet)
- Stopwatch function with alarm
- Integrated light function for low-light conditions

2. SETUP AND INITIAL CONFIGURATION

Your Calypso watch comes pre-packaged. Upon unboxing, ensure all components are present. The watch is typically shipped in a unique battery-shaped container.

4.- AVVISI NORMATIVI

UNIONE EUROPEA



Dichiarazione di conformità CE semplificata

FESTINA LOTUS SA, con sede legale in C/Velázquez nº 150, 3º 1^a 28002 Madrid (Spagna), Dichiara sotto la sua esclusiva responsabilità che questo prodotto e i relativi accessori sono conformi ai requisiti essenziali della Direttiva 2011/65/UE e della sua modifica 2015/863/UE. (RoHS) e/Direttiva 2014/35/UE, (LVD).

Dichiara inoltre che tutti gli articoli e/o accessori con connettività wireless sono conformi alla Direttiva 2014/53/UE (RED) e/o alla Direttiva 2014/30/UE (EMC).

Il testo completo della Dichiarazione di conformità dell'UE è disponibile al seguente indirizzo: <https://www.festinagroup.com/>

Apparecchiature elettriche ed elettroniche e riciclaggio delle batterie

L'orologio, gli accessori e la batteria contengono sostanze che non devono essere smaltite come rifiuti domestici e sono soggette a normative specifiche.

Fatte salve le normative nazionali, nell'Unione Europea le apparecchiature elettriche ed elettroniche sono soggette alla Direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE) e le pile in esse contenute sono soggette al Regolamento UE 2023/1542 del 12 luglio 2023 sulle pile e batterie e i loro rifiuti.



Rifiuti di apparecchiature elettriche ed elettroniche, WEEE Direttiva 2012/19/EU

Questo prodotto non deve essere smaltito insieme ai rifiuti domestici, ma tramite un punto di raccolta RAEE autorizzato. Per ulteriori informazioni su dove è possibile consegnare i rifiuti per il riciclaggio, contattare le autorità locali o il rivenditore presso il quale è stato acquistato il prodotto.

Festina adempie ai propri obblighi di raccolta dei RAEE in quanto membro di differenti sistemi di conformità.

Per ulteriori informazioni: <https://www.festinagroup.com/>



Le batterie e i rifiuti di batterie Regolamento 2023/1542

Al momento di essere sostituite le batterie devono essere rimosse e smaltite presso un punto di raccolta autorizzato. Le batterie separabili devono essere rimosse prima dello smaltimento del prodotto e smaltite separatamente.


Festina adempie ai propri obblighi di raccolta, in questo settore, in quanto membro di vari programmi di conformità.

Per ulteriori informazioni: <https://www.festinagroup.com/>

Si ricorda che le rispettive legislazioni nazionali dei Paesi dell'UE possono raccomandare o obbligare a restituire i prodotti elettrici e/o elettronici e le pile e le batterie in determinati punti di raccolta pubblici o privati (punti vendita) al termine della loro vita utile.

Ulteriori informazioni sullo smaltimento di questi prodotti possono essere ottenute presso le autorità locali del Paese di residenza, se necessario, presso il servizio di gestione dei rifiuti competente e presso il punto vendita abituale.

Informazioni per i prodotti di consumo contenenti batterie:

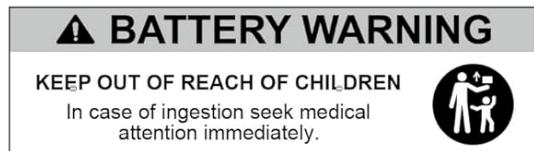

Le batterie a bottone sono appositamente progettate per piccoli apparecchi portatili. Le loro piccole dimensioni e la loro forma rotonda aumentano il rischio che siano ingerite accidentalmente dai bambini.

Che fare in caso di sospetta ingestione?

Una batteria a bottone, se ingerita, corre il rischio di rimanere bloccata nell'esofago. Questa situazione può essere molto pericolosa e, nel peggior dei casi, anche mortale.

- Portare subito il bambino al pronto soccorso.
- Non dare al bambino da bere o da mangiare finché con una radiografia non si sarà stabilito se ha ingerito una batteria
- Non indurre il vomito.
- Portare al pronto soccorso l'apparecchio contenente la batteria o l'imballaggio originale delle batterie per aiutare il medico a identificarne il modello e la composizione chimica



Caratteristiche principali della radio

Banda di frequenza	Funzionalità	Potenza massima di trasmissione
2,412-2,472 GHz	WLAN IEEE 802.11 b/g/n	19 dBm
2,402-2,480 GHz	Bluetooth 5.0	12 dBm

Il marchio e i loghi Bluetooth sono marchi registrati di proprietà di Bluetooth SIG, Inc. e qualsiasi uso di tali marchi da parte di FESTINA è concesso in licenza. Altri marchi e nomi commerciali appartengono ai rispettivi proprietari.

Figure 2: Calypso Watch Packaging.

This image shows the cylindrical, battery-shaped packaging for the Calypso watch. The packaging is clear with red and white labels, featuring the "CALYPSO" brand name vertically and various slogans in multiple languages.

Setting the Time and Date:

Digital watches typically have 2-4 buttons for operation. Common button labels include MODE, SET, START/STOP, and LIGHT. The exact procedure may vary slightly by model, but the general steps are as follows:

1. **Enter Time Setting Mode:** Press the **MODE** button repeatedly until the time digits (hours or minutes) begin to flash.
2. **Select Digit to Adjust:** Use the **SET** or **START/STOP** button to cycle through the digits (hours, minutes, seconds, AM/PM).
3. **Adjust Value:** Use the **LIGHT** or another designated button to increase or decrease the flashing digit's value.
4. **Set Date:** Continue pressing **MODE** to cycle to date settings (month, day, year) and adjust them using the same method.
5. **Exit Setting Mode:** Press the **MODE** button again or wait for the flashing to stop automatically to save settings.

3. OPERATING INSTRUCTIONS

Using the Stopwatch:

1. **Enter Stopwatch Mode:** Press the **MODE** button until "ST" or "STOP" appears on the display.
2. **Start/Stop:** Press the **START/STOP** button to begin timing. Press it again to pause.
3. **Reset:** While paused, press the **SET** or **RESET** button to clear the stopwatch to zero.
4. **Exit:** Press the **MODE** button to return to time display.

Setting and Using the Alarm:

1. **Enter Alarm Mode:** Press the **MODE** button until "AL" or "ALARM" appears.
2. **Set Alarm Time:** The alarm hours or minutes will flash. Use the **SET** and **ADJUST** buttons to set the desired alarm time.
3. **Activate/Deactivate Alarm:** In alarm mode, use a specific button (often **START/STOP** or **ADJUST**) to toggle the alarm ON/OFF. An alarm icon will usually appear when active.
4. **Stop Alarm Sound:** When the alarm sounds, press any button to silence it.
5. **Exit:** Press the **MODE** button to return to time display.

Using the Light Function:

Press the **LIGHT** button (usually located on the top left or right side of the watch) to illuminate the display for a few seconds in low-light conditions.

4. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** Your watch is water-resistant up to 100 meters. This means it is suitable for swimming and snorkeling, but not for scuba diving. Avoid pressing buttons underwater.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Battery Replacement:** When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting the Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons to see if any respond. If not, a battery reset (removal and reinsertion) by a professional might be needed.
Water inside the display.	Seal compromised or buttons pressed underwater.	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

6. SPECIFICATIONS

- Model Number:** K5677/2
- Case Material:** Polycarbonate
- Case Back:** Stainless Steel
- Strap Material:** Water-resistant Plastic/Silicone
- Clasp Type:** Buckle
- Water Resistance:** 100 meters (330 feet)
- Functions:** Digital Time Display, Date, Stopwatch, Alarm, Light
- Product Dimensions:** Approximately 7.87 x 7.87 x 7.87 inches (20 x 20 x 20 cm)
- Item Weight:** Approximately 1.76 ounces (50 grams)

7. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation provided with your purchase or contact your retailer. Calypso watches are manufactured by the Festina Group.

For further assistance, detailed instructions, or to locate authorized service centers, please visit the official manufacturer's website:

Visit Festina Group Official
Website

Please note that product specifications and features are subject to change without prior notice. Always refer to the latest information available from the manufacturer.