Dyson DYS962748-01

Dyson DC58 DC59 Mini Motorized Cleaner Head User Manual

Model: DYS962748-01

1. Introduction

This manual provides essential information for the proper use, maintenance, and troubleshooting of your Genuine Dyson DC58 DC59 Mini Motorized Cleaner Head. This attachment is designed to enhance the cleaning performance of your compatible Dyson vacuum cleaner, particularly for removing ingrained dirt from carpets and for effective use on hard floors.
The mini motorized tool features ultra-fine carbon rotating brushes, making it an effective solution for various cleaning tasks.

2. Compatibility

This Genuine Dyson Mini Motorized Cleaner Head (Part Number: 962748-01) is compatible with the following Dyson vacuum cleaner models:

- Dyson DC58
- Dyson DC59

Please verify your vacuum cleaner model to ensure compatibility. If you are unsure, refer to your vacuum cleaner's manual or contact Dyson customer support.

3. Key Features

- **Genuine Dyson Part:** Ensures optimal performance and fit with compatible Dyson models.
- **Mini Motorized Design:** Provides powerful agitation for deep cleaning.
- **Carbon Fiber Brushes:** Ultra-fine carbon rotating brushes effectively remove ingrained dirt from carpets and are gentle on hard floors.
- **Compact Size:** Ideal for cleaning confined spaces, upholstery, stairs, and car interiors.
- **Part Number:** 962748-01.

4. Setup and Installation

Follow these steps to attach the Mini Motorized Cleaner Head to your Dyson vacuum cleaner:

1. Ensure your Dyson vacuum cleaner is turned off and unplugged (if applicable) before attaching or detaching any accessories.
2. Locate the connection point on your Dyson vacuum cleaner's wand or main body.
3. Align the Mini Motorized Cleaner Head's connector with the vacuum's connection point.
4. Push the cleaner head firmly onto the vacuum until it clicks securely into place. You should hear an audible click, indicating a proper connection.
5. To detach, press the release button (if present on your vacuum or the attachment) and pull the cleaner head away from the vacuum.



Figure 4.1: Front view of the Dyson Mini Motorized Cleaner Head, showing the main body and connection point.



Figure 4.2: Angled view of the cleaner head, illustrating its compact design.



Figure 4.3: Side view showing the attachment mechanism and the Dyson logo.

5. Operating Instructions

Once the Mini Motorized Cleaner Head is securely attached, you can begin cleaning:

1. Turn on your Dyson vacuum cleaner. The motorized brush bar within the cleaner head will begin to rotate.
2. Move the cleaner head slowly over the surface you wish to clean. For carpets, use a back-and-forth motion to allow the brushes to agitate and lift dirt effectively.
3. For hard floors, the carbon fiber filaments help to pick up fine dust and debris without scratching the surface.
4. The compact size of this tool makes it ideal for cleaning stairs, upholstery, pet beds, and car interiors.
5. Avoid applying excessive pressure, as the motorized action is designed to do the work.

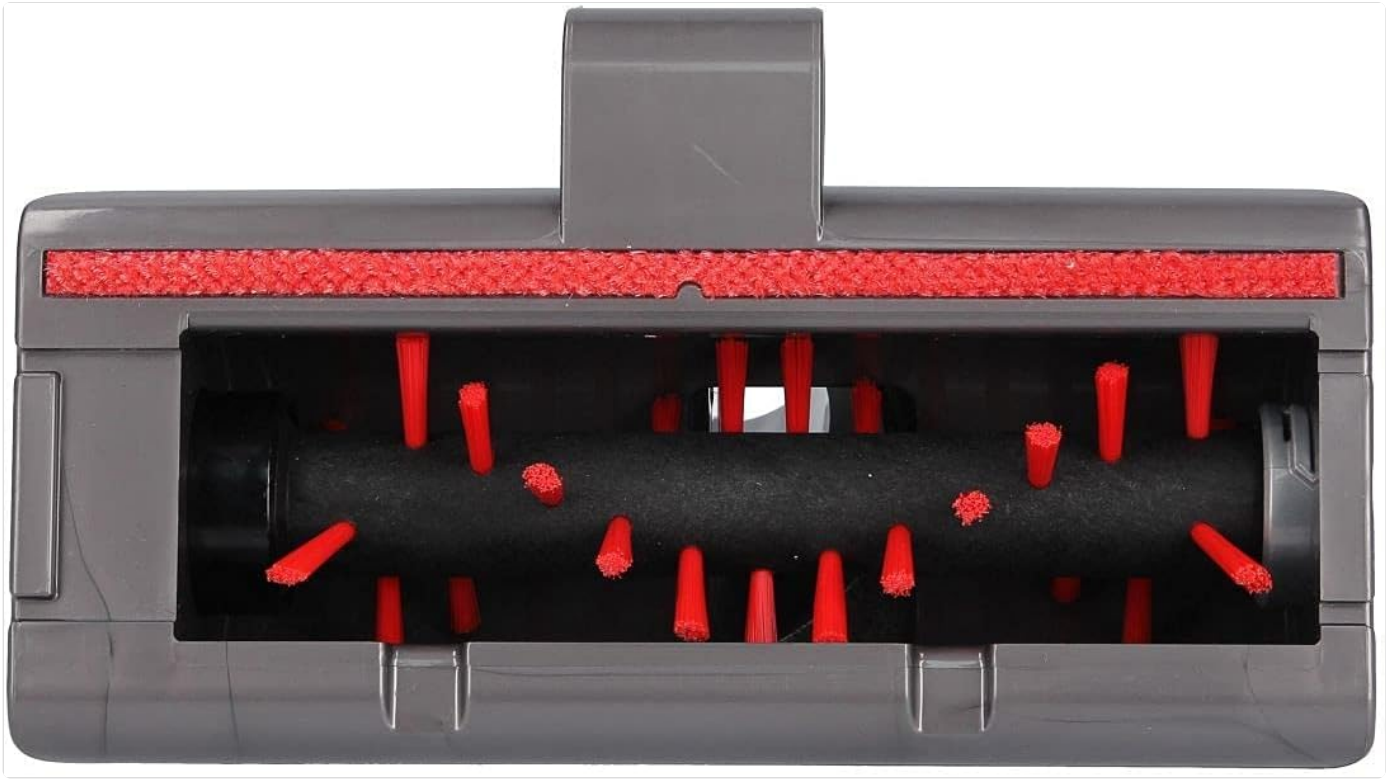


Figure 5.1: Underside view of the cleaner head, revealing the red and black brush bar with carbon fiber filaments.

Important Notes:

- Do not use the cleaner head on wet surfaces or to pick up liquids.
- Ensure the brush bar is free from obstructions before and during operation.
- If the brush bar stops rotating, turn off the vacuum and check for blockages (refer to Troubleshooting section).

6. Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your Mini Motorized Cleaner Head.

Cleaning the Brush Bar:

1. Turn off and detach the cleaner head from your vacuum.
2. Using a coin or a flat-head screwdriver, unlock the end cap of the brush bar (usually indicated by a lock/unlock symbol).
3. Slide the brush bar out of the cleaner head.
4. Remove any tangled hair, threads, or debris from the brush bar using scissors or a brush. Be careful not to cut the bristles.
5. Clean the inside of the cleaner head where the brush bar sits, removing any accumulated dust or debris.
6. Once clean, reinsert the brush bar, ensuring it clicks back into place, and lock the end cap.

General Care:

- Wipe the exterior of the cleaner head with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Do not immerse the cleaner head in water or any other liquid.
- Store the cleaner head in a dry place, away from direct sunlight and extreme temperatures.

7. Troubleshooting

If you encounter issues with your Mini Motorized Cleaner Head, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Brush bar not rotating.	• Obstruction in the brush bar. • Cleaner head not properly attached. • Vacuum cleaner not powered on.	• Turn off vacuum, detach cleaner head, and clear any blockages from the brush bar (see Maintenance). • Ensure the cleaner head is securely clicked into place. • Check that the vacuum cleaner is turned on and has sufficient battery charge (for cordless models).
Reduced suction through the cleaner head.	• Blockage in the cleaner head or vacuum hose. • Vacuum cleaner filter needs cleaning/replacement.	• Check the cleaner head for blockages. Also, check the vacuum's wand and hose for obstructions. • Refer to your Dyson vacuum cleaner's manual for filter maintenance instructions.
Unusual noise from the cleaner head.	• Debris caught in the brush bar mechanism. • Worn components.	• Turn off vacuum and inspect the brush bar and internal components for any foreign objects. • If the noise persists after clearing debris, contact Dyson customer support.

8. Product Specifications

Attribute	Detail
Brand	Dyson
Model Number	DYS962748-01
Color	Black
Power	20 Watts
Voltage	16.2 Volts
Auto-off Function	No
Battery Life (Vacuum)	15 minutes (refer to vacuum model for specifics)
Features	Portable
Item Weight	300 Grams
Spare Parts Availability	Information unavailable on spare parts
Surface Recommendation	Carpet
Power Source	Battery Powered (via vacuum)
Included Components	Brush
Cordless?	No (attachment, relies on cordless vacuum)



Figure 8.1: General diagram showing how vacuum attachments connect, illustrating conical connections. This is a general example and not specific to the Dyson cleaner head's direct connection.

9. Warranty and Support

Information regarding specific warranty terms for this Dyson Mini Motorized Cleaner Head is typically provided with the original purchase or can be found on the official Dyson website. As this is a genuine Dyson part, it is subject to Dyson's standard accessory warranty policies.

For technical support, warranty claims, or to purchase additional genuine Dyson parts, please contact Dyson Customer Service directly or visit their official website:

- **Dyson Official Website:** www.dyson.com
- **Customer Service:** Refer to the contact information provided in your original Dyson vacuum cleaner manual or on the Dyson website for your region.

© 2024 Dyson. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question