Englacha USA 01012016-a

Englacha 2-in-1 Cozy X Rider Stroller Attachment User Manual

Model: 01012016-a

Overview What's in the Box Setup & Assembly Operation Maintenance Troubleshooting Specifications Support

1. Product Overview

The Englacha 2-in-1 Cozy X Rider is a versatile stroller attachment designed for children from 15 months up to a maximum weight of 55 lbs (25 kg). It functions as both a saddle seat and a standing platform, providing a comfortable and safe riding option for an older child alongside a stroller. The universal connectors are designed to attach to the rear tube or frame of most strollers, with adjustable arms to optimize walking space and platform leveling.

This product features a durable construction with a non-slip surface on the standing platform and a comfortable backrest for the saddle seat. Safety is ensured with a 3-point safety belt. The adjustable connector arms allow for customization to fit various stroller types, including those with umbrella or concealed brake designs.



Image 1.1: The Englacha 2-in-1 Cozy X Rider, showcasing its design as a child rider stroller attachment.

2. What's in the Box

Upon opening the package, ensure all components are present and undamaged. The box should contain the following items:

- Cozy X Rider main unit (HDPE Board with EVA Wheels)
- Adjustable Arms (3-section extendable)
- Connectors (for attaching to stroller frame)
- HDPE Seat with Adjustable Handlebar and Fasten Knob
- Storage Strap



Image 2.1: An exploded diagram illustrating all the individual components included with the Cozy X Rider, such as the HDPE board, EVA wheels, connectors, extension arms, non-slip surface, cap, knob, HDPE seat, adjustable handlebar, fasten knob, and storage strap.

3. Setup and Assembly

Follow these steps to properly assemble and attach the Cozy X Rider to your stroller:

1. **Attach the Adjustable Arms:** Securely connect the adjustable arms to the main HDPE board of the Cozy X Rider. Ensure all connections are firm.
2. **Connect to Stroller Frame:** The connectors are designed for universal fit. Attach them to the rear tube or frame of your stroller. The maximum size limit for the stroller tube/frame is 2.75 x 1.5 inches.
3. **Adjust Arm Length:** Extend or retract the 3-section adjustable arms to achieve the desired distance from the stroller. This increases walking space for the parent and ensures comfort for the child.
4. **Level the Platform:** It is crucial to adjust the platform so it is level with the ground. Use the knobs to tighten the adjustment securely. This prevents instability and backward tipping. Refer to Image 3.1 for visual guidance.
5. **Install the Seat (Optional):** If using the saddle seat, attach the HDPE seat with its adjustable handlebar to the main board. Secure it using the fasten knob.
6. **Safety Check:** Before first use, double-check all connections and adjustments to ensure they are tight and secure.



Image 3.1: The Cozy X Rider with the saddle seat attached, connected to a stroller. This image demonstrates the product in its seated configuration.



Image 3.2: Another view of the Cozy X Rider with the saddle seat, attached to a different model of stroller, highlighting its universal fit.



Image 3.3: A close-up of the warning label on the platform, emphasizing the importance of adjusting the platform level and tightening the knob securely to prevent instability or tipping.

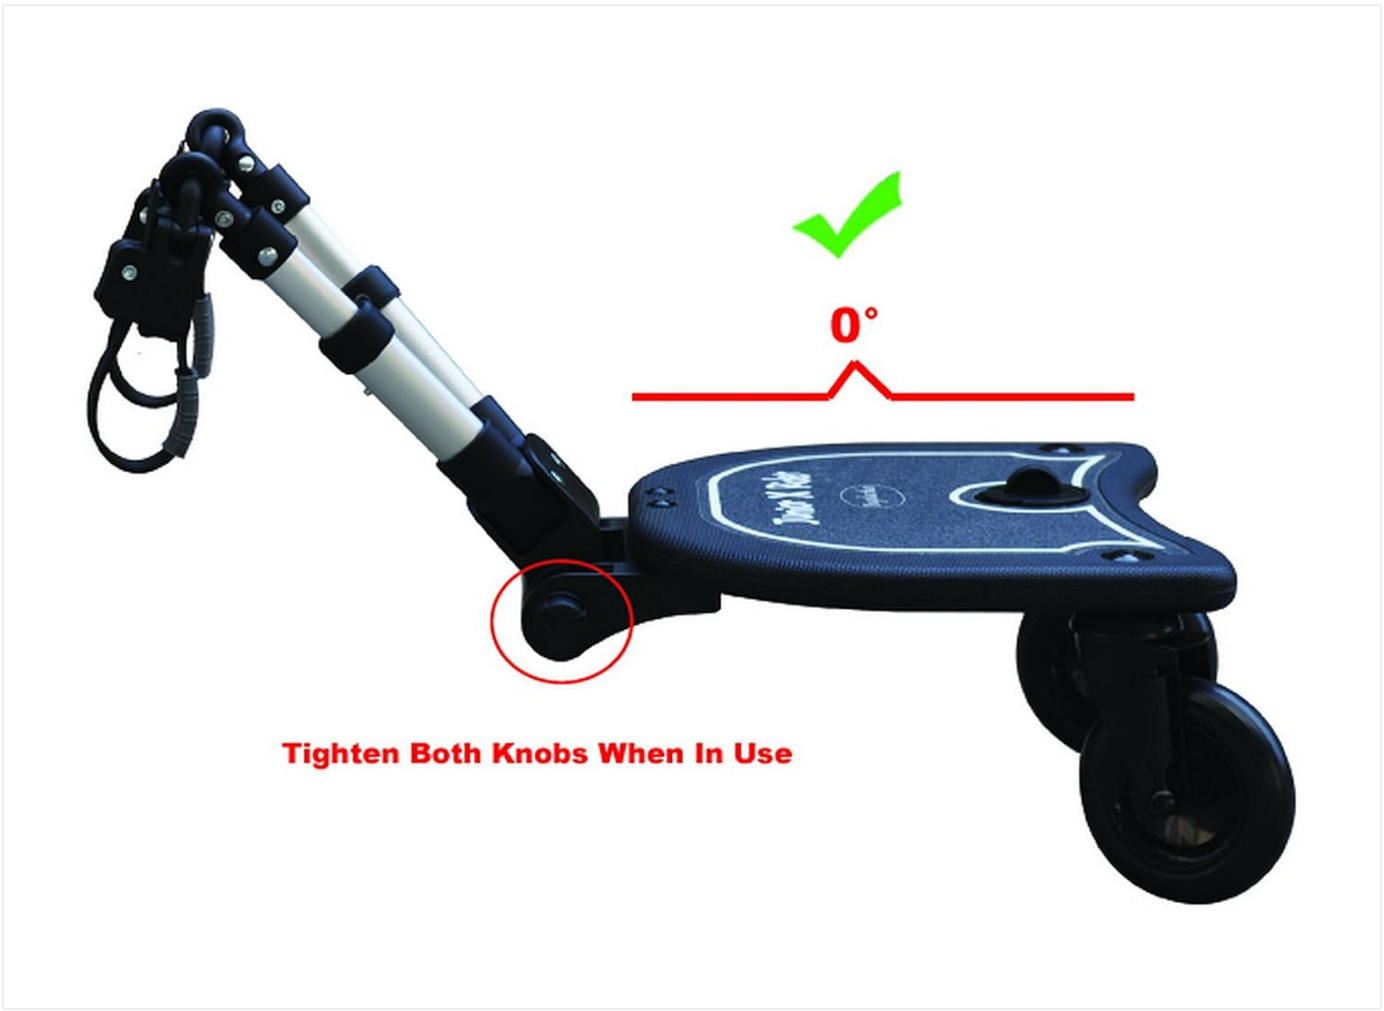


Image 3.4: A diagram illustrating the correct 0-degree angle for the platform and indicating the knobs that must be tightened for secure use.

4. Operating Instructions

4.1. Using as a Saddle Seat

- Ensure the HDPE seat is securely attached and the fasten knob is tightened.
- Place the child (15 months to 55 lbs) onto the seat.
- Fasten the 3-point safety belt securely around the child.
- Adjust the handlebar for the child's comfort and grip.

4.2. Using as a Standing Platform

- If the seat is not desired, it can be removed.
- Ensure the non-slip surface of the platform is clean and clear.
- Instruct the child to stand firmly on the platform, holding onto the stroller's handlebar for stability.

4.3. Storage When Not in Use

When the Cozy X Rider is not in use but remains attached to the stroller, it can be lifted and secured to the back of the stroller using the provided storage strap. This keeps the unit off the ground and out of the way of your legs while pushing the stroller.



Image 4.1: The Cozy X Rider in its stored position, lifted and secured to the back of the stroller using the storage strap, demonstrating how to keep it out of the way when not in use.

4.4. Important Considerations

- Always ensure the platform is level and all connections are tight before placing a child on the rider.

- When moving the stroller backward, exercise caution and hold onto the Cozy X Rider to maintain stability.
- Regularly check the condition of the wheels and connections for wear and tear.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the practical use and features of the Englacha 2-in-1 Cozy X Rider, including its attachment to a stroller and how it accommodates a child. It provides a visual guide to its functionality and benefits for families.

5. Maintenance

To ensure the longevity and safe operation of your Englacha 2-in-1 Cozy X Rider, regular maintenance is recommended:

- **Cleaning:** Wipe down the plastic and metal components with a damp cloth and mild soap. Avoid harsh chemicals. The fabric seat can be spot cleaned.
- **Wheel Inspection:** Periodically check the EVA wheels for debris, wear, or damage. Ensure they spin freely.
- **Connection Points:** Inspect all connector points, adjustable arms, and knobs for tightness and signs of wear. Tighten any loose fasteners.
- **Storage:** Store the unit in a dry place away from direct sunlight when not in use for extended periods.

6. Troubleshooting

If you encounter issues with your Cozy X Rider, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Instability or Tipping	Platform not level; connectors not tightened sufficiently.	Ensure the platform is adjusted to be level with the ground (0 degrees). Fully and firmly tighten all connector knobs as illustrated in the setup section.
Difficulty Moving Backward	Design characteristic; wheels may catch.	When moving the stroller backward, hold onto the Cozy X Rider seat or platform to guide it and prevent snagging.
Limited Walking Space	Adjustable arms are too short.	Extend the 3-section adjustable arms further from the stroller frame to increase the distance and walking space.
Connectors Don't Fit Stroller	Stroller frame dimensions exceed limits.	Verify your stroller's rear tube or frame dimensions. The maximum compatible size is 2.75 x 1.5 inches.

7. Product Specifications

Feature	Detail
Model Number	01012016-a
Brand	Englacha USA
Item Weight	9.5 Pounds (4.3 kg)
Maximum Weight Recommendation	55 lbs (25 kg)

Feature	Detail
Age Range Description	Baby (15 months and up)
Item Dimensions (L x W x H)	21.65"L x 13.39"W x 22.44"H (55cm L x 34cm W x 57cm H)
Folded Size	22.5" x 13.5" x 30" (57cm x 34cm x 76cm)
Number of Wheels	2 (EVA Wheels)
Harness Type	3 Point Safety Belt
Material Type	Plastic (HDPE Board), Metal (Frame), Fabric (Seat)
Additional Features	Convertible (Seat/Standing Platform), Adjustable Arms
Stroller Frame Compatibility	Max. 2.75" x 1.5" (7cm x 3.8cm)
Certification	JPMA (Juvenile Products Manufacturers Association)



Image 7.1: A diagram showing the key dimensions of the Englacha Cozy X Rider, including its height and length, which are approximately 58cm (22.8 inches) for both.

8. Warranty and Support

For any questions, defective issues, or support inquiries regarding your Englacha 2-in-1 Cozy X Rider, please contact the manufacturer directly:

Manufacturer: Englacha USA Inc

Phone: 626-335-5961

Email: info@englachausa.com

Englacha is committed to customer satisfaction and will assist with any problems you may encounter.

© 2023 Englacha USA Inc. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question