Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FRANKE 110.0380.758

Franke Imagine Pro FIMP 906 BK Wall-Mounted Hood User Manual

Model: 110.0380.758 | Brand: FRANKE

1. Introduction

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your Franke Imagine Pro FIMP 906 BK wall-mounted cooker hood. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1: Franke Imagine Pro FIMP 906 BK Wall-Mounted Cooker Hood. This image shows the sleek black and stainless steel design of the cooker hood, designed for wall mounting above a cooking surface.

2. Safety Information

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the electrical installation complies with local regulations.
- Disconnect the appliance from the power supply before any cleaning or maintenance.
- Do not flambé under the cooker hood.

- Ensure adequate ventilation in the room when the cooker hood is used simultaneously with gas or other fuel-burning appliances.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Regularly clean grease filters to prevent fire hazards.

3. Setup and Installation

Proper installation is crucial for the optimal performance and safety of your cooker hood. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

1. Carefully remove the cooker hood from its packaging.
2. Check for any transport damage. Do not install a damaged appliance.
3. Ensure all components listed in the packing list are present.

3.2 Mounting

The Franke Imagine Pro FIMP 906 BK is designed for wall mounting. Refer to the dimension diagram for precise measurements and recommended mounting heights above the cooking surface.

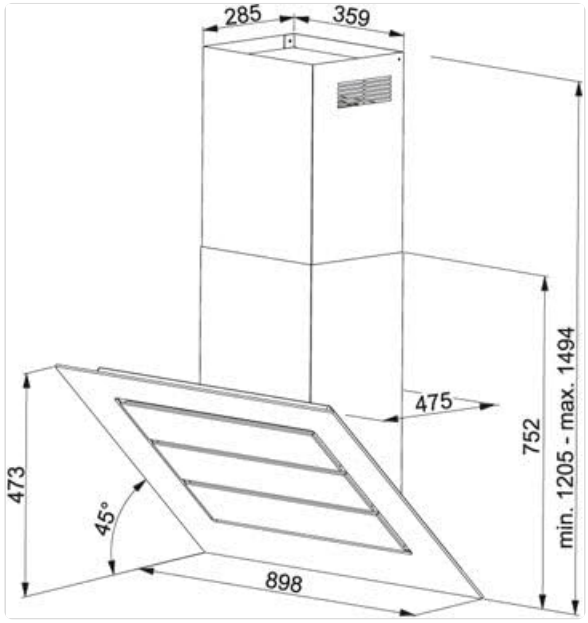


Figure 2: Technical drawing showing the dimensions of the Franke Imagine Pro FIMP 906 BK cooker hood. Key measurements include width (898mm), height (min. 1205mm - max. 1494mm), and depth, along with mounting points and ducting outlet.

1. Mark the drilling points on the wall according to the provided template or dimensions.
2. Drill holes and insert wall plugs suitable for your wall type.
3. Secure the mounting bracket to the wall.
4. Carefully lift and attach the cooker hood to the mounting bracket.

3.3 Electrical Connection

Connect the cooker hood to a suitable electrical outlet. Ensure the voltage and frequency match the appliance's requirements (refer to specifications). A dedicated circuit is recommended.

3.4 Ducting (Abluft/Umluft)

This model supports both extraction (Abluft) and recirculation (Umluft) modes. Choose the appropriate setup for your kitchen.

- **Extraction Mode:** Connect the exhaust outlet to an external ducting system. Ensure the ducting is of adequate diameter and as short and straight as possible for optimal performance.
- **Recirculation Mode:** Install activated charcoal filters (not always included, may need to be purchased separately) to purify the air before it is returned to the kitchen.

4. Operating Instructions

Your Franke Imagine Pro FIMP 906 BK cooker hood features intuitive controls for fan speed and lighting.

4.1 Control Panel

The control panel is typically located on the front of the hood. It usually consists of touch buttons or push buttons for various functions.

4.2 Fan Speed Settings

Select the desired fan speed based on the intensity of cooking fumes and odors.

1. **Speed 1 (Low):** For light cooking, simmering.
2. **Speed 2 (Medium):** For general cooking, frying.
3. **Speed 3 (High):** For intense cooking, grilling, or when producing a lot of steam/smoke.
4. **Intensive Speed (if available):** For very strong odors or smoke, typically operates for a limited time before reverting to a lower speed.

4.3 Lighting

Press the light button to turn the integrated lighting on or off, illuminating your cooking area.

5. Maintenance and Cleaning

Regular maintenance ensures the longevity and efficiency of your cooker hood.

5.1 Cleaning the Exterior

- Use a soft cloth dampened with mild detergent and warm water.
- Do not use abrasive cleaners, corrosive detergents, or harsh chemicals.
- For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain.

5.2 Cleaning Grease Filters

The metal grease filters should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain optimal performance and prevent fire hazards.

1. Switch off and unplug the cooker hood.
2. Open the filter cover or release the latches to remove the metal grease filters.
3. Wash the filters by hand in hot water with a degreasing detergent, or in a dishwasher on a low-temperature cycle.
4. Allow filters to dry completely before reinserting them.

5.3 Replacing Activated Charcoal Filters (Recirculation Mode Only)

If your hood operates in recirculation mode, the activated charcoal filters cannot be washed and must be replaced every 3-6 months, depending on usage.

1. Switch off and unplug the cooker hood.
2. Remove the metal grease filters.
3. Locate and remove the old charcoal filters (they typically twist or clip into place).
4. Install new charcoal filters, ensuring they are securely fitted.
5. Reinstall the metal grease filters.

6. Troubleshooting

Before contacting customer service, please consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply.	Check if the hood is plugged in and the circuit breaker is not tripped.
Low suction power.	Clogged grease filters or saturated charcoal filters.	Clean metal grease filters. Replace activated charcoal filters (if in recirculation mode).
Excessive noise.	Loose components or obstruction in the fan.	Check for loose screws or foreign objects. Ensure ducting is properly installed and not restricted.
Lights not working.	Faulty bulb or electrical connection.	Replace the bulb. Check electrical connections.

7. Specifications

Technical specifications for the Franke Imagine Pro FIMP 906 BK cooker hood.

Feature	Detail
Brand	FRANKE
Model Number	110.0380.758
Mounting Type	Wall-mounted
Energy Efficiency Class	A+
Energy Efficiency Scale	A+ to F
Airborne Acoustical Noise Emission	70 dB
ASIN	B01ALWN62A

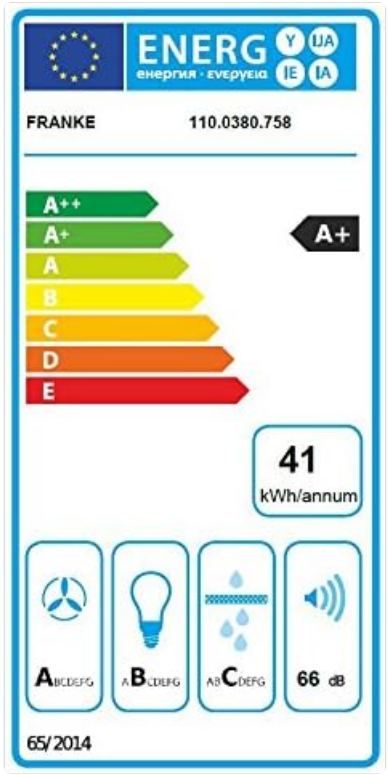


Figure 3: EU Energy Efficiency Label for the Franke Imagine Pro FIMP 906 BK cooker hood, indicating an A+ energy class, 41 kWh/annum energy consumption, and 66 dB noise level.

8. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official FRANKE website. For technical support, spare parts, or service inquiries, please contact FRANKE customer service, providing your model number (110.0380.758) and serial number (if applicable).

You can find contact details for FRANKE customer support on their official website or in the product packaging.

© 2024 FRANKE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01ALWN62A

More documents and user manuals: **https://manuals.plus/**