Dyson 216041-01

Dyson Ball Animal Upright Vacuum - Corded Instruction Manual

Model: 216041-01

1. Introduction and Overview

The Dyson Ball Animal Upright Vacuum is engineered for powerful cleaning across various floor types. It features advanced Radial Root Cyclone technology for strong suction and a self-adjusting cleaner head that seals in suction on both carpets and hard floors. Designed with pet owners and allergy sufferers in mind, its whole-machine filtration system ensures allergens are trapped within the machine, not expelled back into the home.

Key Features:

- **Radial Root Cyclone Technology:** Captures more dirt and microscopic dust.
- **Self-Adjusting Cleaner Head:** Seals in suction across carpets and hard floors.
- **Dyson Ball Technology:** Rides on a Ball and steers easily into difficult places.
- **Whole-Machine Filtration:** Ensures that allergens are trapped inside the machine, not expelled back into the home.
- **Extra Tools for Pet Owners:** Includes the Tangle-free Turbine tool, Multi-angle tool, Stair tool, and Combination tool.





Figure 1: Front view of the Dyson Ball Animal Upright Vacuum.

2. Setup and Assembly

Your Dyson Ball Animal Upright Vacuum requires minimal assembly. Please follow the instructions provided in the quick start guide included in the packaging for detailed steps. Ensure all components click securely into place before use.



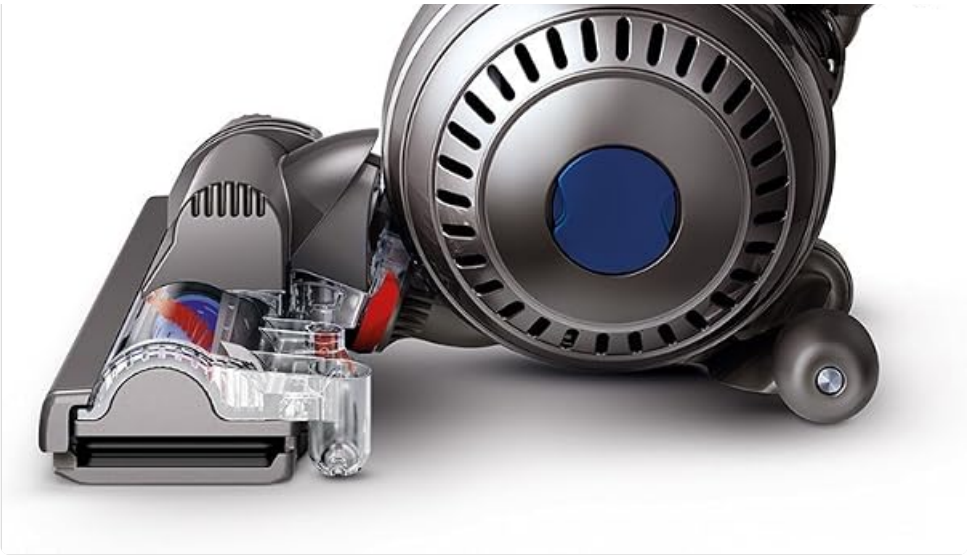


Figure 2: Side view of the vacuum, showing its compact design.

3. Operating Instructions

3.1 General Operation

Plug the vacuum into a power outlet. The self-adjusting cleaner head automatically adapts to different floor types, ensuring optimal suction. The Ball technology allows for easy steering around furniture and obstacles with a simple twist of the wrist.

3.2 Using Attachments

The vacuum comes with several tools for specialized cleaning tasks. To use an attachment, simply detach the wand from the main unit by pressing the release button. Attach the desired tool to the end of the wand until it clicks into place.

- **Tangle-free Turbine Tool:** Ideal for removing pet hair from upholstery and carpets without tangling.
- **Multi-angle Tool:** Adjusts to various angles for cleaning hard-to-reach areas, such as tops of cabinets or ceiling corners.
- **Stair Tool:** Designed for effective cleaning of stairs and other small, carpeted areas.
- **Combination Tool:** A versatile tool that combines a crevice tool for tight spaces and a dusting brush for delicate surfaces.



Figure 3: Demonstrating the use of the hose attachment for elevated cleaning.

4. Maintenance

4.1 Emptying the Dustbin

To maintain optimal suction, empty the dustbin regularly, especially when debris reaches the 'MAX' fill line. To empty, press the red button located on the dustbin handle to release it from the main unit. Hold the dustbin over a trash receptacle and press the red release button again to open the bottom flap and release the debris. Close the flap securely before reattaching the dustbin to the vacuum.



Figure 4: Proper method for emptying the vacuum's dustbin.

4.2 Cleaning the Filter

The Dyson Ball Animal Upright Vacuum features a washable filter designed to last the lifetime of the machine. For best performance, wash the filter with cold water at least once a month. Ensure the filter is completely dry (allow at least 24 hours) before reinserting it into the vacuum. Do not use detergents or place in a dishwasher.

4.3 Cleaning the Brush Bar

Periodically check the brush bar for any tangled hair or debris that may reduce performance. Refer to your detailed user manual for instructions on how to safely remove and clean the brush bar.

5. Troubleshooting

If your Dyson Ball Animal Upright Vacuum is not performing as expected, please check the following common issues:

- **No Suction:** Check if the dustbin is full or if the filter needs cleaning. Ensure there are no blockages in the

hose or cleaner head.

- **Brush Bar Not Rotating:** Verify that the brush bar is not switched off (for hard floors) or if there is a blockage preventing its rotation.
- **Unusual Noises:** This may indicate a blockage or an issue with the brush bar. Turn off and unplug the vacuum immediately and inspect for obstructions.

For more complex issues, please refer to the full user manual or contact Dyson customer support.

6. Specifications

Feature	Specification
Brand	Dyson
Model Name	Dyson Ball Animal Upright Vacuum
Item Model Number	216041-01
Special Feature	Bagless
Filter Type	Disk
Included Components	Tangle-free Turbine tool, Multi-angle tool, Stair tool, Combination tool
Is Cordless?	No
Capacity	0.22 Gallons
Wattage	1150 watts
Recommended Uses	Hard Floor, Carpet, Home
Form Factor	Upright
Color	Iron/Purple
Product Dimensions	15.4"L x 13.4"W x 42.4"H
Noise Level	78 dB
Item Weight	17 pounds
UPC	885609005027

7. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official Dyson website. You can also find additional support resources, FAQs, and contact information there.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question