Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Wet Brush B830W-PR

Wet Brush Original Detangler Hair Brush User Manual

Model: B830W-PR

Introduction

Thank you for choosing the Wet Brush Original Detangler Hair Brush. This manual provides essential information for the proper use, care, and maintenance of your new brush. Please read it thoroughly before first use and retain it for future reference.

Setup

The Wet Brush Original Detangler requires no assembly and is ready for immediate use upon removal from its packaging.

1. Carefully remove the brush from its retail packaging.
2. Inspect the brush for any signs of damage. If the product appears damaged, do not use it and contact customer support for assistance.





Image: The Wet Brush Original Detangler, purple in color, displayed in its clear retail packaging.

Operating Instructions

The Wet Brush Original Detangler is designed to effortlessly glide through tangles on both wet and dry hair, minimizing pain and breakage.

General Use

- This brush is suitable for all hair types, including fine, thick, curly, straight, long, and short hair.
- It can be used on both wet and dry hair.

Detangling Process

1. Begin brushing at the ends of your hair.
2. Gently work your way upwards towards the roots, using smooth, controlled strokes.
3. The exclusive IntelliFlex bristles will flex and separate knots without pulling, tugging, or causing discomfort.

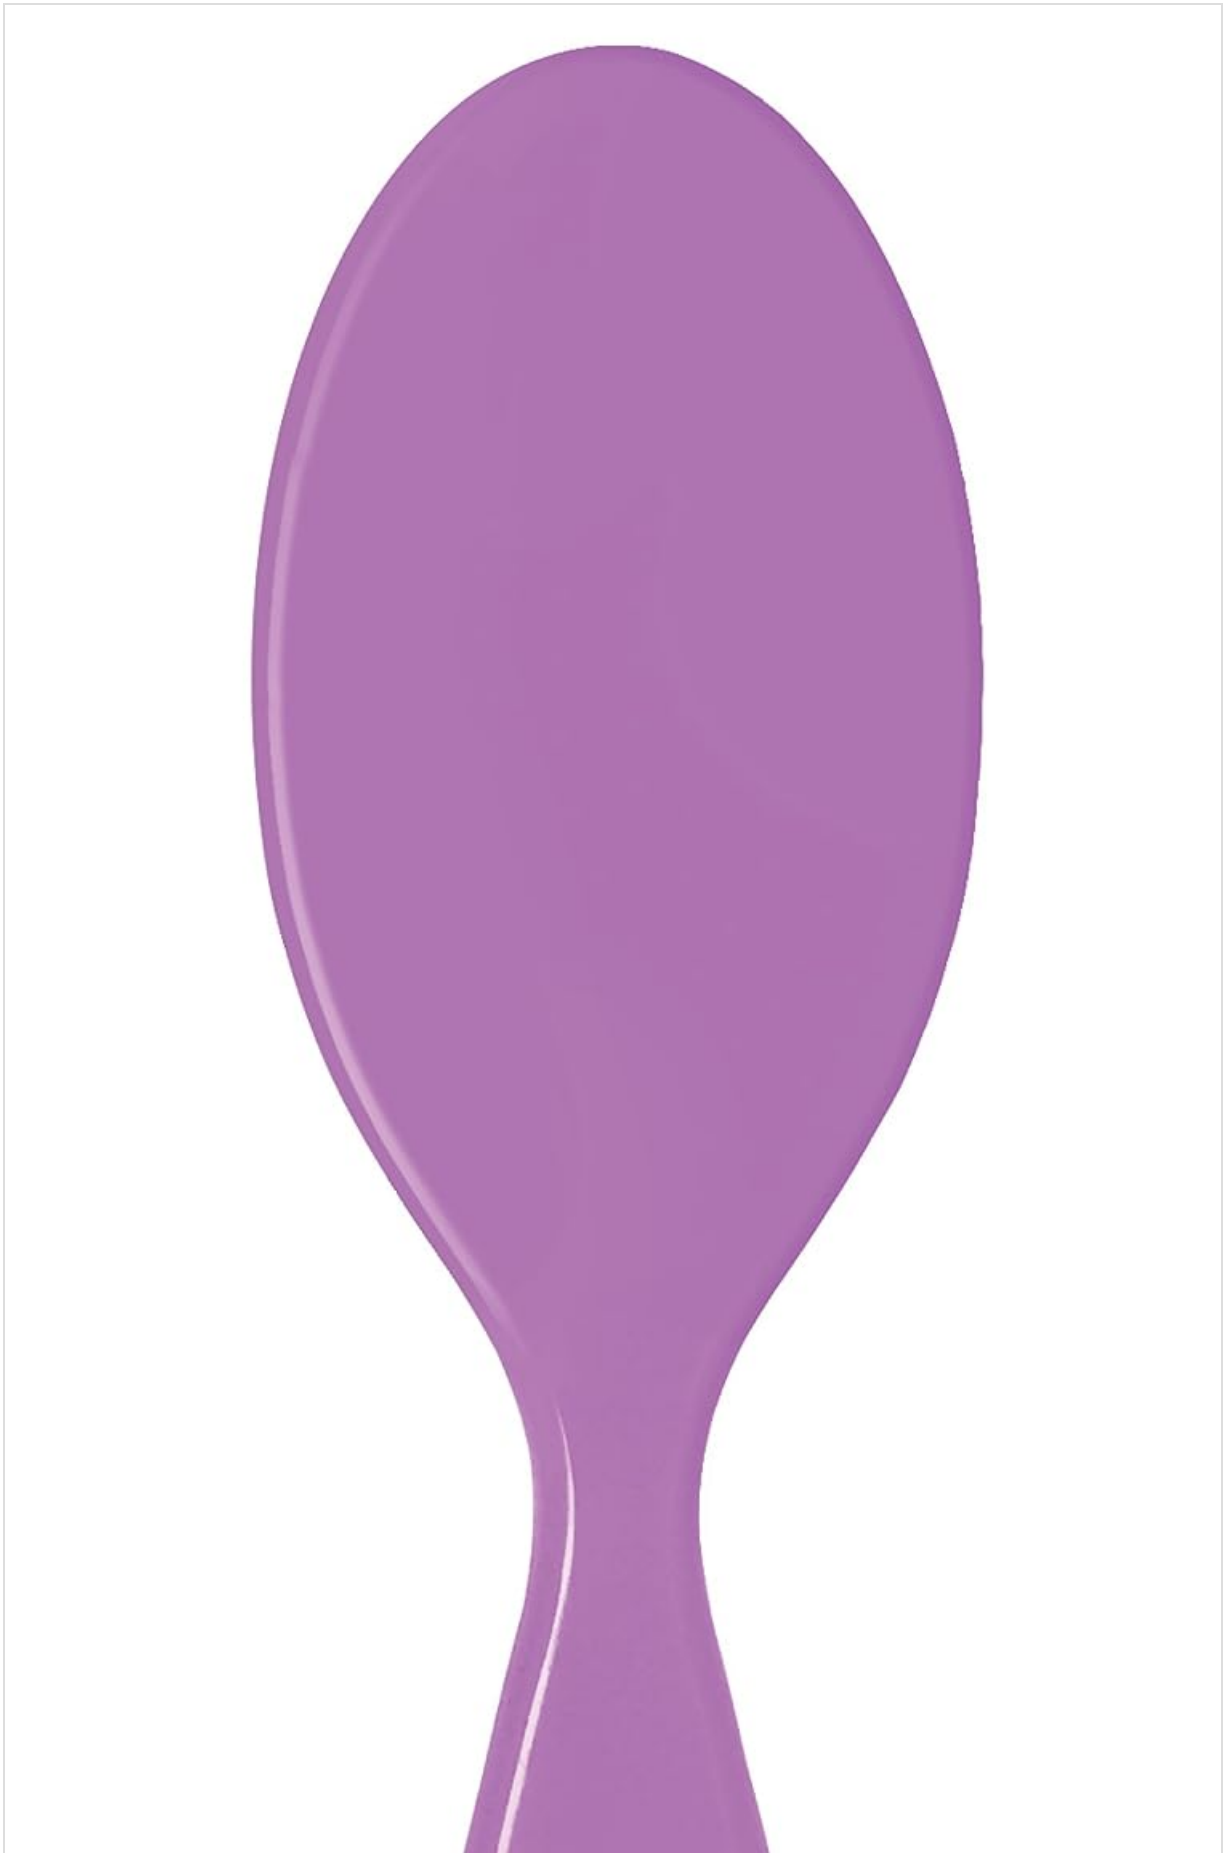




Image: Side profile of the Wet Brush Original Detangler, highlighting the flexible bristles.

Maintenance and Care

Proper care will extend the life and effectiveness of your Wet Brush.

Cleaning the Brush

1. Regularly remove any accumulated hair from the bristles. This can be done by hand or with a comb.
2. To deep clean, gently wash the bristles and the base of the brush with mild soap and lukewarm water.
3. Rinse thoroughly to remove all soap residue.
4. Allow the brush to air dry completely. For best results, place the brush with the bristles facing downwards to allow water to drain.

Storage

- Store the brush in a clean, dry environment.
- Avoid prolonged exposure to direct sunlight or extreme temperatures, as this may affect the material integrity.

Important Notes

- Do not use harsh chemicals, abrasive cleaners, or excessive heat on the brush.
- Avoid dropping the brush on hard surfaces, which could damage the bristles or handle.



Image: Angled view of the Wet Brush Original Detangler, illustrating its ergonomic design.

Troubleshooting

If you encounter any issues with your Wet Brush, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Brush not effectively detangling.	Ensure you are brushing from the ends of the hair upwards. Check for excessive hair buildup in the bristles and clean if necessary.
Bristles appear bent or damaged.	While IntelliFlex bristles are durable, excessive force or improper storage can cause damage. If bristles are severely bent, the brush's effectiveness may be reduced. Consider replacing the brush.
Hair pulling or snagging.	This brush is designed to minimize pulling. If this occurs, try using less force and ensure hair is not excessively tangled before brushing. For very tangled hair, use a detangling spray in conjunction with the brush.

Specifications

Feature	Detail
Model Number	B830W-PR
UPC	736658986624
Product Dimensions	10.56 x 4.25 x 1.5 inches
Item Weight	3.2 ounces (0.2 Pounds)
Brand	Wet Brush
Bristle Material	Silicone (IntelliFlex)

Feature	Detail
Handle Material	Plastic
Color	Purple
Hair Type Compatibility	All, Curly, Dry

Warranty Information

Specific warranty details for the Wet Brush Original Detangler Hair Brush are not provided in this manual. For comprehensive warranty information, please refer to the official Wet Brush website or the product packaging. Retain your proof of purchase for any warranty claims.

Customer Support

For further assistance, questions, or concerns regarding your Wet Brush Original Detangler Hair Brush, please visit the official Wet Brush website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official online presence.

© 2024 Wet Brush. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01DQ3C27Q

More documents and user manuals: **https://manuals.plus/**