Alesis Recital

Alesis Recital Digital Piano Keyboard Instruction Manual

Model: Recital | Brand: Alesis

Product Overview

The Alesis Recital is a full-featured digital piano designed for musicians of all levels, from beginners to advanced players. It offers a premium playing experience with its 88 semi-weighted keys and a rich sound palette, delivering ultra-realistic sound and a great playing experience.



Figure 1: Alesis Recital 88-Key Digital Piano Keyboard

Setup Guide

Unpacking and Initial Setup

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Recital Digital Piano
- Power Supply
- Safety Information
- User Guide

Assembling the Music Rest

Locate the music rest. Insert the two prongs of the music rest into the corresponding slots on the top panel of the Alesis Recital. Ensure it is securely seated.

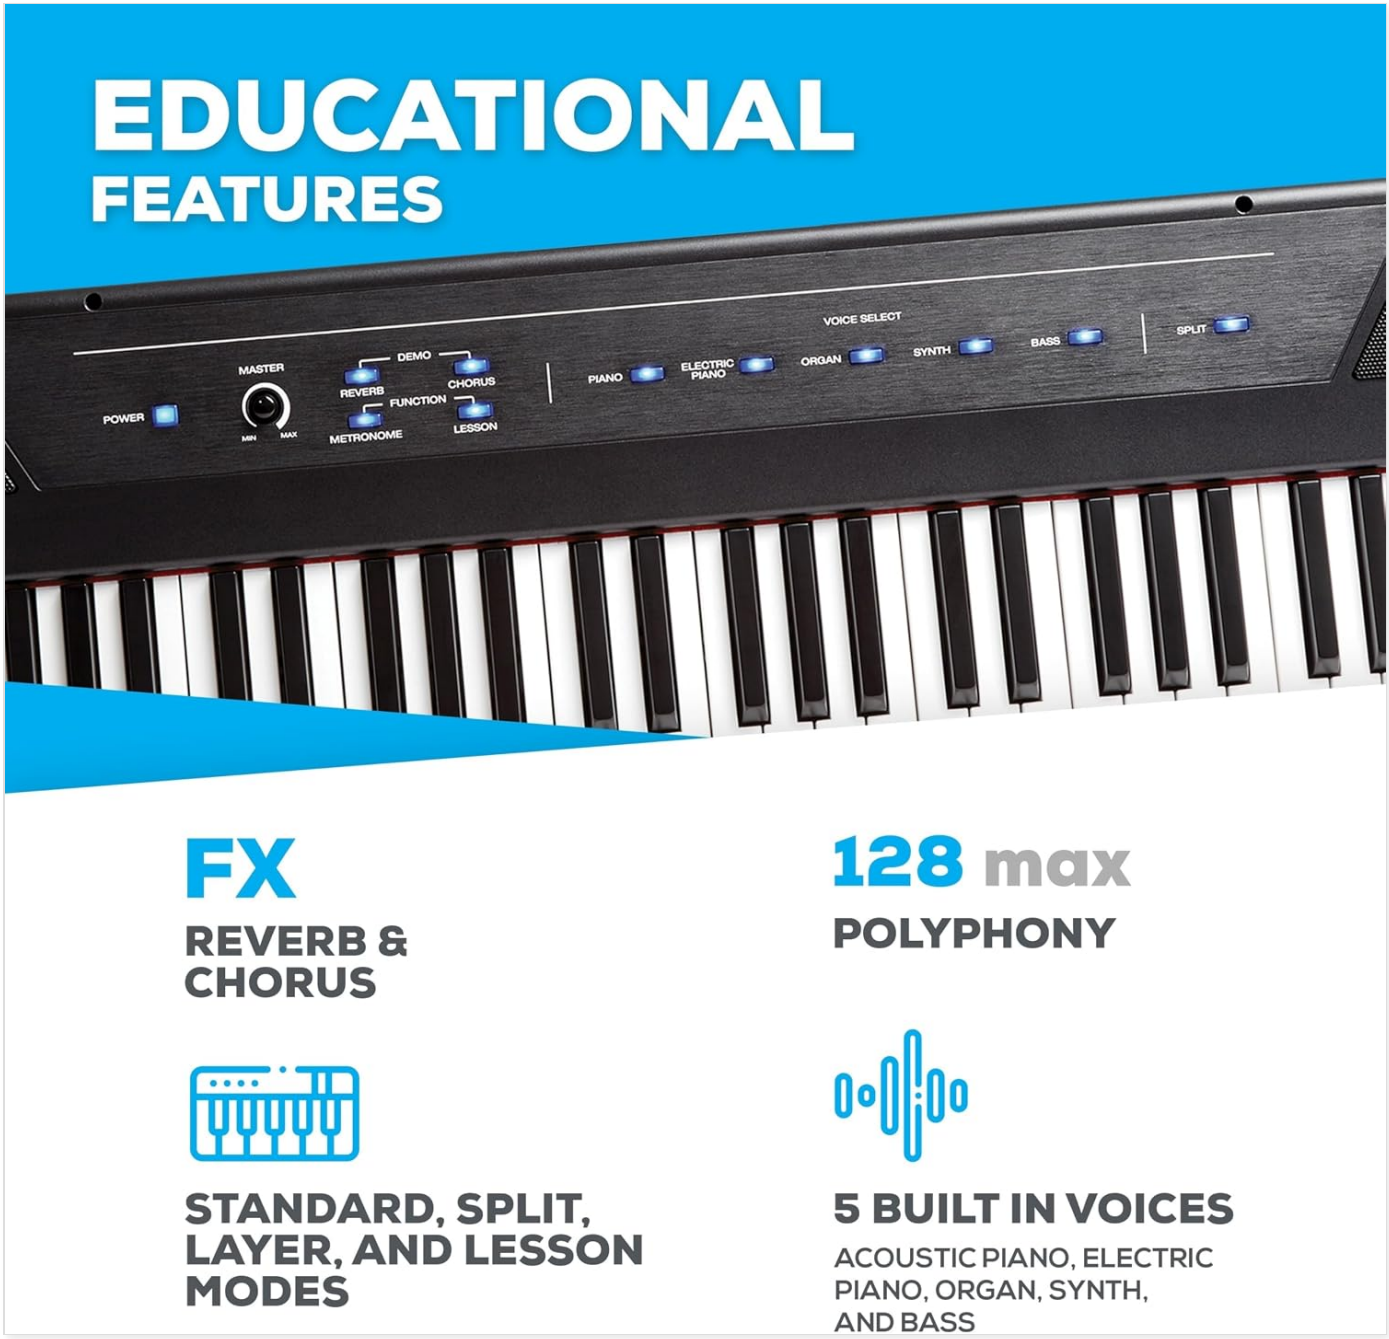


Figure 2: Control panel and music rest installation

Operating Instructions

Powering On/Off

To power on the Alesis Recital, connect the included power adapter to the DC 12V input on the rear panel and plug it into a power outlet. Alternatively, insert 6 D cell batteries (not included) into the battery compartment on the underside of the piano. Press the **POWER** button located on the top left of the control panel.

Adjusting Volume

Rotate the **MASTER** volume knob clockwise to increase the volume and counter-clockwise to decrease it.

Voice Selection

The Alesis Recital features 5 built-in voices: Acoustic Piano, Electric Piano, Organ, Synth, and Bass. Press the corresponding button under **VOICE SELECT** to choose a voice.

Built-in Effects (FX)

The piano includes Reverb and Chorus effects. Press the **REVERB** or **CHORUS** buttons to activate or deactivate these effects. Hold the **CHORUS** button to reset its settings.

Metronome Function

To activate the metronome, press the **METRONOME** button. Press it again to deactivate. The tempo can be adjusted via advanced functions.

Lesson Mode

Lesson Mode divides the 88 keys into two zones, allowing a student and teacher to play together. Activate by pressing the **LESSON** button.

Split and Layer Modes

The piano supports Split and Layer modes for enhanced creativity. Refer to the full user guide (PDF link provided in product data) for detailed instructions on these advanced functions.

CONNECTIVITY

Headphone Output

For private practice, connect standard 1/4" (6.35mm) stereo headphones to the **PHONES** output on the rear panel. The internal speakers will automatically mute when headphones are connected.

External Speaker/Amplifier Connection

Connect the stereo RCA outputs (**LINE OUT R/L (MONO)**) on the rear panel to an external amplifier or powered speakers for louder sound projection.

USB Connectivity

The **USB** Type B port allows connection to a computer for MIDI functionality, enabling use with music software (Windows, macOS compatible).

Sustain Pedal Input

A 1/4" sustain pedal input (**SUSTAIN**) is available for connecting an optional sustain pedal (not included) to enhance your playing experience.

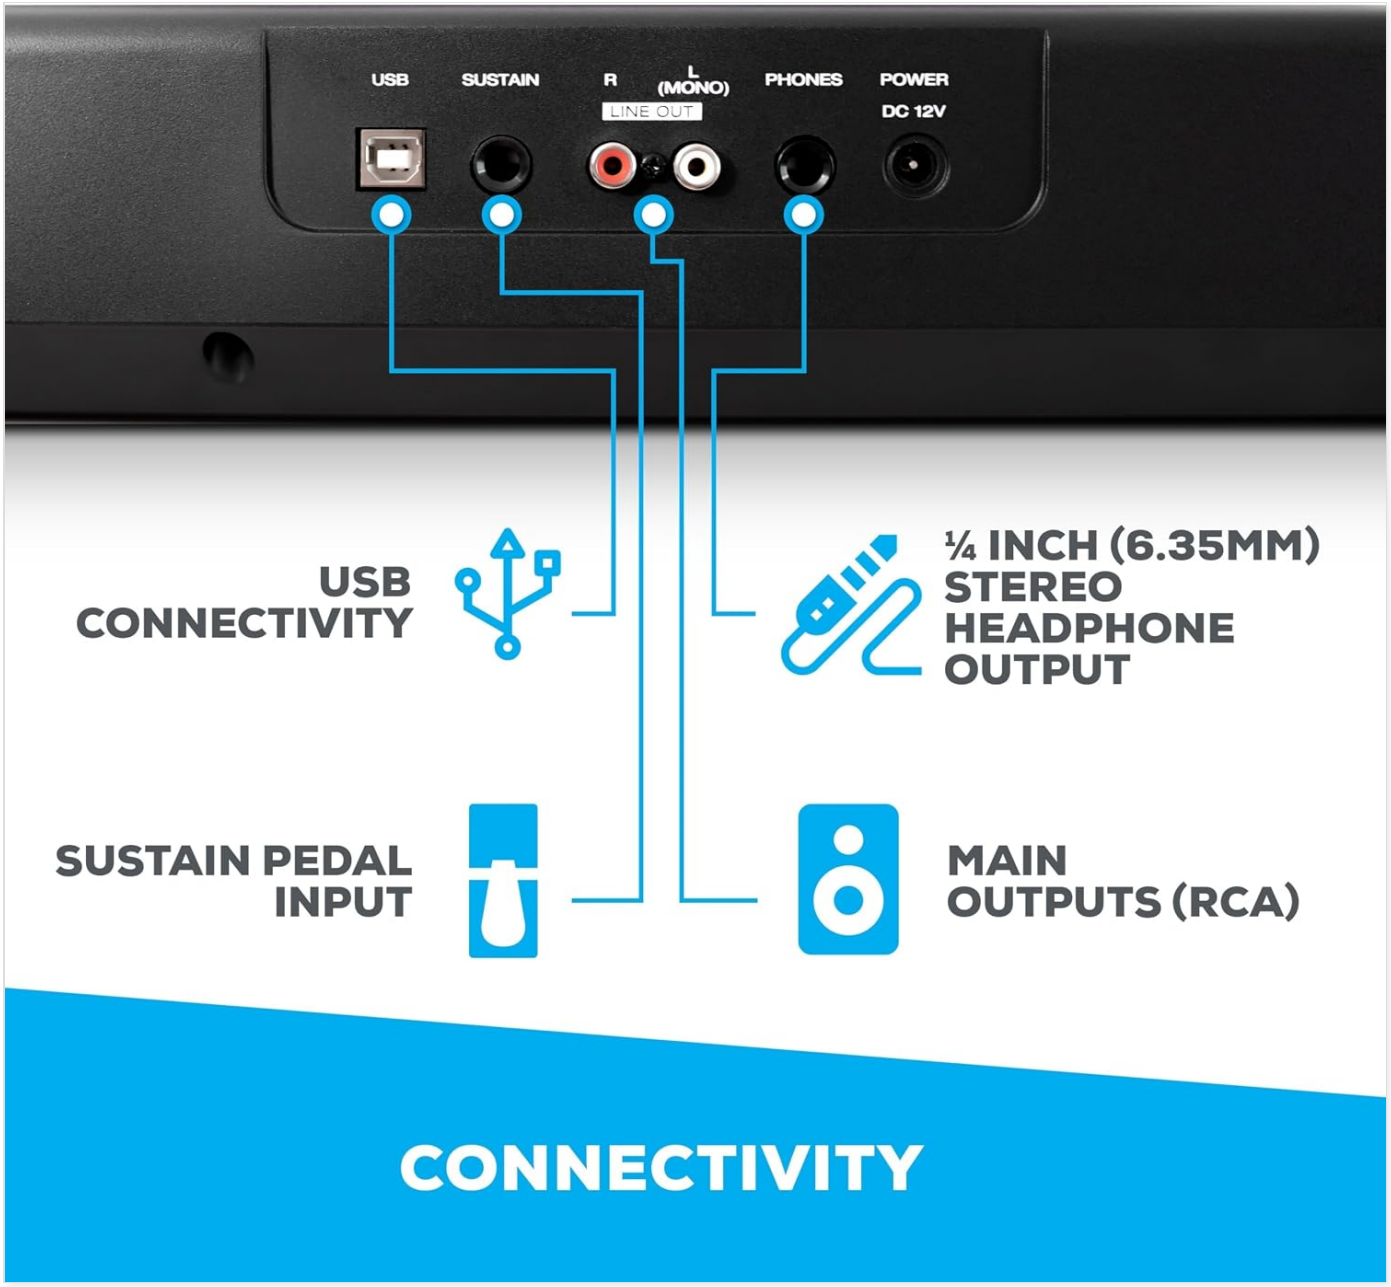


Figure 3: Rear panel connections

Power Options

The Alesis Recital can be powered either by the included power adapter or by 6 D cell batteries (not included). This flexibility allows for both home use and portable performance.

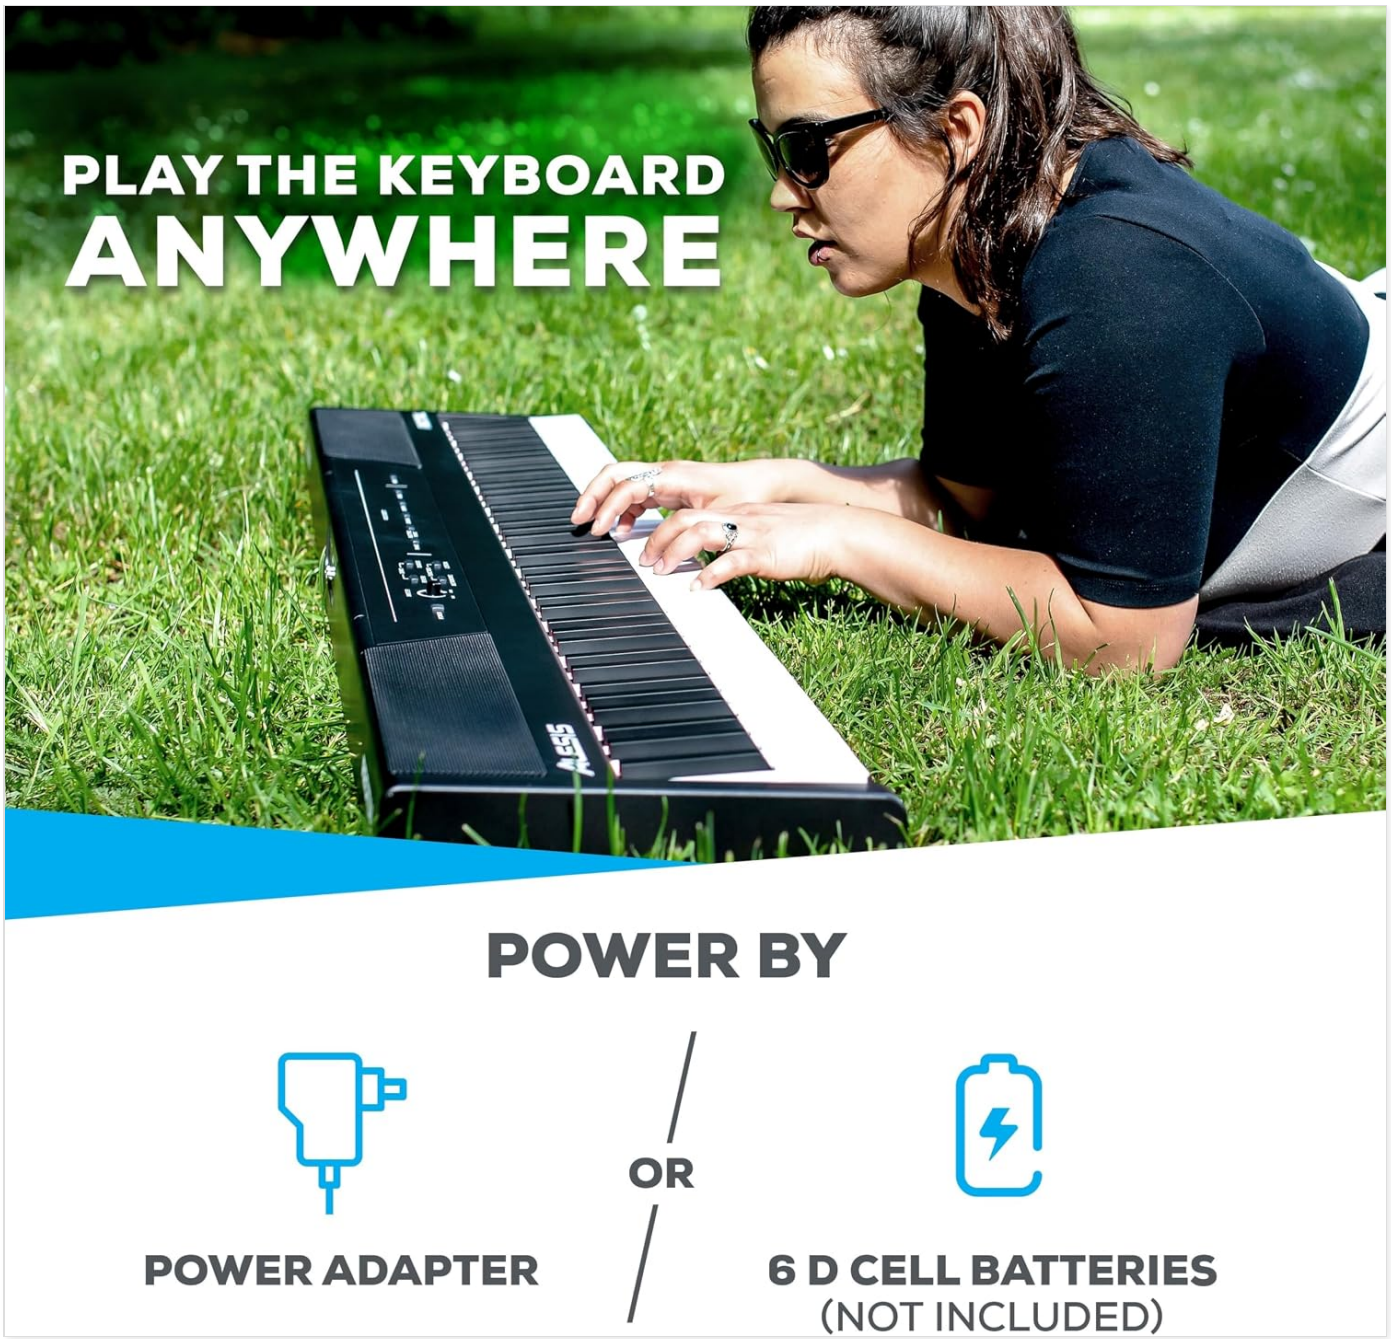


Figure 4: Powering your Alesis Recital

Maintenance

Cleaning

Use a soft, dry cloth to clean the surface of the piano. Do not use abrasive cleaners, waxes, or solvents. For keys, a slightly damp cloth can be used, followed by a dry cloth.

Storage

When not in use for extended periods, store the piano in a dry, dust-free environment. Avoid extreme temperatures or humidity.

Troubleshooting

No Sound

Ensure the power adapter is securely connected and the piano is powered on. Check the master volume knob and ensure it is turned up. If headphones are plugged in, unplug them to check internal speakers. Verify external speakers/amplifier are powered on and connected correctly.

Keys Not Responding

Ensure the piano is powered on. If specific keys are unresponsive, contact customer support.

Distorted Sound

Check the master volume level; reduce if it's too high. Ensure external speakers/amplifier are not overdriven. Check cable connections for any loose contacts.

Specifications

- **Number of Keys:** 88 Semi-Weighted Keys with Adjustable Touch Response
- **Voices:** 5 (Acoustic Piano, Electric Piano, Organ, Synth, Bass)
- **Polyphony:** 128-note maximum
- **Speakers:** 2 x 20W Built-in Speakers
- **Effects:** Reverb, Chorus
- **Connectivity:** 1/4" Sustain Pedal Input, 1/4" Stereo Headphone Output, Stereo RCA Outputs (L/MONO, R), USB Type B Port
- **Power:** 12V DC Power Adapter (included) or 6 D Cell Batteries (not included)
- **Dimensions (D x W x H):** 11.5" x 50" x 3.4"
- **Weight:** 6.34 lbs

Warranty and Support

Warranty Information

This Alesis Recital Digital Piano Keyboard comes with a standard manufacturer's warranty. Please refer to the included warranty card or visit the official Alesis website for detailed terms and conditions.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Alesis Customer Support. Contact information can be found in the included user guide or on the Alesis website.

Additional Resources

For a comprehensive user guide, please refer to the official PDF document: Alesis Recital User Manual (PDF)

Explore interactive piano lessons with Skoove and Melodics (subscriptions included with purchase):

- 3 months of Skoove Premium
- 1 month of Melodics Premium + 100 lessons

© 2024 Alesis. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question