UGREEN 20250

UGREEN USB 3.0 Dual Slot SD Card Reader Instruction Manual

Model: 20250

1. Introduction

Thank you for choosing the UGREEN USB 3.0 Dual Slot SD Card Reader. This device is designed to provide fast and efficient data transfer between your memory cards and computer. It supports a wide range of SD and Micro SD card formats, offering convenience and reliability for your data management needs.

2. Safety Information

- Keep the device away from water, fire, and high temperatures.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Avoid dropping or subjecting the device to strong impacts.
- Use the device within its specified operating environment.
- Ensure proper insertion of memory cards to prevent damage to the card reader or the card.

3. Setup Guide

The UGREEN USB 3.0 Dual Slot SD Card Reader is designed for plug-and-play operation, requiring no additional drivers for most operating systems.

1. **Connect to Computer:** Insert the USB-A connector of the card reader into an available USB 3.0 port on your computer. For optimal performance, use a USB 3.0 port (often identified by a blue interior). The device is also backward compatible with USB 2.0 ports.
2. **System Recognition:** Your operating system (Windows, macOS, Linux, Chrome OS) should automatically detect and install the necessary drivers. A notification may appear indicating that the device is ready for use.



Image 1: The UGREEN USB 3.0 Dual Slot SD Card Reader, featuring its USB-A connector and clearly labeled TF (Micro SD) and SD card slots. A Micro SD card and a standard SD card are displayed alongside the reader, illustrating the compatible media types.

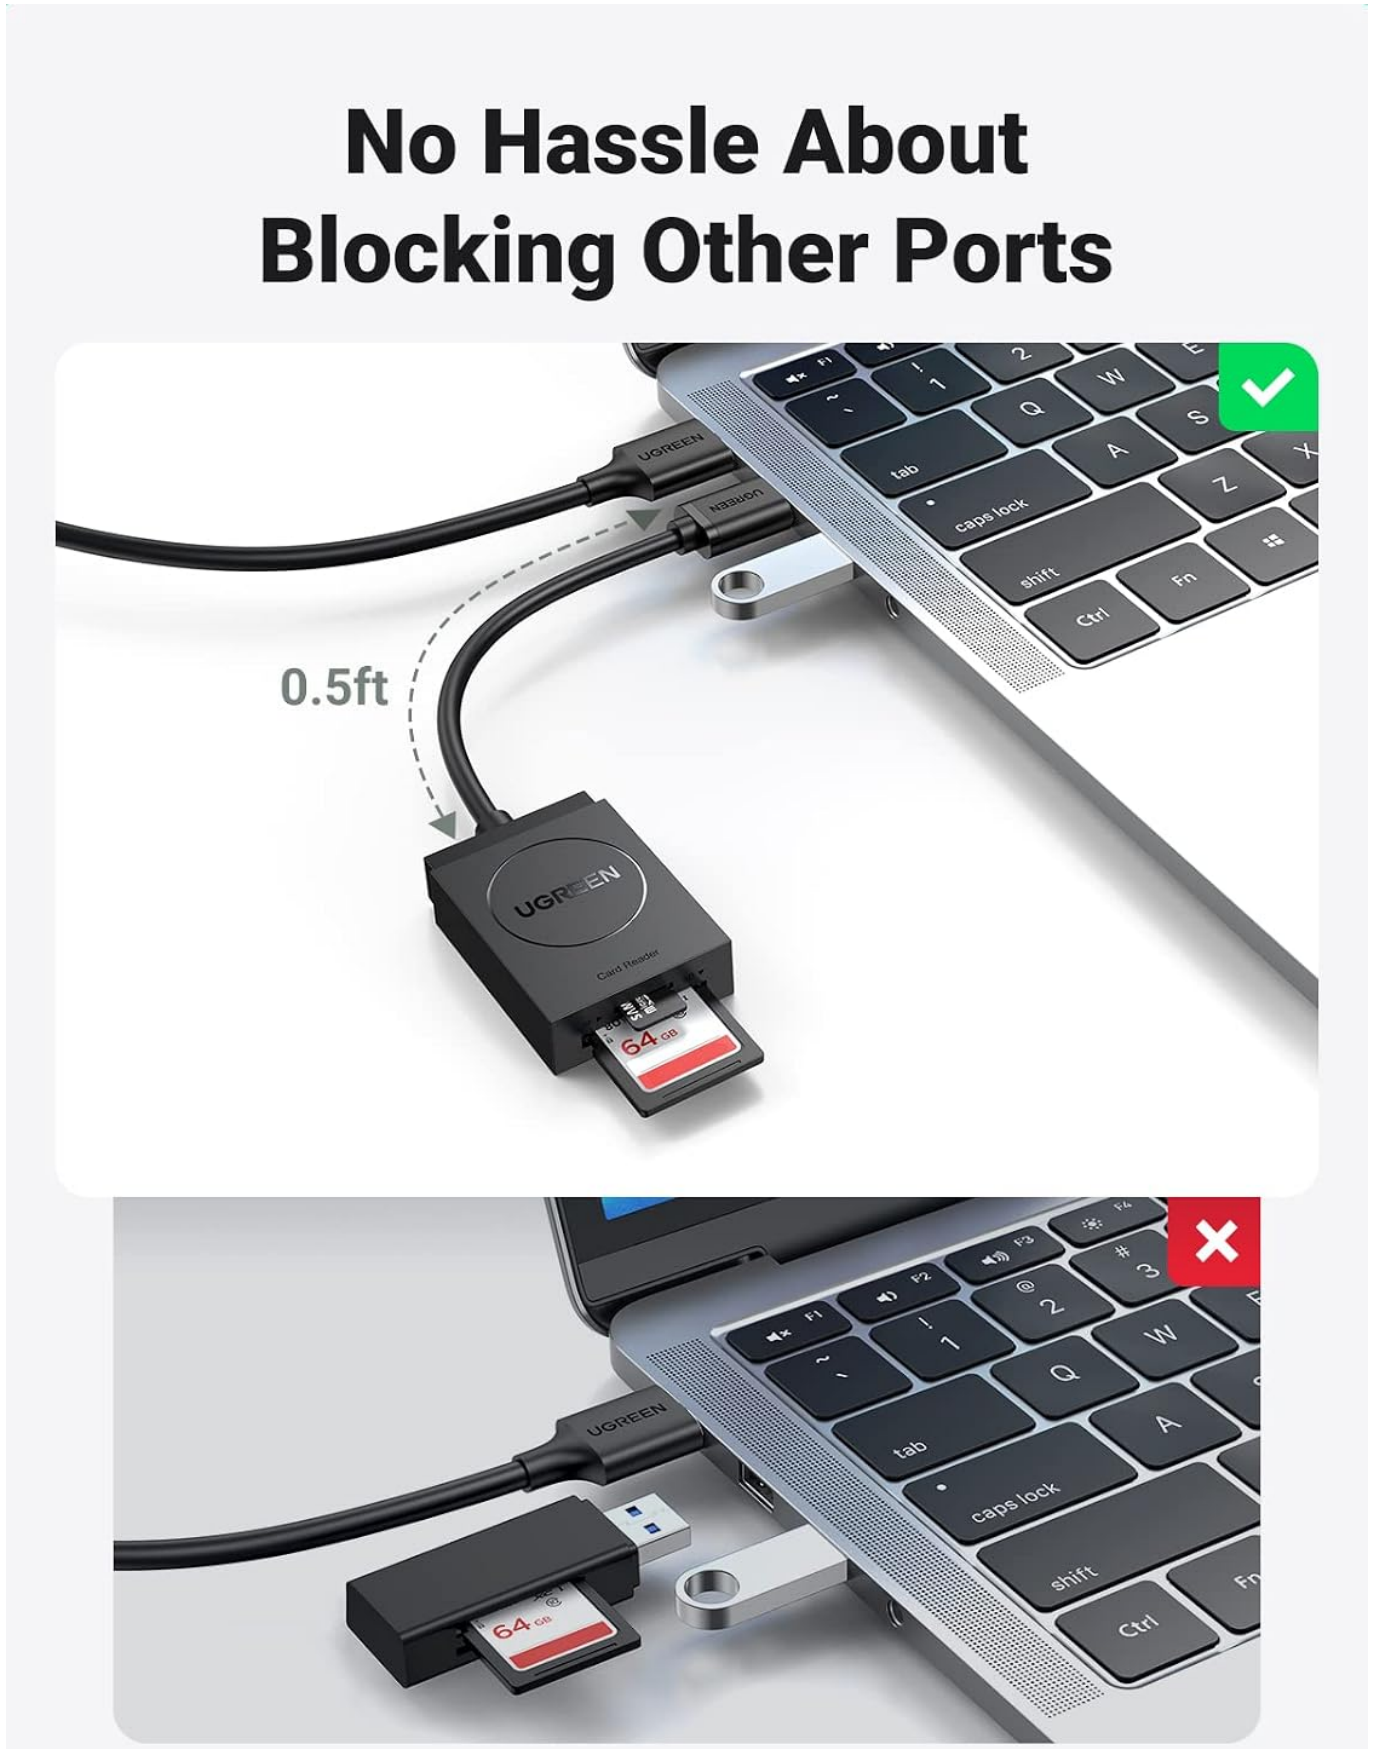


Image 2: An illustration demonstrating the thoughtful design of the UGREEN card reader, which includes a short 0.5ft cable. This design ensures that when the reader is plugged into a laptop's USB port, it does not obstruct adjacent ports, allowing other peripherals to be connected simultaneously.

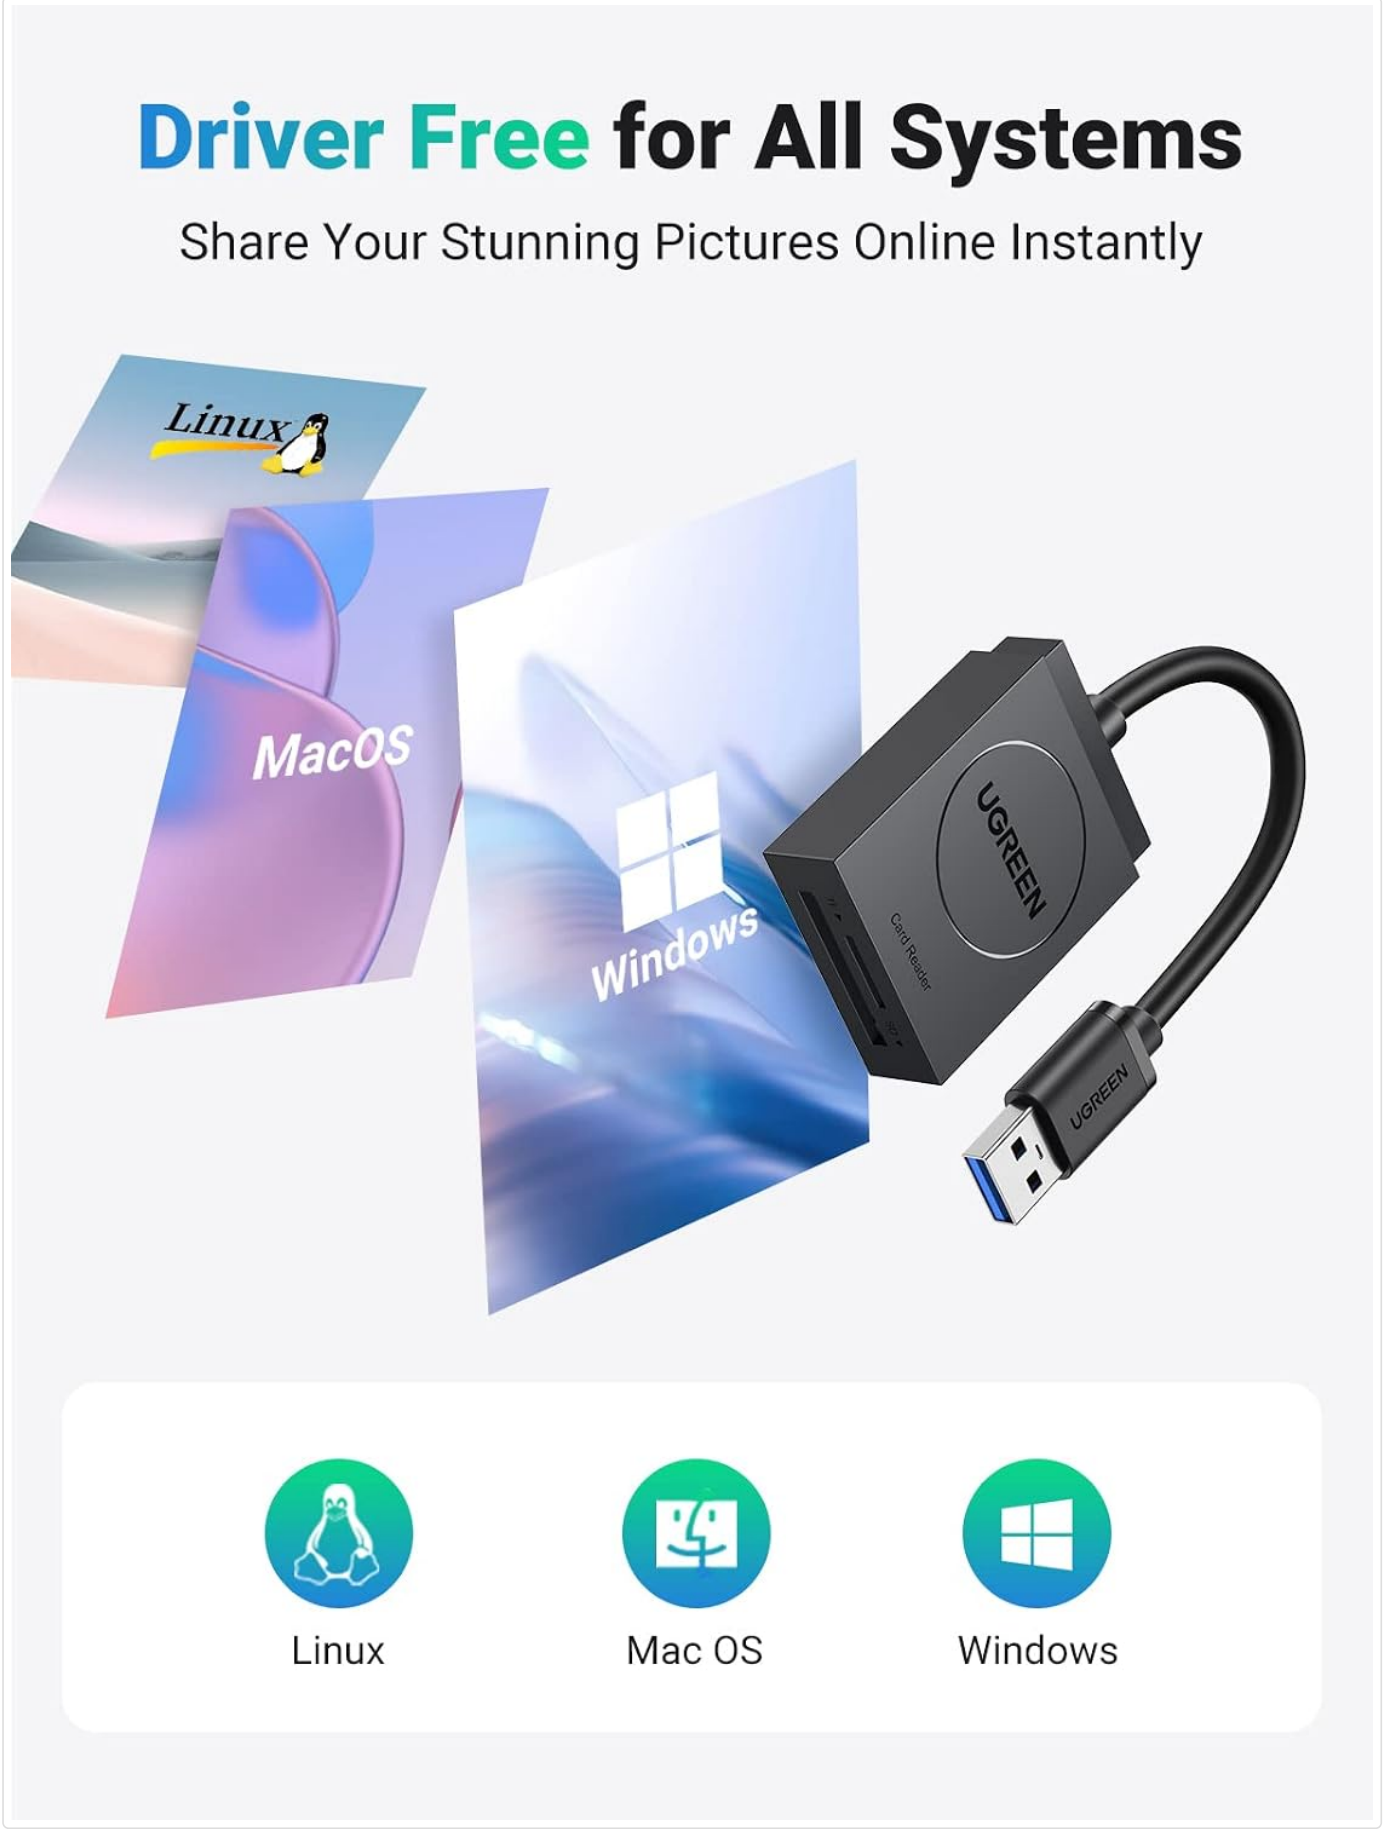


Image 3: An image highlighting the driver-free compatibility of the UGREEN card reader across multiple operating systems, including Linux, macOS, and Windows. This indicates that the device is plug-and-play and does not require manual driver installation.

4. Operating Instructions

4.1 Inserting Memory Cards

- **SD Card Slot:** For standard SD, SDHC, SDXC, MMC, and RS-MMC cards, insert the card into the slot labeled "SD" with the contacts facing down.
- **TF Card Slot:** For Micro SD, Micro SDHC, and Micro SDXC cards, insert the card into the slot labeled "TF" with the contacts facing down.
- Ensure cards are fully seated but do not force them.



Image 4: The UGREEN card reader connected to a laptop, demonstrating its high-speed data transfer capability. The image visually represents data moving from an inserted SD card to the computer, with '5Gbps' highlighted to indicate USB 3.0 transfer speeds.

4.2 Data Transfer

1. Once a card is inserted, it will appear as a removable drive in your computer's file explorer (e.g., "This PC" on Windows, "Finder" on macOS).

2. You can now drag and drop files to and from the card reader, or use copy/paste functions to transfer data.
3. The card reader supports simultaneous reading and writing on both SD and TF card slots, allowing for efficient multi-card operations.



Image 5: A UGREEN card reader connected to a laptop, illustrating the simultaneous read and write functionality for both SD and TF card slots. On-screen prompts show two separate file transfer operations occurring concurrently, one from an SD card and one from a TF card.

4.3 Ejecting Memory Cards

Always safely eject the memory card from your operating system before physically removing it from the card reader to prevent data corruption.

- **Windows:** Right-click on the drive icon for the memory card in "This PC" and select "Eject".
- **macOS:** Drag the drive icon for the memory card to the Trash, or click the Eject icon next to the drive name in Finder.

5. Maintenance

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Keep the card slots free from dust and debris.
- Store the card reader in a cool, dry place when not in use.

6. Troubleshooting

Q: The card reader is not recognized by my computer.
A: Ensure the USB cable is securely connected to both the card reader and a functional USB port on your computer. Try a different USB port or a different computer to isolate the issue. For Windows, check Device Manager for any unrecognized devices and try updating drivers if prompted.

Q: My memory card is not detected.
A: Make sure the memory card is inserted correctly and fully into the appropriate slot. Try cleaning the card's contacts with a soft cloth. Test the memory card in another device or try a different memory card in the UGREEN reader to determine if the issue is with the card or the reader.

Q: Data transfer speeds are slow.
A: Ensure the card reader is connected to a USB 3.0 port on your computer. USB 2.0 ports will operate at slower speeds. The speed of the memory card itself also affects transfer rates. Using multiple USB devices on the same hub can also reduce speeds.

7. Product Specifications

Feature	Detail
Brand	UGREEN
Model Number	20250
Interface	USB 3.0 Type-A
Compatible Card Types	SD, SDHC, SDXC, Micro SD, Micro SDHC, Micro SDXC, MMC, RS-MMC
Data Transfer Speed	Up to 5 Gbps (USB 3.0)
Operating System Compatibility	Windows, macOS, Linux, Chrome OS
Special Features	Dual slot (simultaneous read/write)
Dimensions	3.2 x 10.4 x 10.2 cm (Product); 15 x 10.1 x 1.7 cm (Package)
Weight	15 g
Color	Black

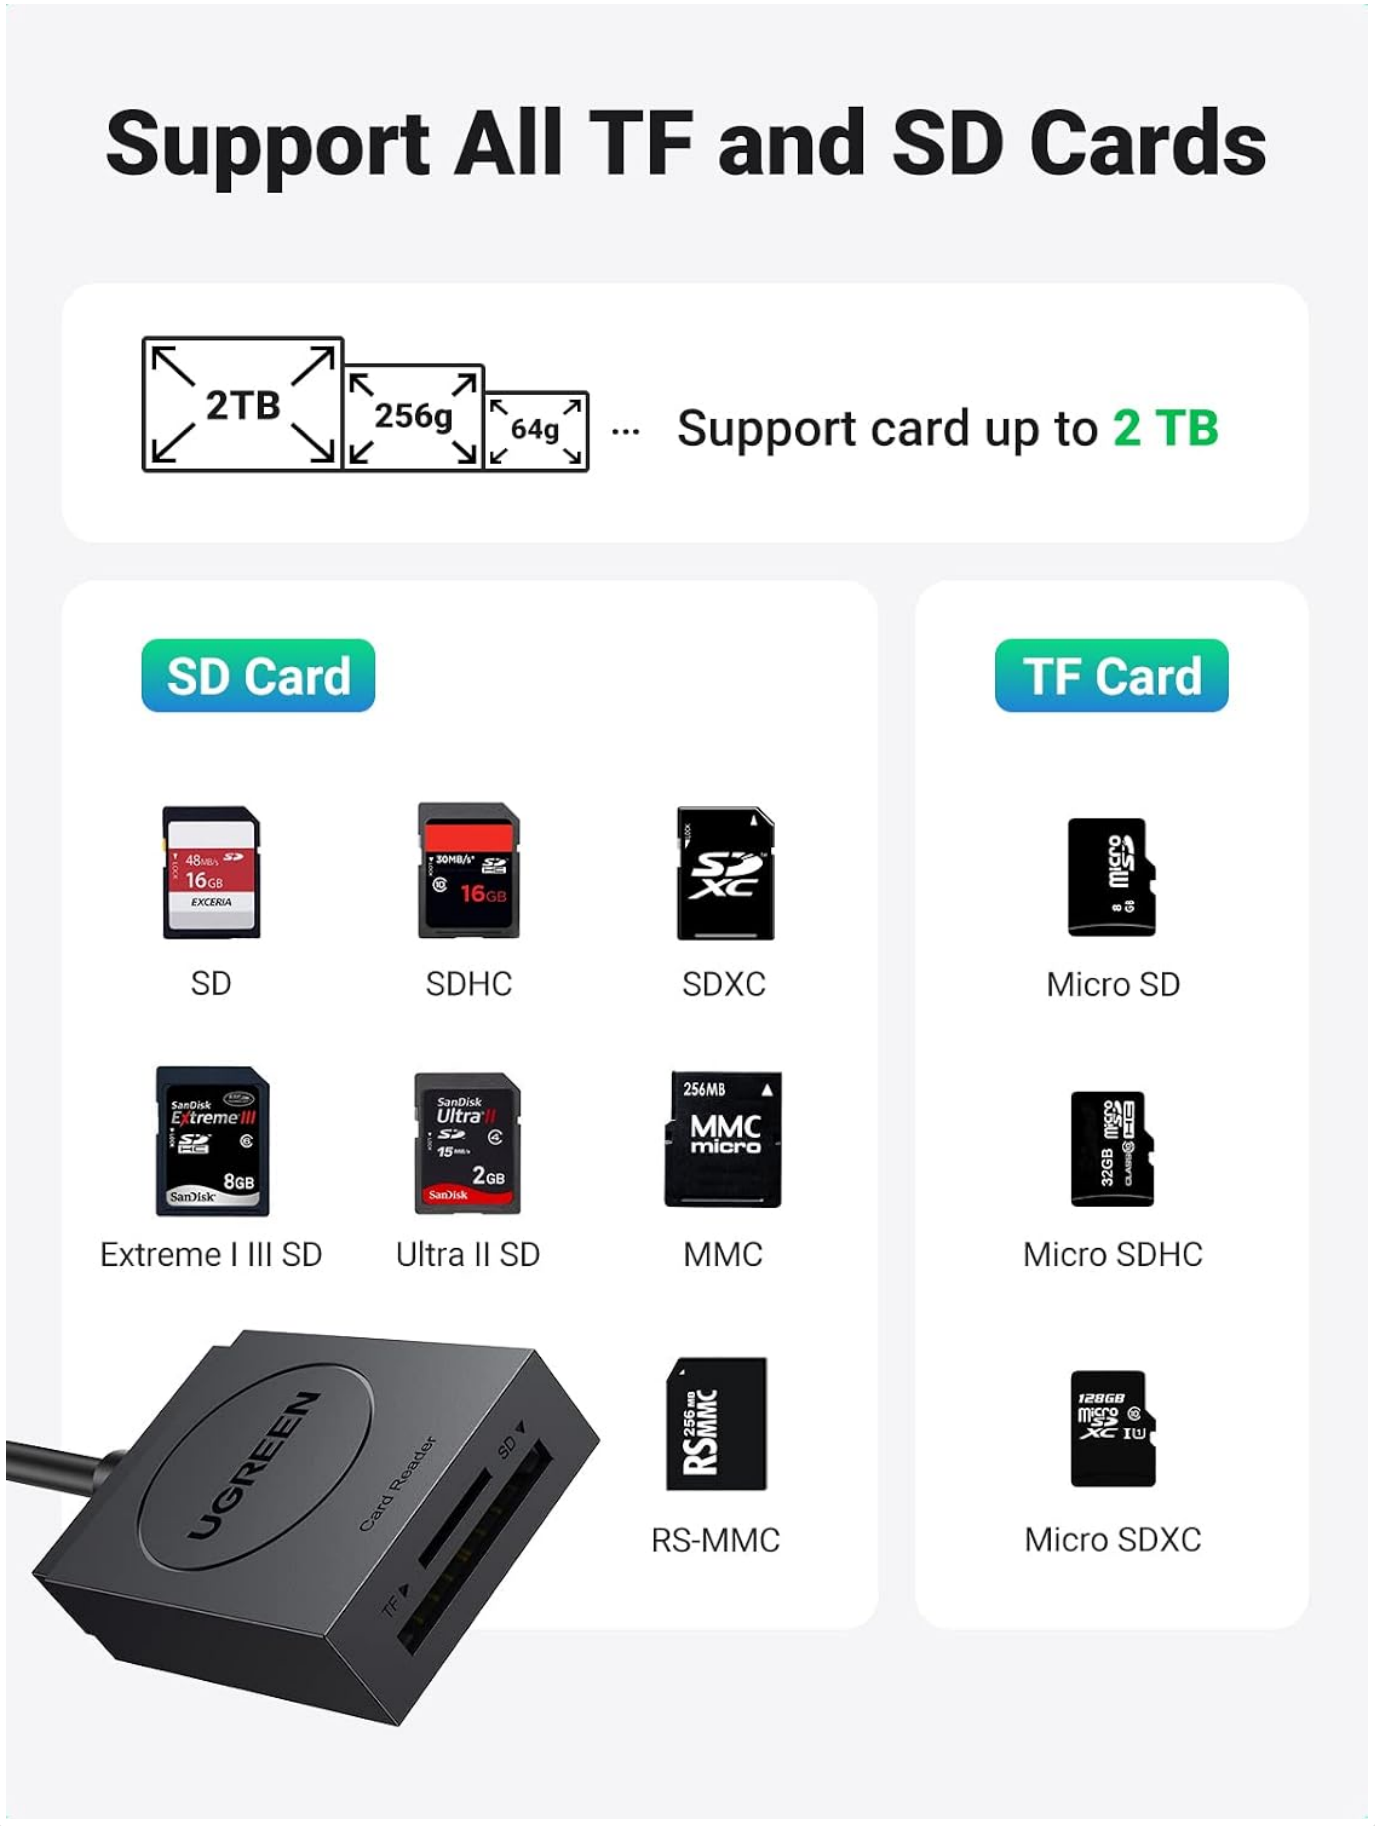


Image 6: A detailed diagram showcasing the wide range of memory card types supported by the UGREEN card reader, including various formats of SD (SD, SDHC, SDXC, Extreme I/III SD, Ultra II SD, MMC, RS-MMC) and TF (Micro SD, Micro SDHC, Micro SDXC) cards, with support for capacities up to 2TB.



Image 7: A visual representation of the UGREEN card reader's compact dimensions, showing its length, width, and thickness (e.g., 50mm length, 13mm thickness, 35mm width for the main body), emphasizing its slim and space-saving design.

8. Warranty Information

This UGREEN product is covered by a manufacturer's warranty of 90 days from the date of purchase. Please retain your

proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.
For detailed warranty terms and conditions, please refer to the official UGREEN website or contact customer support.

9. Customer Support

If you encounter any issues or have questions regarding your UGREEN USB 3.0 Dual Slot SD Card Reader, please visit the official UGREEN website for FAQs, troubleshooting guides, and contact information.
UGREEN Official Website: www.ugreen.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question