Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

szdealhola SB-8023

szdealhola Mini Single Head Electric Shaver (Model SB-8023) User Manual

1. Product Overview

The szdealhola Mini Single Head Electric Shaver, Model SB-8023, is a compact and portable electric razor designed for facial hair removal. It features an independent floating head for a close shave and supports both wet and dry shaving.



Image 1.1: The szdealhola Mini Single Head Electric Shaver in use, demonstrating its compact size and effectiveness on facial hair.



Image 1.2: Multiple units of the szdealhola Mini Single Head Electric Shaver, showcasing available color variations.

2. Safety Information

Please read and understand all safety instructions before using the shaver. Failure to follow these instructions may result in injury or damage to the product.

- Always use the shaver with caution to avoid cuts.
- Keep the shaver away from water and do not use it while charging.
- Always turn off the shaver when not in use and store it properly to prevent any accidents.

3. Specifications

Model Number	SB-8023
Power Source	Battery Powered (5V DC input)
Battery Type	1 Lithium Ion battery (included)

Charging Time	Approximately 3 hours
Operating Time	25 - 30 minutes
Dimensions	32 x 28 x 113 mm (1.26 x 1.10 x 4.45 inches)
Weight	Approximately 1.06 ounces
Special Feature	Lightweight, Waterproof (for wet/dry shaving)

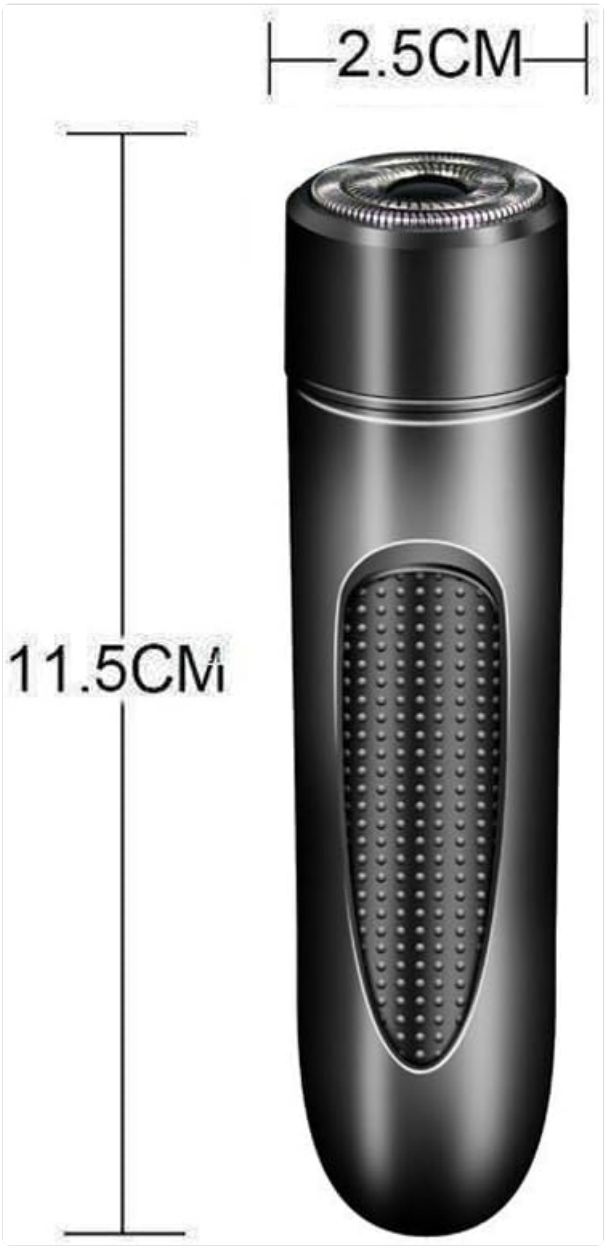


Image 3.1: Diagram illustrating the compact dimensions of the shaver: 11.5 cm in length and 2.5 cm in width.

4. Setup

4.1 Unboxing and Initial Charge

Upon receiving your shaver, carefully remove all components from the packaging. Before first use, ensure the shaver is fully charged.

1. Connect the provided USB charging cable to the shaver's charging port.

2. Plug the other end of the USB cable into a compatible 5V USB power adapter (not included) or a USB port on a computer.
3. Allow the shaver to charge for approximately 3 hours for a full charge. The charging indicator (if present) will typically change or turn off when charging is complete.



Image 4.1: The shaver connected to its USB charging cable, indicating the power input requirements and charging duration.



Image 4.2: The product packaging, showing the shaver, USB charging cable, and cleaning brush included in the box.

5. Operating Instructions

5.1 Basic Operation

1. Ensure the shaver is fully charged before use.
2. Press the power button to turn on the shaver.
3. Gently press the floating head against your skin. The independent floating head is designed to adapt to facial contours, requiring minimal pressure for an effective shave.
4. Move the shaver in small, circular motions or against the direction of hair growth for optimal results.
5. After shaving, press the power button again to turn off the shaver.

5.2 Wet and Dry Shaving

This shaver is designed for both wet and dry use. You can shave dry for a quick touch-up or use it with shaving foam or gel for a more comfortable wet shave. Always ensure the charging port is completely dry before connecting the charging cable.

6. Maintenance

6.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene of your shaver.

1. Turn off the shaver and disconnect it from any power source.
2. Twist or pull off the shaver head.
3. Use the provided cleaning brush to remove loose hair from the blades and the shaver body.
4. For a more thorough clean, rinse the shaver head under running water. Ensure the shaver body is not submerged unless specifically designed for full immersion.
5. Allow all parts to air dry completely before reassembling the shaver head.

Your browser does not support the video tag.

Video 6.1: This video demonstrates the process of disassembling the shaver head for cleaning and rinsing the components under water. It shows how to remove the blade assembly and clean it separately.

7. Troubleshooting

If you encounter issues with your shaver, please refer to the following common solutions:

- **Shaver does not turn on:** Ensure the shaver is fully charged. Connect it to the charger for at least 3 hours.
- **Shaver head detaches easily:** Verify that the shaver head is securely twisted or clicked into place on the shaver body.
- **Poor shaving performance:** Clean the shaver head thoroughly to remove any accumulated hair or debris. Ensure the blades are not dull; replacement blades may be necessary over time (check with manufacturer for availability).
- **Shaver gets hot during use:** This can be normal for extended use. If it becomes excessively hot, turn it off and allow it to cool down. Ensure the shaver is clean and not obstructed.

If the problem persists after trying these steps, please contact customer support.

8. Warranty and Support

For information regarding warranty coverage, product support, or to inquire about replacement parts, please refer to the documentation included with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01HBVCC2E

More documents and user manuals: **https://manuals.plus/**