Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

iJoy 646412563223

iJoy Bluetooth Headphones User Manual

Model: 646412563223

1. Introduction

Thank you for choosing iJoy Bluetooth Headphones. This manual provides essential information for setting up, operating, and maintaining your new headphones. Please read it carefully to ensure optimal performance and longevity of your device.

2. Package Contents

- iJoy Wireless Headphones
- Auxiliary Cable
- Charging Cable (Type-C to USB)

3. Product Overview

The iJoy Bluetooth Headphones are designed for versatile audio playback, offering both wireless and wired connectivity, along with additional features like FM radio and Micro SD card support.



Figure 3.1: iJoy Bluetooth Headphones and accessories.

Key Features:

- **Bluetooth Connection:** Ultra-fast pairing with extended frequency range.
- **Built-in Microphone:** For hands-free calling.
- **FM Radio:** Integrated radio receiver for listening to local stations.
- **Micro SD Card Slot:** For direct audio playback from a memory card.
- **Long Battery Life:** Up to 20 hours of wireless connection.
- **Foldable Design:** For easy portability and storage.
- **Comfortable Fit:** Memory protein ear cups and adjustable headband for extended wear.

Controls and Ports:

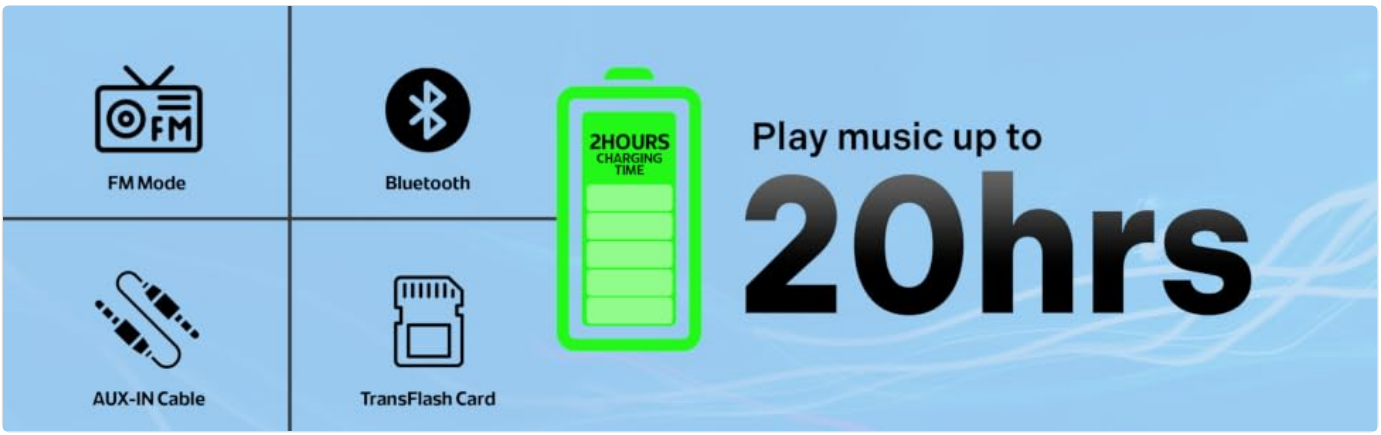


Figure 3.2: Headphone controls and ports.

- **Play/Pause/Answer/Hangup Button:** Central button for media control and call management.
- **Equalizer (EQ) Button:** Cycles through sound equalization modes.
- **Next Track/Volume Up Button:** Short press for next track, long press for volume up.
- **Previous Track/Volume Down Button:** Short press for previous track, long press for volume down.
- **Bluetooth/FM Mode Button:** Switches between Bluetooth and FM radio modes.
- **Micro SD Card Slot:** Insert a Micro SD card for direct music playback.
- **AUX Port:** For wired connection using the auxiliary cable.
- **Charging Port:** USB Type-C port for charging.
- **Indicator Light:** Displays status (e.g., charging, pairing, connected).
- **Microphone:** For voice calls.

4. Setup

4.1 Charging the Headphones

Before first use, fully charge the headphones. Connect the provided USB charging cable to the headphone's charging port and the other end to a USB power source (e.g., computer USB port, wall adapter). The indicator light will show charging status and turn off or change color when fully charged. A full charge takes approximately 2 hours and provides up to 20 hours of playtime.



Figure 4.1: Battery life and charging time.

4.2 Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the indicator light flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "iJoy Headphones" from the list.
5. Once connected, the indicator light will turn solid blue or flash slowly.

4.3 Wired Connection (AUX Mode)

To use the headphones in wired mode, connect one end of the provided auxiliary cable to the headphone's AUX port and the other end to your audio device's 3.5mm audio jack. This mode does not require battery power.

5. Operating Instructions

5.1 Power On/Off

- **Power On:** Press and hold the Power button until the indicator light turns on.
- **Power Off:** Press and hold the Power button until the indicator light turns off.

5.2 Music Playback (Bluetooth/Micro SD)

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Short press the 'Next Track/Volume Up' button.
- **Previous Track:** Short press the 'Previous Track/Volume Down' button.

- **Volume Up:** Long press the 'Next Track/Volume Up' button.
- **Volume Down:** Long press the 'Previous Track/Volume Down' button.
- **Equalizer:** Press the EQ button to cycle through available sound modes.

5.3 FM Radio Mode

1. Press the Mode button to switch to FM radio mode.
2. In FM mode, short press the Play/Pause button to auto-scan and save available stations.
3. Use the 'Next Track' and 'Previous Track' buttons to switch between saved stations.

5.4 Hands-Free Calling

- **Answer Call:** Press the Play/Pause/Answer/Hangup button once.
- **End Call:** Press the Play/Pause/Answer/Hangup button once during a call.
- **Reject Call:** Press and hold the Play/Pause/Answer/Hangup button.

6. Maintenance

- Clean the headphones regularly with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Store the headphones in a cool, dry place when not in use. The foldable design helps with compact storage.
- Do not expose the headphones to extreme temperatures, humidity, or direct sunlight.
- Handle the charging port and cables with care to prevent damage.

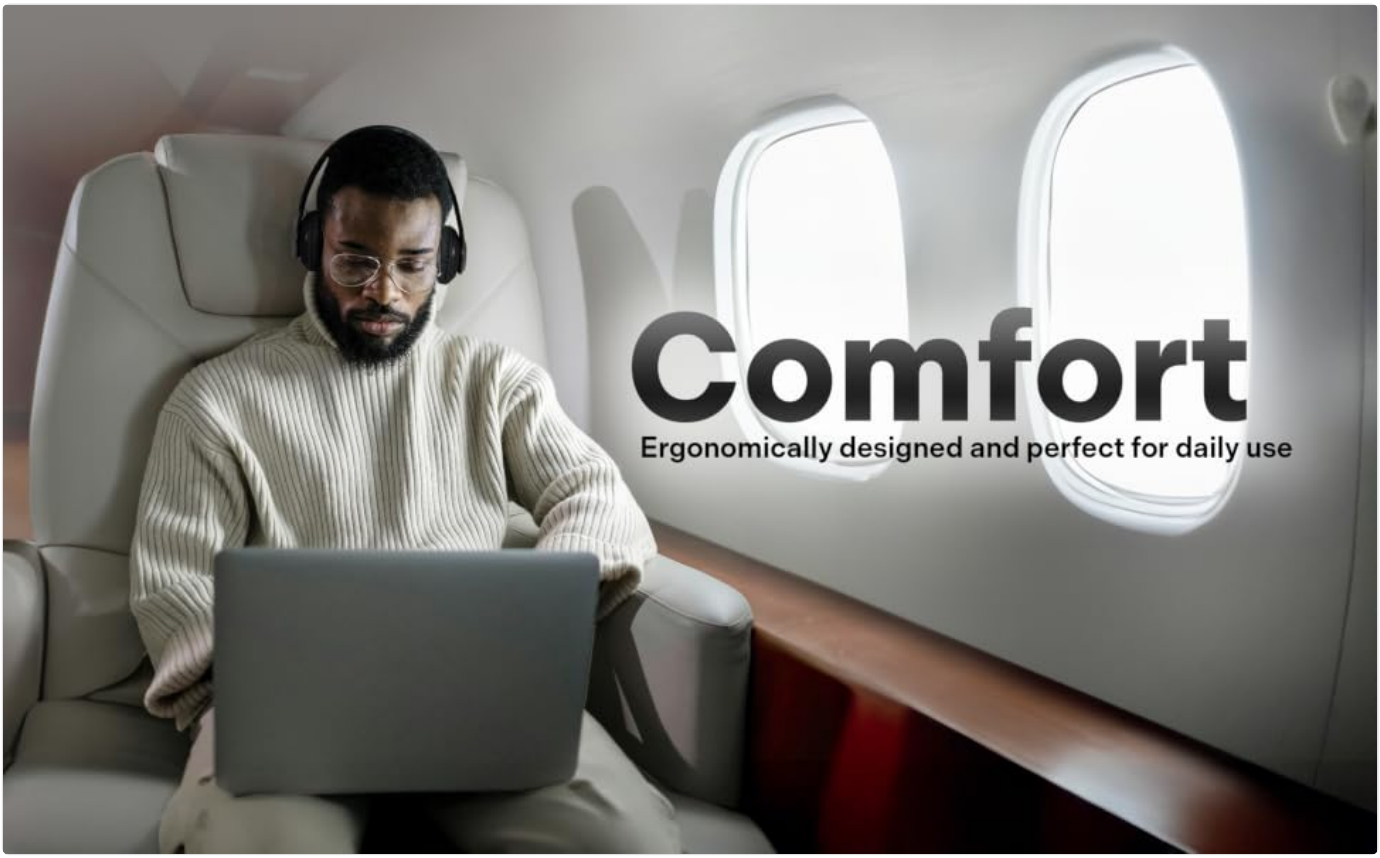


Figure 6.1: Foldable design for compact storage.

7. Troubleshooting

Problem	Possible Cause	Solution
Headphones won't turn on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn on device Bluetooth. Move headphones closer to device (within 10 meters). Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low on headphones or device; incorrect mode selected; loose AUX cable.	Increase volume on both headphones and connected device. Ensure correct mode (Bluetooth, FM, SD) is selected. Check AUX cable connection if in wired mode.
FM radio static/poor reception.	Weak signal; environmental interference.	Move to an open area. Re-scan for stations.
Micro SD card not recognized.	Card inserted incorrectly; unsupported format; corrupted card.	Ensure card is inserted correctly. Check if music files are in a supported format (e.g., MP3). Try a different Micro SD card.

8. Specifications

Feature	Detail
Model Number	646412563223
Connectivity Technology	Wireless, Wired
Wireless Communication Technology	Bluetooth
Battery Life	Up to 20 Hours (Playtime)
Charging Time	Approx. 2 Hours
Bluetooth Range	10 Meters
Ear Placement	Over Ear
Form Factor	Tri-fold (Foldable)

Feature	Detail
Noise Control	Sound Isolation
Item Weight	10.2 Ounces
Manufacturer	iJoy

9. Warranty & Support

This product comes with a**6-month exchange warranty**. If your headset breaks or is damaged for any reason within this period, Pranx (the seller) will provide you with a FREE replacement.
For further assistance or warranty claims, please contact the seller, Pranx, through the platform where you purchased the product.

© 2025 iJoy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01HDUTJHY

More documents and user manuals: **https://manuals.plus/**