INTEMPO 109161

INTEMPO Shower Speaker User Manual
Model: 109161

INTRODUCTION

Thank you for purchasing the INTEMPO Shower Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read these instructions carefully before use and retain them for future reference.

Image: The INTEMPO Shower Speaker, a compact, round, pink Bluetooth speaker with a suction cup base.

SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- While the speaker is waterproof (IPX4 rated), it is not designed for submersion. Do not immerse it in water.
- Keep the charging port dry before connecting the charging cable.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Use only the provided charging cable or a certified equivalent.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x INTEMPO Shower Speaker

- 1 x USB Charging Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and features:

Image: Top view of the pink INTEMPO Shower Speaker, highlighting the central control panel with buttons for Power, Play/Pause, Volume Up/Next Track, Volume Down/Previous Track, and Call Answer/End.

- **Power Button ( ):** Press and hold to power on/off.
- **Play/Pause Button ( ):** Press to play or pause music.
- **Next Track / Volume Up Button (/ +):** Short press for next track, long press to increase volume.
- **Previous Track / Volume Down Button (/ -):** Short press for previous track, long press to decrease volume.
- **Call Button (☎):** Press to answer/end calls.
- **Microphone:** For hands-free calling.
- **LED Indicator:** Shows power and Bluetooth status.
- **Suction Cup:** For mounting on smooth surfaces.

SETUP

1. Charging the Speaker

1. Ensure the speaker is powered off.
2. Open the rubber flap covering the charging port.
3. Connect the small end of the USB charging cable to the speaker's charging port.

4. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.

5. The LED indicator will illuminate red during charging and turn off when fully charged.

6. Charging typically takes 2-3 hours.

7. Close the rubber flap securely after charging to maintain water resistance.

2. Powering On/Off

- **To Power On:** Press and hold the Power button () for approximately 3 seconds. The LED indicator will flash blue, and you will hear an audible prompt.

- **To Power Off:** Press and hold the Power button () for approximately 3 seconds. The LED indicator will turn off, and you will hear an audible prompt.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and within 1 meter (3 feet) of your Bluetooth-enabled device (e.g., smartphone, tablet).

2. The speaker will automatically enter pairing mode when powered on for the first time or if not connected to a device. The LED indicator will flash blue rapidly.

3. On your Bluetooth device, enable Bluetooth and search for available devices.

4. Select "INTEMPO Speaker" (or similar name) from the list of found devices.

5. Once paired, the LED indicator will flash blue slowly, and you will hear a confirmation tone.

6. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

4. Mounting the Speaker

The speaker features a suction cup for easy mounting on smooth, non-porous surfaces.

1. Ensure the surface (e.g., shower tile, glass) is clean and dry.

2. Press the suction cup firmly against the desired surface.

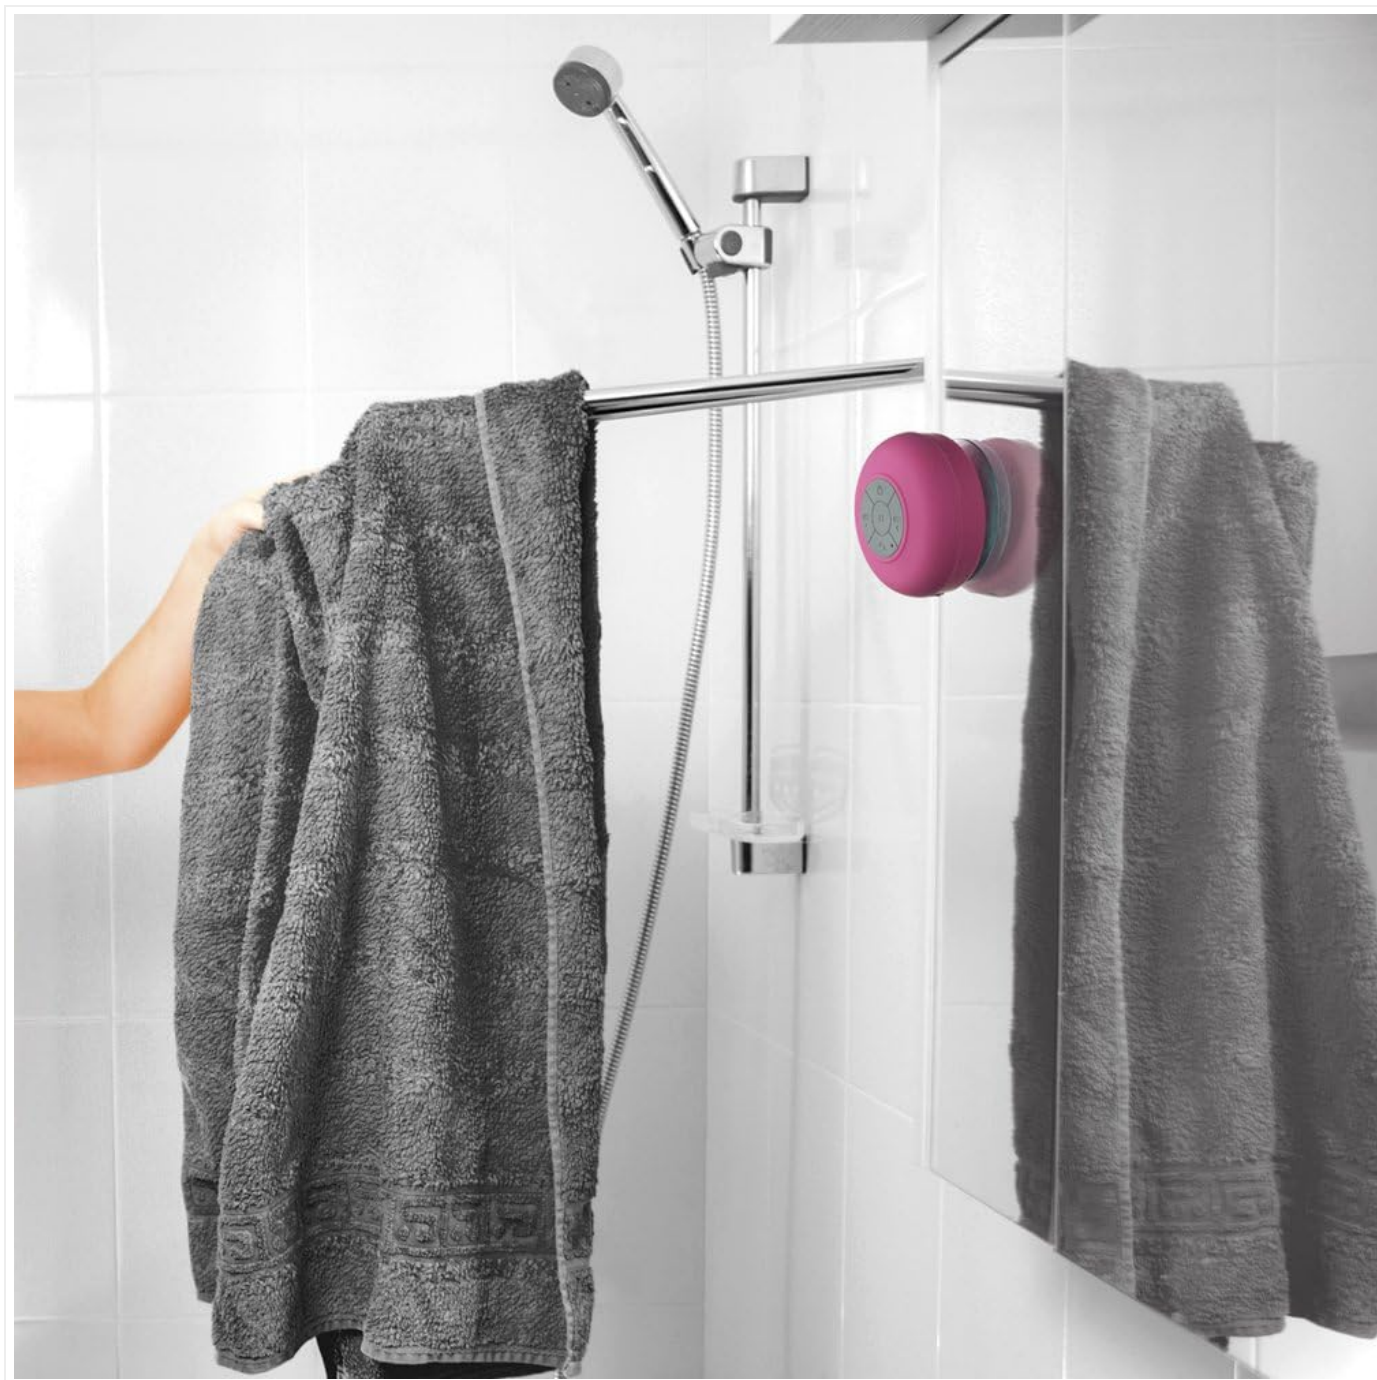3. Verify that the speaker is securely attached before releasing it.

Image: The pink INTEMPO Shower Speaker is shown mounted via its suction cup to a glass shower screen, demonstrating its intended use in a bathroom environment.

OPERATING

1. Music Playback

- **Play/Pause:** Press the Play/Pause button ().
- **Next Track:** Short press the Next Track / Volume Up button ().
- **Previous Track:** Short press the Previous Track / Volume Down button ().
- **Volume Up:** Long press the Next Track / Volume Up button (+).
- **Volume Down:** Long press the Previous Track / Volume Down button (-).

2. Hands-Free Calling

When paired with your smartphone, the speaker can be used for hands-free calls.

- **Answer Call:** When an incoming call rings, press the Call button (☎).
- **End Call:** During a call, press the Call button (☎) to hang up.
- **Reject Call:** When an incoming call rings, press and hold the Call button (☎) for 2 seconds.
- **Redial Last Number:** In standby mode, double-press the Call button (☎).

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, charge the speaker fully before first use and at least once every three months if not used regularly.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode (rapidly flashing blue LED). Turn off and on Bluetooth on your device. Move the speaker closer to your device. Forget previous pairings on your device and try again.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is properly paired.
Sound distortion.	Reduce the volume on both the speaker and your connected device. Move the speaker closer to your device to improve Bluetooth signal.
Suction cup does not stick.	Ensure the surface is clean, dry, and smooth. Avoid porous or textured surfaces.

SPECIFICATIONS

Feature	Detail
Brand	INTEMPO
Model Number	109161
Connectivity Technology	Bluetooth
Control Method	Touch
Power Source	Battery Powered (1 Lithium-polymer battery included)
Speaker Output Power	3 Watts
Waterproof Rating	IPX4 (Splash-proof)
Dimensions (L x W x H)	18.8 x 17.02 x 5.84 cm
Item Weight	320 grams

Feature	Detail
Color	Rose

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Related Documents - 109161

[Intempo Duo Speaker Quick Start Guide](#)
Quick start guide for the Intempo Duo Speaker, covering charging, pairing, Bluetooth mode, TF card, Aux mode, volume control, and specifications.

[Intempo EE2221 Karaoke Microphone Instruction Manual](#)
User guide and safety instructions for the Intempo EE2221 Karaoke Microphone, covering setup, operation, Bluetooth, Aux mode, and troubleshooting.

[Intempo EE4874 Tempo Bluetooth LED Speaker User Manual](#)
User manual for the Intempo EE4874 Tempo Bluetooth LED Speaker, providing instructions on setup, operation, and safety. Learn how to connect your device via Bluetooth and enjoy your music.

[Intempo WDS485 Bluetooth Speaker: User Manual and Specifications](#)
Comprehensive guide for the Intempo WDS485 Bluetooth Speaker, covering setup, usage, safety, troubleshooting, and technical specifications. Learn how to pair devices, use AUX mode, and care for your speaker.

[Intempo EE7036BLKKFLDIR TWS Earphones with Charging Case - User Manual](#)
Comprehensive user manual for Intempo EE7036BLKKFLDIR True Wireless Stereo (TWS) earphones. Includes setup, pairing, controls, specifications, safety, and troubleshooting information.

[Intempo Wireless Pod Speaker EE6154 User Manual](#)
This user manual provides instructions for the Intempo Wireless Pod Speaker EE6154, covering setup, operation, safety guidelines, and troubleshooting.