Cuisinart FS-75

Cuisinart Kitchen Pro Food Slicer

Model: FS-75

Your comprehensive guide to operating and maintaining your Cuisinart Food Slicer.

Introduction

The Cuisinart Kitchen Pro Food Slicer is designed for home use, making it easy and convenient to slice fresh meats, firm cheeses, breads, and other foods. This professional-quality slicer features a 7.5-inch stainless steel cutting blade and a slice control knob for precise thickness adjustments.

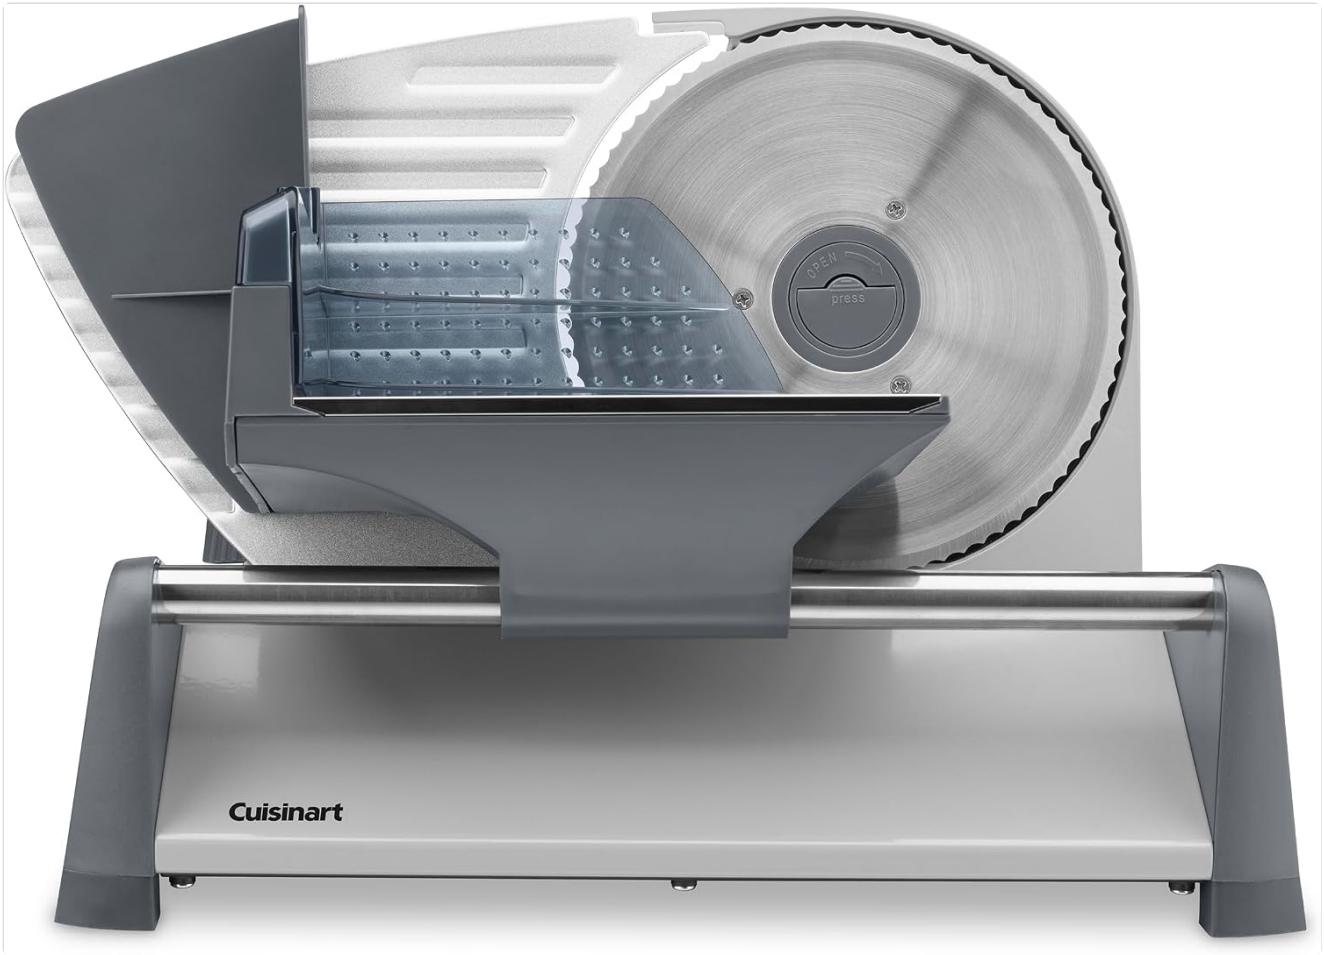


Image: Front view of the Cuisinart Kitchen Pro Food Slicer FS-75.

Important Safety Information

Important Safety Information

- Always unplug the slicer from the power outlet before cleaning or performing any maintenance.
- The cutting blade is extremely sharp. Exercise extreme caution when handling the blade. Never use your hands to push food into the blade.
- Ensure the slicer is completely assembled before use.
- Always use the food guide and food carriage to protect your hands during operation.
- Keep hands clear of the blade area during operation.
- Read all instructions thoroughly before using the appliance.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or shipping.
2. **Placement:** Place the slicer on a clean, dry, and stable countertop. The non-slip feet will help secure the unit during operation.
3. **Initial Cleaning:** Before first use, wipe down all removable parts (blade, food guide, food carriage) with a damp cloth and mild detergent. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
4. **Assemble:** Ensure the 7.5-inch stainless steel cutting blade is securely in place. Attach the food carriage and food guide.
5. **Power Connection:** Plug the power cord into a standard electrical outlet.

Operating Instructions

The Cuisinart Kitchen Pro Food Slicer is designed for efficient and precise slicing of various foods.

1. **Adjust Thickness:** Use the slice control knob located on the side of the unit to select your desired slice thickness. This knob adjusts the blade from 1/32 inch (paper-thin) to 1/2 inch thick.
2. **Position Food:** Place the food item onto the food carriage. Use the food guide to hold the food firmly against the fence and the blade.
3. **Power On:** Locate the ON/OFF switch on the side of the slicer and switch it to the 'ON' position. The blade will begin to rotate.
4. **Slicing:** With steady, even pressure, push the food carriage forward and backward, guiding the food into the rotating blade. Allow the blade to do the work; do not force the food.
5. **Continuous Operation:** To prevent motor overheating, limit continuous operation to 10 minutes. Allow the unit to cool down before resuming use.

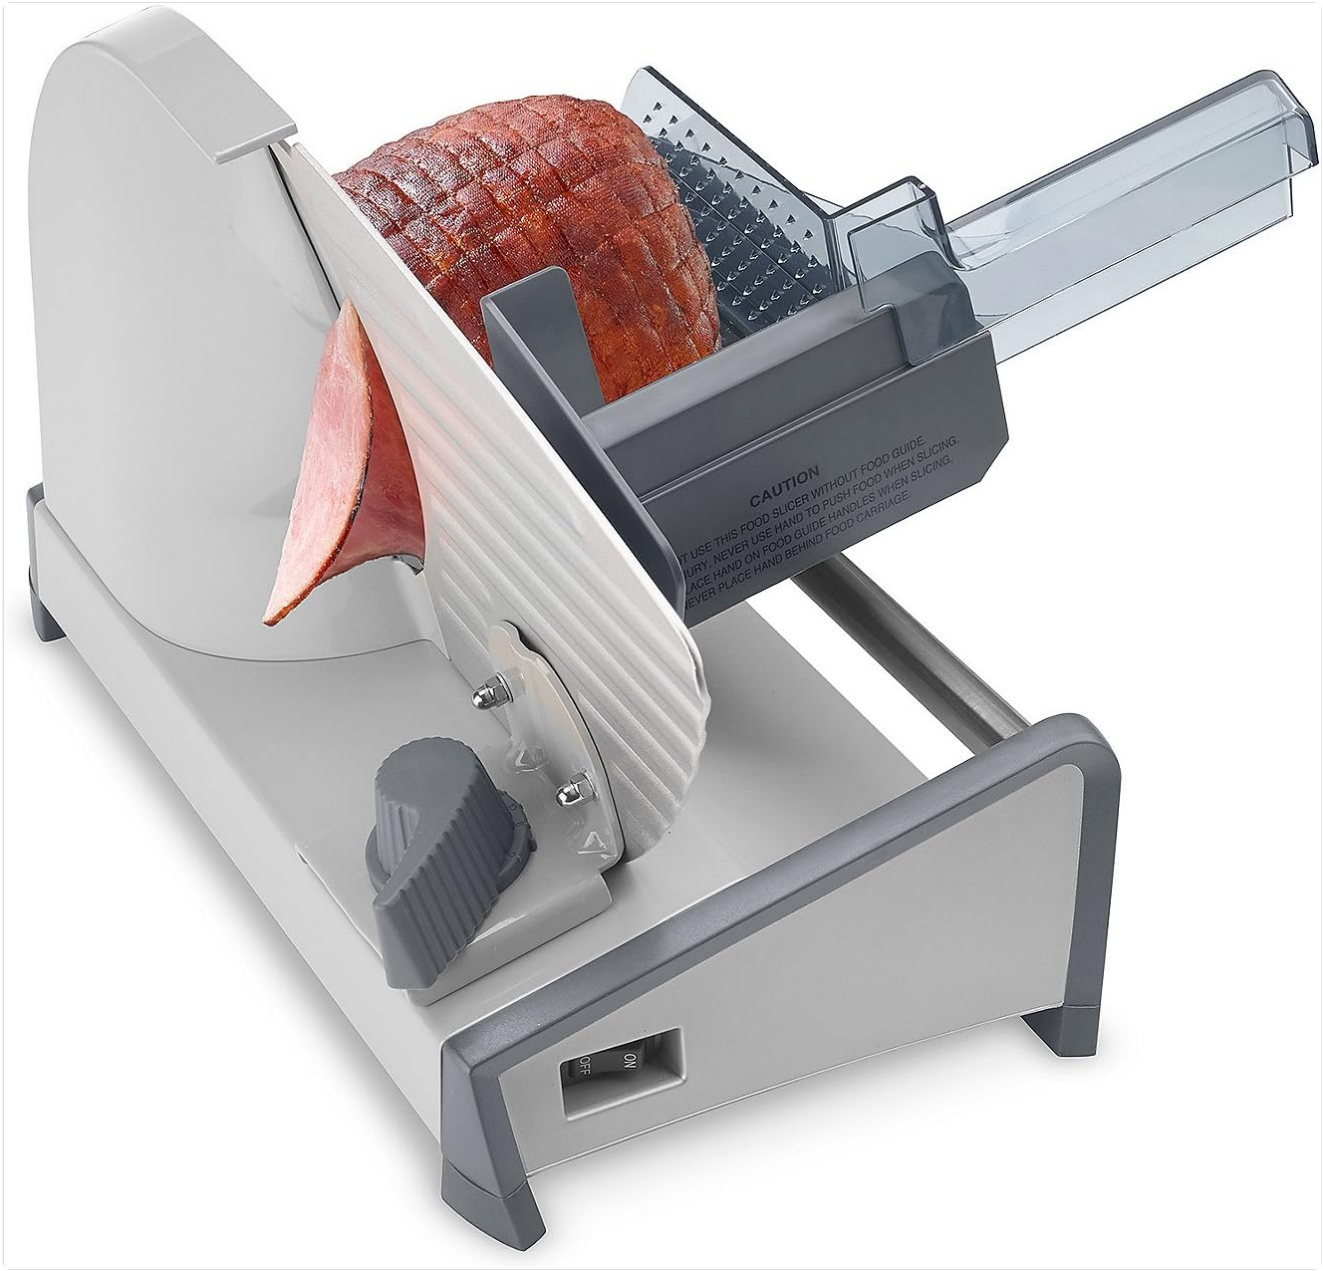


Image: The food slicer in action, demonstrating how to slice a ham roast.



Image: A ham roast positioned on the food carriage, ready for slicing.

Video: Kitchen Pro Food Slicer Demo

Your browser does not support the video tag.

Video Description: An official demonstration of the Cuisinart Kitchen Pro Food Slicer, showcasing its features and how to operate it for various food items.

Video: Everything You Need to Know About This Deli Slicer!

Your browser does not support the video tag.

Video Description: A detailed overview of the Cuisinart Deli Slicer, including setup, usage, and cleaning tips from a seller.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your food slicer. Always unplug the unit before cleaning.

1. **Disassembly:**
    - Remove the food carriage by sliding it off the guide bar.
    - To remove the blade, press the center button on the blade and turn the locking mechanism counter-clockwise. Carefully lift the blade off.
2. **Cleaning Parts:** Hand wash the blade, food guide, and food carriage with warm, soapy water. Rinse thoroughly and dry immediately to prevent rust.
3. **Cleaning Unit:** Use a damp cloth to wipe down the main unit. A small pastry brush can be used to remove any food particles from crevices around the blade area.
4. **Reassembly:** Reattach the blade by aligning it with the motor shaft and turning the locking mechanism clockwise until secure. Slide the food carriage back onto the guide bar.

Troubleshooting

- **Slicer does not turn on:** Ensure the power cord is securely plugged into a working outlet and the ON/OFF switch is in the 'ON' position.
- **Uneven slices:** Ensure the food item is firmly pressed against the food guide and the slice thickness knob is set correctly. For best results, slice at a consistent, moderate speed.
- **Difficulty slicing:** Ensure the blade is clean and free of debris. For very firm foods, ensure they are slightly chilled to maintain their shape.
- **Excessive noise:** Check that all components, especially the blade, are correctly assembled and tightened.

Specifications

Feature	Detail
Brand	Cuisinart
Model Number	FS-75
Product Dimensions	18.25"L x 10.88"W x 11.13"H

Material	Alloy Steel
Color	Gray
Special Feature	Adjustable Thickness
Recommended Uses	Slicing meats, cheeses, breads
Product Care Instructions	Hand Wash Only
Blade Material	Stainless Steel
Blade Length	7.5 Inches
Operation Mode	Automatic
Motor Power	130-watt
Item Weight	9.9 pounds

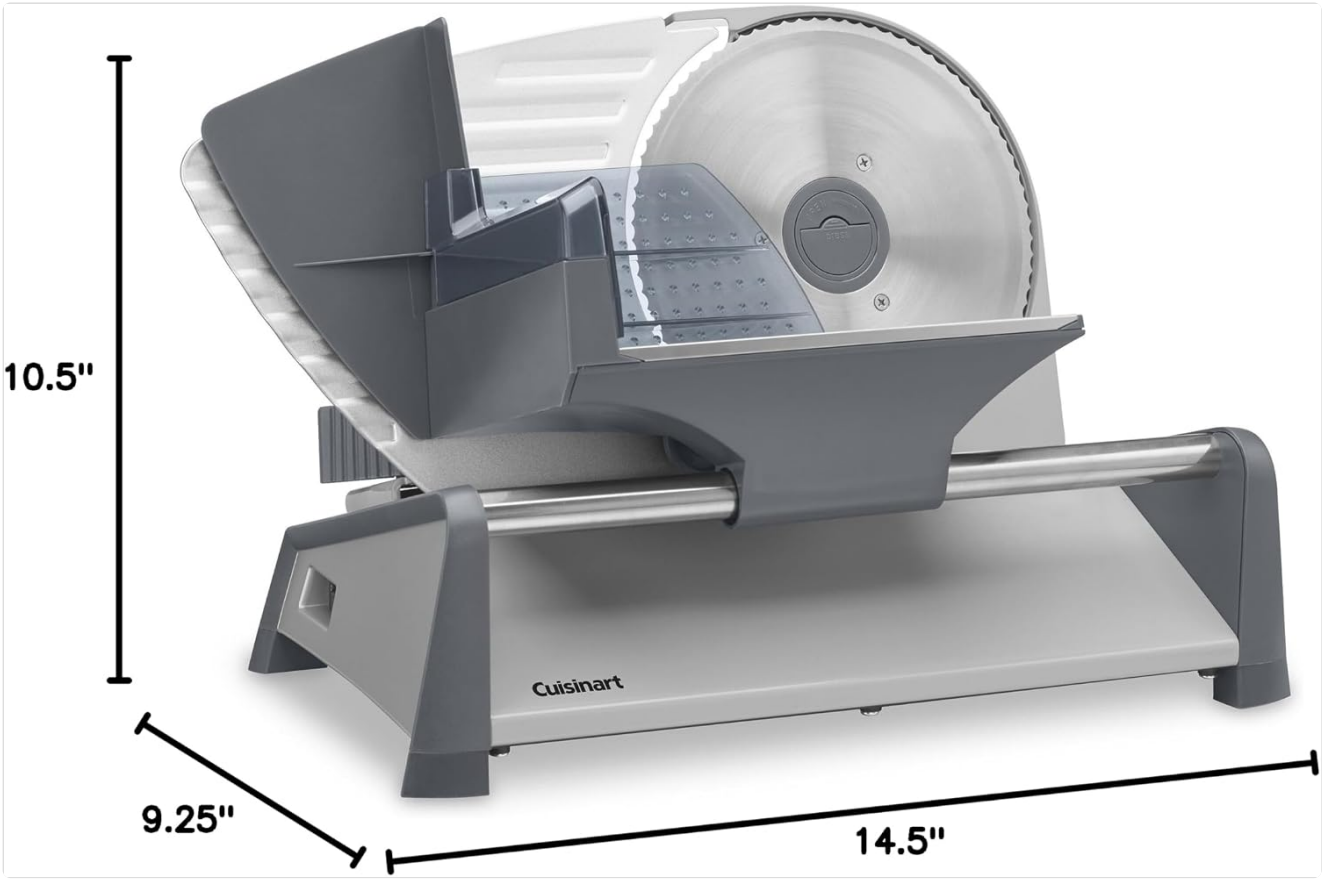


Image: Visual representation of the Cuisinart Kitchen Pro Food Slicer with its key dimensions labeled.

Warranty and Support

The Cuisinart Kitchen Pro Food Slicer comes with a limited 3-year warranty on the motor. For warranty claims, technical support, or any product-related inquiries, please contact Cuisinart customer service. Refer to the official Cuisinart website or your product packaging for the most current contact information.

© 2024 Cuisinart. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question