Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Gvirtue SN-14+L

Gvirtue Universal Remote Control SN-14+L for Sony TV User Manual

Model: SN-14+L

1. Introduction

This manual provides comprehensive instructions for the Gvirtue Universal Remote Control SN-14+L, designed as a direct replacement and universal controller for a wide range of Sony TVs. This remote offers easy setup and intuitive control over your television's functions.



Image 1.1: The Gvirtue Universal Remote Control SN-14+L, designed for Sony TVs.

Your browser does not support the video tag.

Video 1.1: An overview of the Gvirtue Replacement Universal Remote for Sony TV.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
3. Close the battery compartment cover securely.



Image 2.1: Illustration of the battery compartment requiring two AAA batteries.

2.2 Initial Operation (No Programming Required)

For most Sony TVs, the Gvirtue SN-14+L remote control is ready to use immediately after battery installation. No programming or setup is typically required for 99% of Sony TV models.

2.3 Learning Function

This remote features a learning function, allowing it to acquire codes or functions from your original remote control. This is useful for specific functions not pre-programmed or for consolidating controls. Refer to the detailed instructions provided with the remote for the learning procedure, which typically involves aligning the IR emitters of both remotes.



Image 2.2: The remote's learning function requires an original IR remote, positioned about 1 inch away.

3. Operating Instructions

3.1 Button Functions

Familiarize yourself with the layout and function of each button on your Gvirtue remote control:

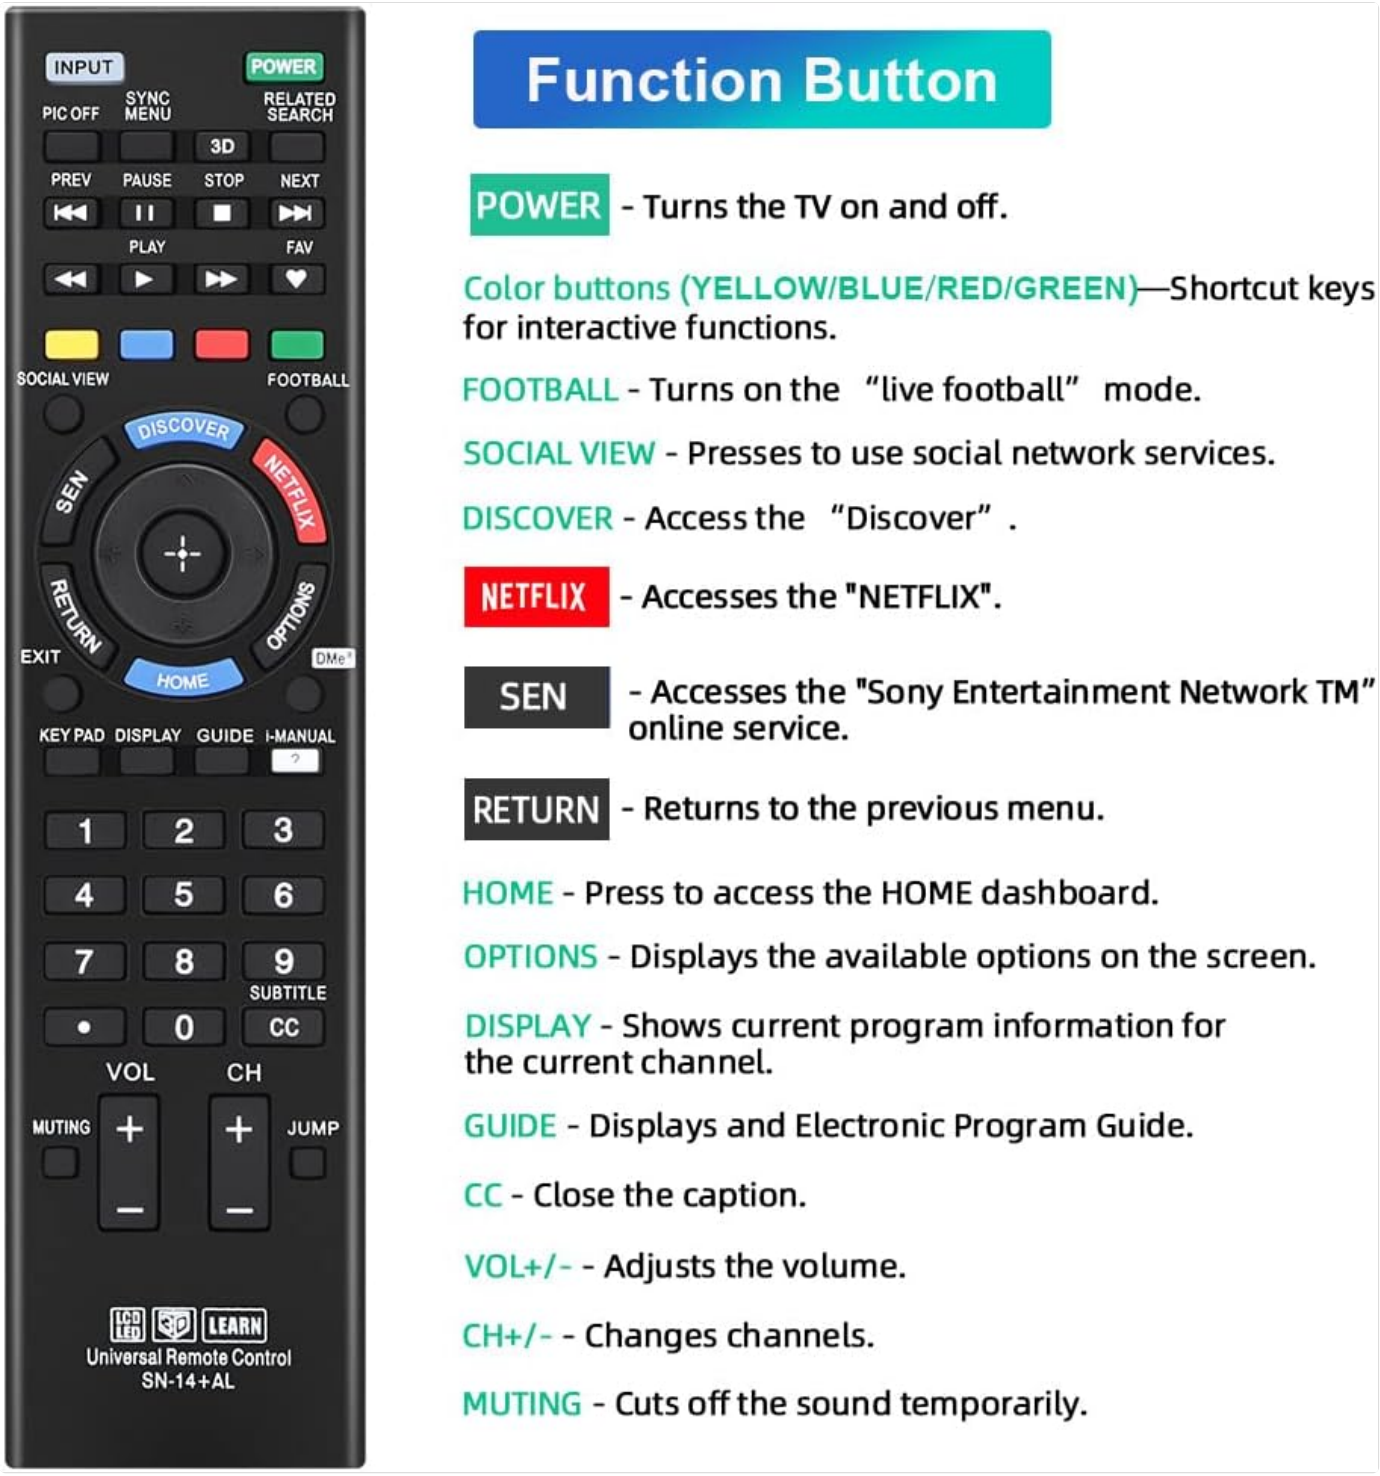


Image 3.1: Detailed breakdown of each button's function on the remote control.

- **POWER:** Turns the TV on and off.
- **Color buttons (YELLOW/BLUE/RED/GREEN):** Shortcut keys for interactive functions.
- **FOOTBALL:** Activates the

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01J4KU2UO

More documents and user manuals: **https://manuals.plus/**