WWOOR 8016

WWOOR 8016 Men's Quartz Watch Instruction Manual

Model: 8016

1. Introduction

This manual provides essential instructions for the proper setup, operation, maintenance, and troubleshooting of your WWOOR 8016 Men's Quartz Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

2. Product Overview

The WWOOR 8016 is a men's quartz watch featuring a durable stainless steel mesh band and a blue dial. It is designed for daily wear with practical functions and a robust construction.

- **Movement:** Reliable Japanese quartz movement for accurate timekeeping.
- **Water Resistance:** 30 meters (3 ATM) for daily splashes and brief immersion.
- **Display:** Analog display with three hands (hour, minute, second).
- **Calendar Function:** Date display window for convenience.
- **Crystal:** Hardened glass mirror for enhanced durability and wear resistance.
- **Band:** Adjustable stainless steel mesh strap.



Image 2.1: Overview of the WWOOR 8016 watch highlighting key features such as the stainless steel strap, logo, German high hardness glass, 30m waterproof embedded head, three accurate stitches, and calendar display.

3. Setup

3.1 Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to the outermost position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

3.2 Setting the Date

1. Pull the crown out to the first position (halfway out).
2. Rotate the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Once the date is set, push the crown back into its original position.

3.3 Adjusting the Mesh Band

The stainless steel mesh band features an adjustable clasp for a comfortable fit.

1. Locate the clasp on the band. It typically has a small lever or tab.

2. Using a small, flat tool (like a small screwdriver or a watch tool), gently lift the locking plate on the clasp.
3. Slide the clasp along the mesh band to the desired position for your wrist size.
4. Press the locking plate back down firmly until it clicks into place, securing the clasp.

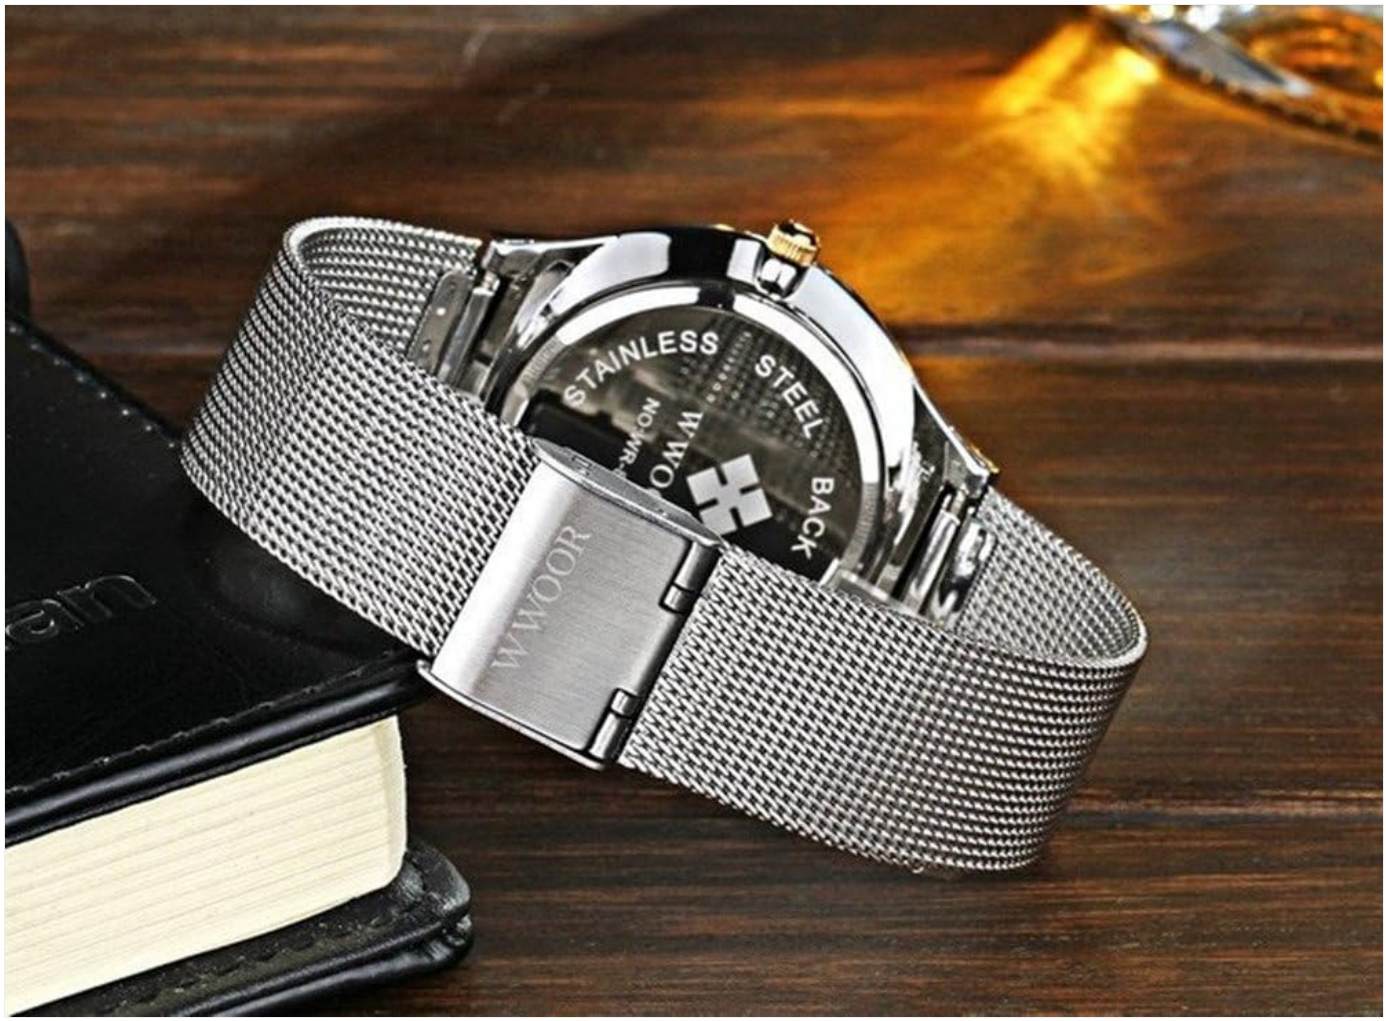


Image 3.1: Rear view of the WWOOR 8016 watch, illustrating the stainless steel back and the adjustable mesh band clasp mechanism.

4. Operating the Watch

Once the time and date are set, your WWOOR 8016 watch operates automatically. The quartz movement ensures precise timekeeping with minimal intervention.

- The second hand moves in distinct ticks, indicating the quartz movement.
- The date display will automatically advance once every 24 hours, typically around midnight.



Image 4.1: A detailed view of the WWOOR 8016 watch face, showing the blue dial, hour markers, hands, and date window.

5. Maintenance

5.1 Water Resistance

Your WWOOR 8016 watch is water-resistant to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals.

- Ensure the crown is fully pushed in before any contact with water.
- Do not operate the crown while the watch is wet or submerged.

5.2 Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry, lint-free cloth.
- For the stainless steel mesh band, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals

or abrasive materials.

5.3 Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and prevent damage to the movement.

6. Troubleshooting

If you encounter issues with your watch, refer to the following common troubleshooting steps:

- **Watch Not Running:** Ensure the crown is fully pushed in. If it still does not run, the battery may need replacement.
- **Incorrect Time/Date:** Refer to Section 3 for instructions on how to set the time and date correctly.
- **Date Not Changing:** Check if the time is set correctly (AM/PM). The date changes around midnight. If the watch is running but the date is stuck, it may require professional inspection.
- **Condensation Under Crystal:** If condensation appears under the crystal, it indicates a breach in the water resistance. Avoid further contact with water and seek professional service immediately.

7. Specifications

Feature	Specification
Model Name	WWOOR 8016
Model Number	WWOOR-1
Movement Type	Japanese Quartz
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel
Water Resistance Depth	30 Meters (3 ATM)
Dial Diameter	38 mm
Case Thickness	9 mm
Band Width	20 mm
Strap Circumference	230 mm
Item Weight	58 g
Dial Color	Blue
UPC	713752117574

8. Warranty and Support

8.1 Warranty Information

For warranty details and claims, please contact the seller of record directly. Warranty terms may vary based on the point of purchase.

8.2 Customer Support

If you have any questions or require further assistance with your WWOOR 8016 watch, please reach out to the retailer or the manufacturer's customer service department. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question