Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CalExotics SE-4409-40-3

CalExotics Mini Marvels Marvelous Flicker - Silicone Vibrator User Manual

Model: SE-4409-40-3 | Brand: CalExotics

1. Introduction

Thank you for choosing the CalExotics Mini Marvels Marvelous Flicker. This compact, rechargeable silicone vibrator is designed for personal pleasure. It features 10 functions of vibration, pulsation, and escalation, and is made from body-safe silicone. This manual provides essential information for safe and effective use, including setup, operation, maintenance, and troubleshooting.

2. Safety Information

- **Material Safety:** The device is constructed from premium, body-safe silicone.
- **Cleaning:** Always clean the device thoroughly before and after each use with warm water and a toy cleaner or mild soap. Rinse completely.
- **Water Resistance:** The manufacturer states the device is waterproof. However, some user reports indicate potential water ingress through the charging port. To ensure longevity and prevent damage, avoid full submersion and prolonged exposure to water. Clean with a damp cloth or rinse quickly, ensuring the charging port is dry before charging.
- **Lubrication:** Use only water-based lubricants with this device to prevent damage to the silicone material. Oil-based lubricants can degrade silicone.
- **Storage:** Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.
- **Discontinue Use:** If you experience any discomfort, irritation, or pain during use, discontinue immediately. Consult a healthcare professional if symptoms persist.
- **Travel Lock:** The device includes a security travel lock feature to prevent accidental activation.

3. Setup

3.1 Initial Charge

Before first use, fully charge the device. A USB charging cord is included. Connect the charging cord to the device's charging port and a USB power source (e.g., computer, USB wall adapter). The charging indicator light will illuminate. A complete charge typically takes 2.5 hours. The LED light will turn off when fully charged.



Image: The device connected to its USB charging cable.

3.2 Initial Cleaning

Clean the device with warm water and a mild soap or toy cleaner before its first use. Rinse thoroughly and allow it to air dry completely.

4. Operating Instructions

The Mini Marvels Marvelous Flicker features a single control button for ease of use.



Image: Product diagram highlighting the flickering tip and simple operation.

- **Power On/Off (Travel Lock):** To turn the device on or off, press and hold the control button for 3 seconds. This also functions as the security travel lock.

- **Changing Functions:** Once the device is on, short presses of the control button will cycle through the 10 distinct vibration, pulsation, and escalation functions.
- **Flickering Tip:** The device features an incredible flickering tip designed for intense pinpoint action.

Your browser does not support the video tag.

Video: Official product video demonstrating the CalExotics Mini Marvels Silicone Marvelous Flicker in use, showcasing its features and functions.

5. Maintenance

5.1 Cleaning

For optimal hygiene and product longevity, clean the device after every use. Use warm water and a specialized toy cleaner or a mild, antibacterial soap. Rinse thoroughly to remove all soap residue. Pat dry with a lint-free cloth or allow to air dry completely before storing.

5.2 Storage

Store the device in its original packaging or a dedicated storage pouch to protect it from dust and damage. Keep it in a cool, dry place, away from direct sunlight, extreme temperatures, and out of reach of children. Avoid storing with other silicone products if they are not specifically designed to be compatible, as some materials can react and degrade silicone over time.

6. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted. Device is in travel lock mode.	Charge the device fully (refer to Section 3.1). Press and hold the control button for 3 seconds to activate/deactivate travel lock.
Device does not charge.	Charging cable or port issue. Faulty battery.	Ensure the charging cable is securely connected to both the device and the USB power source. Try a different USB port or adapter. If the issue persists, contact customer support.
Vibrations feel weak or inconsistent.	Low battery.	Recharge the device.
Device stops working after contact with water.	Water ingress despite waterproof claim.	Immediately discontinue use. Allow the device to dry completely. If it remains non-functional, contact customer support. Refer to Section 2 for water resistance precautions.

If troubleshooting steps do not resolve the issue, please contact CalExotics customer support for further assistance.

7. Specifications

- **Model Name:** Mini Marvels Marvelous Flicker
- **Model Number:** SE-4409-40-3
- **Brand:** CalExotics
- **Material:** Silicone
- **Color:** Pink
- **Functions:** 10 (Vibration, Pulsation, Escalation)
- **Power Source:** USB Rechargeable

- **Battery Type:** 1 Lithium Polymer battery (included)
- **Charge Time:** Approximately 2.5 hours for a complete charge
- **Run Time:** Up to 40 minutes on high speed, up to 240 minutes on low speed
- **Product Dimensions:** 2.5 x 5.5 x 7.75 inches
- **Weight:** 11.8 ounces
- **Water Resistance:** Stated as waterproof by manufacturer (refer to Section 2 for important precautions).

8. Warranty and Support

8.1 Manufacturer Warranty

This CalExotics product is backed by a one-year manufacturer warranty. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your CalExotics Mini Marvels Marvelous Flicker, please contact CalExotics customer support. Refer to the product packaging or the official CalExotics website for current contact information.

9. Additional Product Information

Your browser does not support the video tag.

Video: Promotional video for the CalExotics Mini Marvels series, showcasing various products including the Marvelous Flicker.

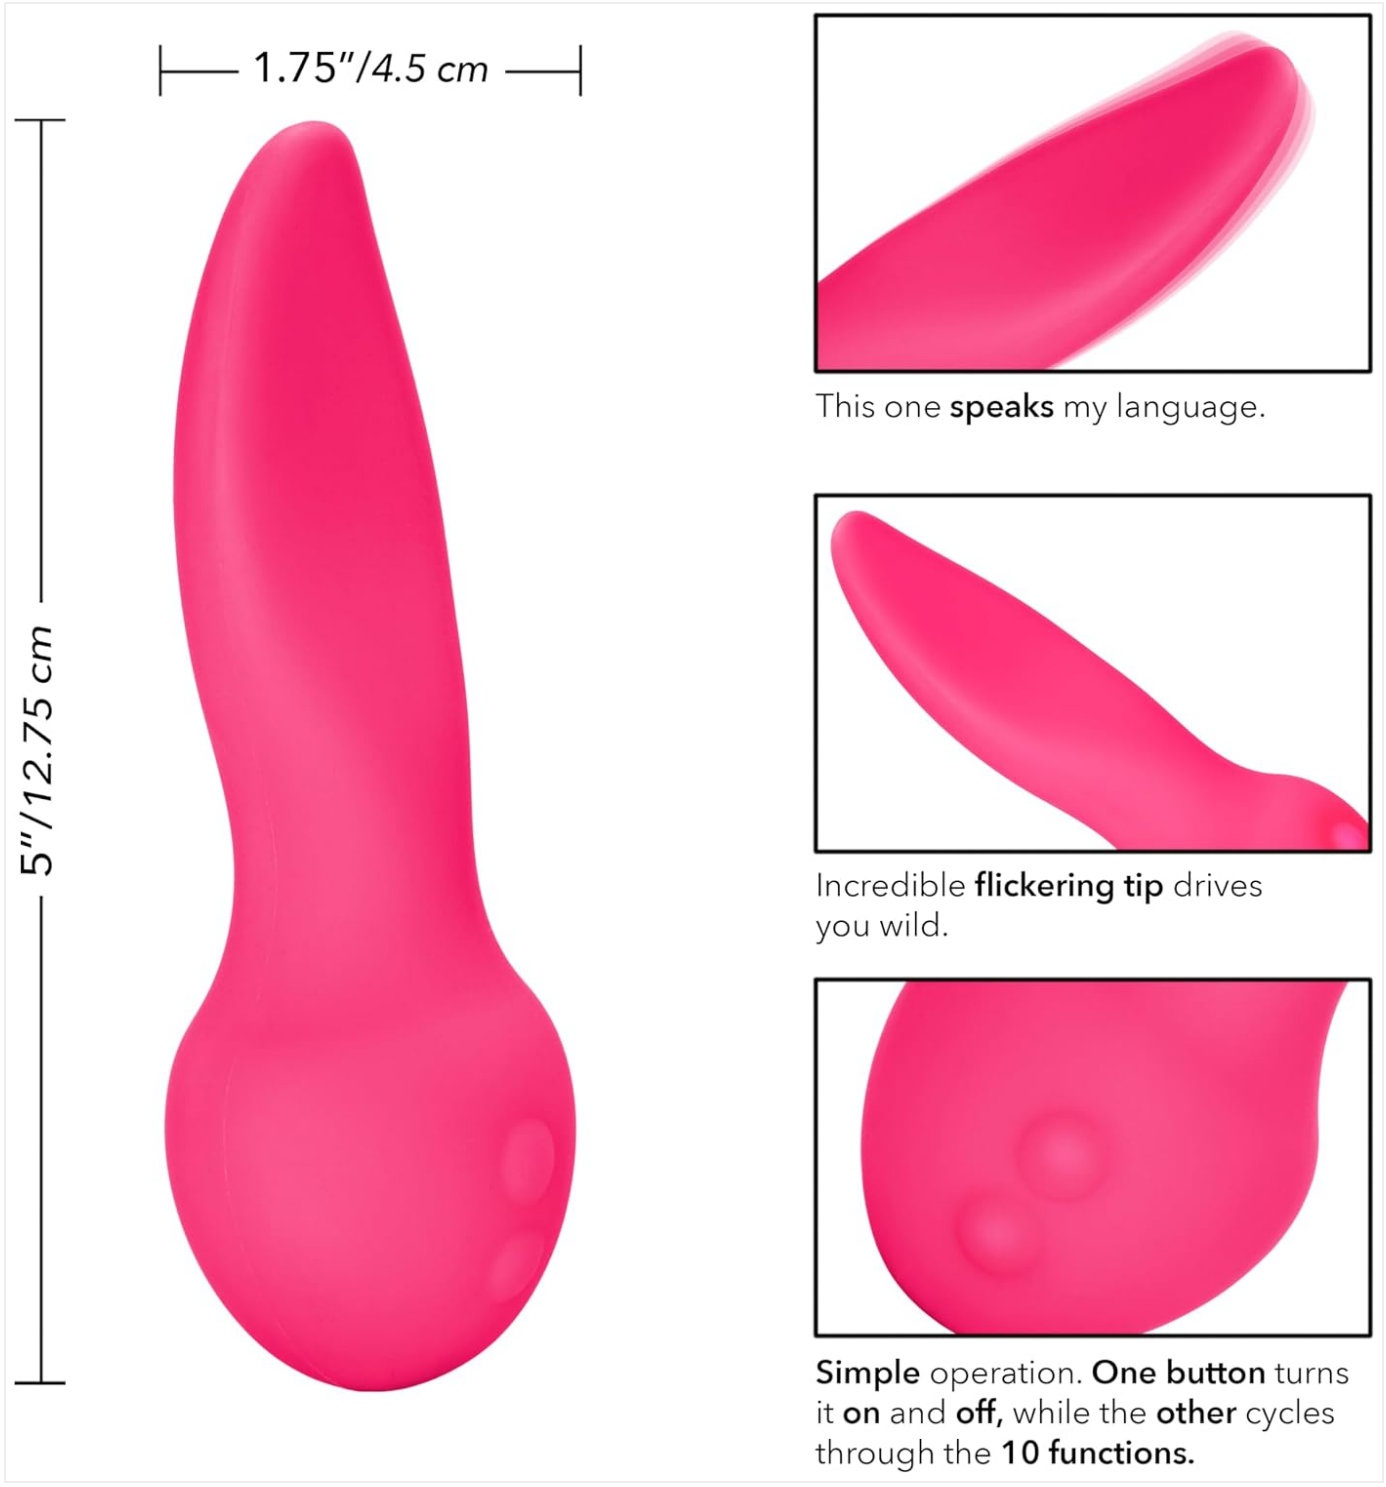


Image: Front view of the CalExotics Mini Marvels Marvelous Flicker.



Image: Side view of the CalExotics Mini Marvels Marvelous Flicker.



Image: Close-up of the premium, silky smooth, body-safe silicone material.



Image: Visual representation of the device's waterproof design.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01KOHS2R6

More documents and user manuals: **https://manuals.plus/**