Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kobo 121824

Kobo Aura eBook Reader User Manual

Model: 121824

Introduction

Welcome to the Kobo Aura eBook Reader user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your Kobo Aura device. The Kobo Aura features a beautiful edge-to-edge 6-inch low-glare high-resolution Pearl E Ink screen, ComfortLight for even front-lighting, and is ultra-portable with a battery life of over 2 months. It supports over 3.5 million eBooks, magazines, comics, and kids' titles.

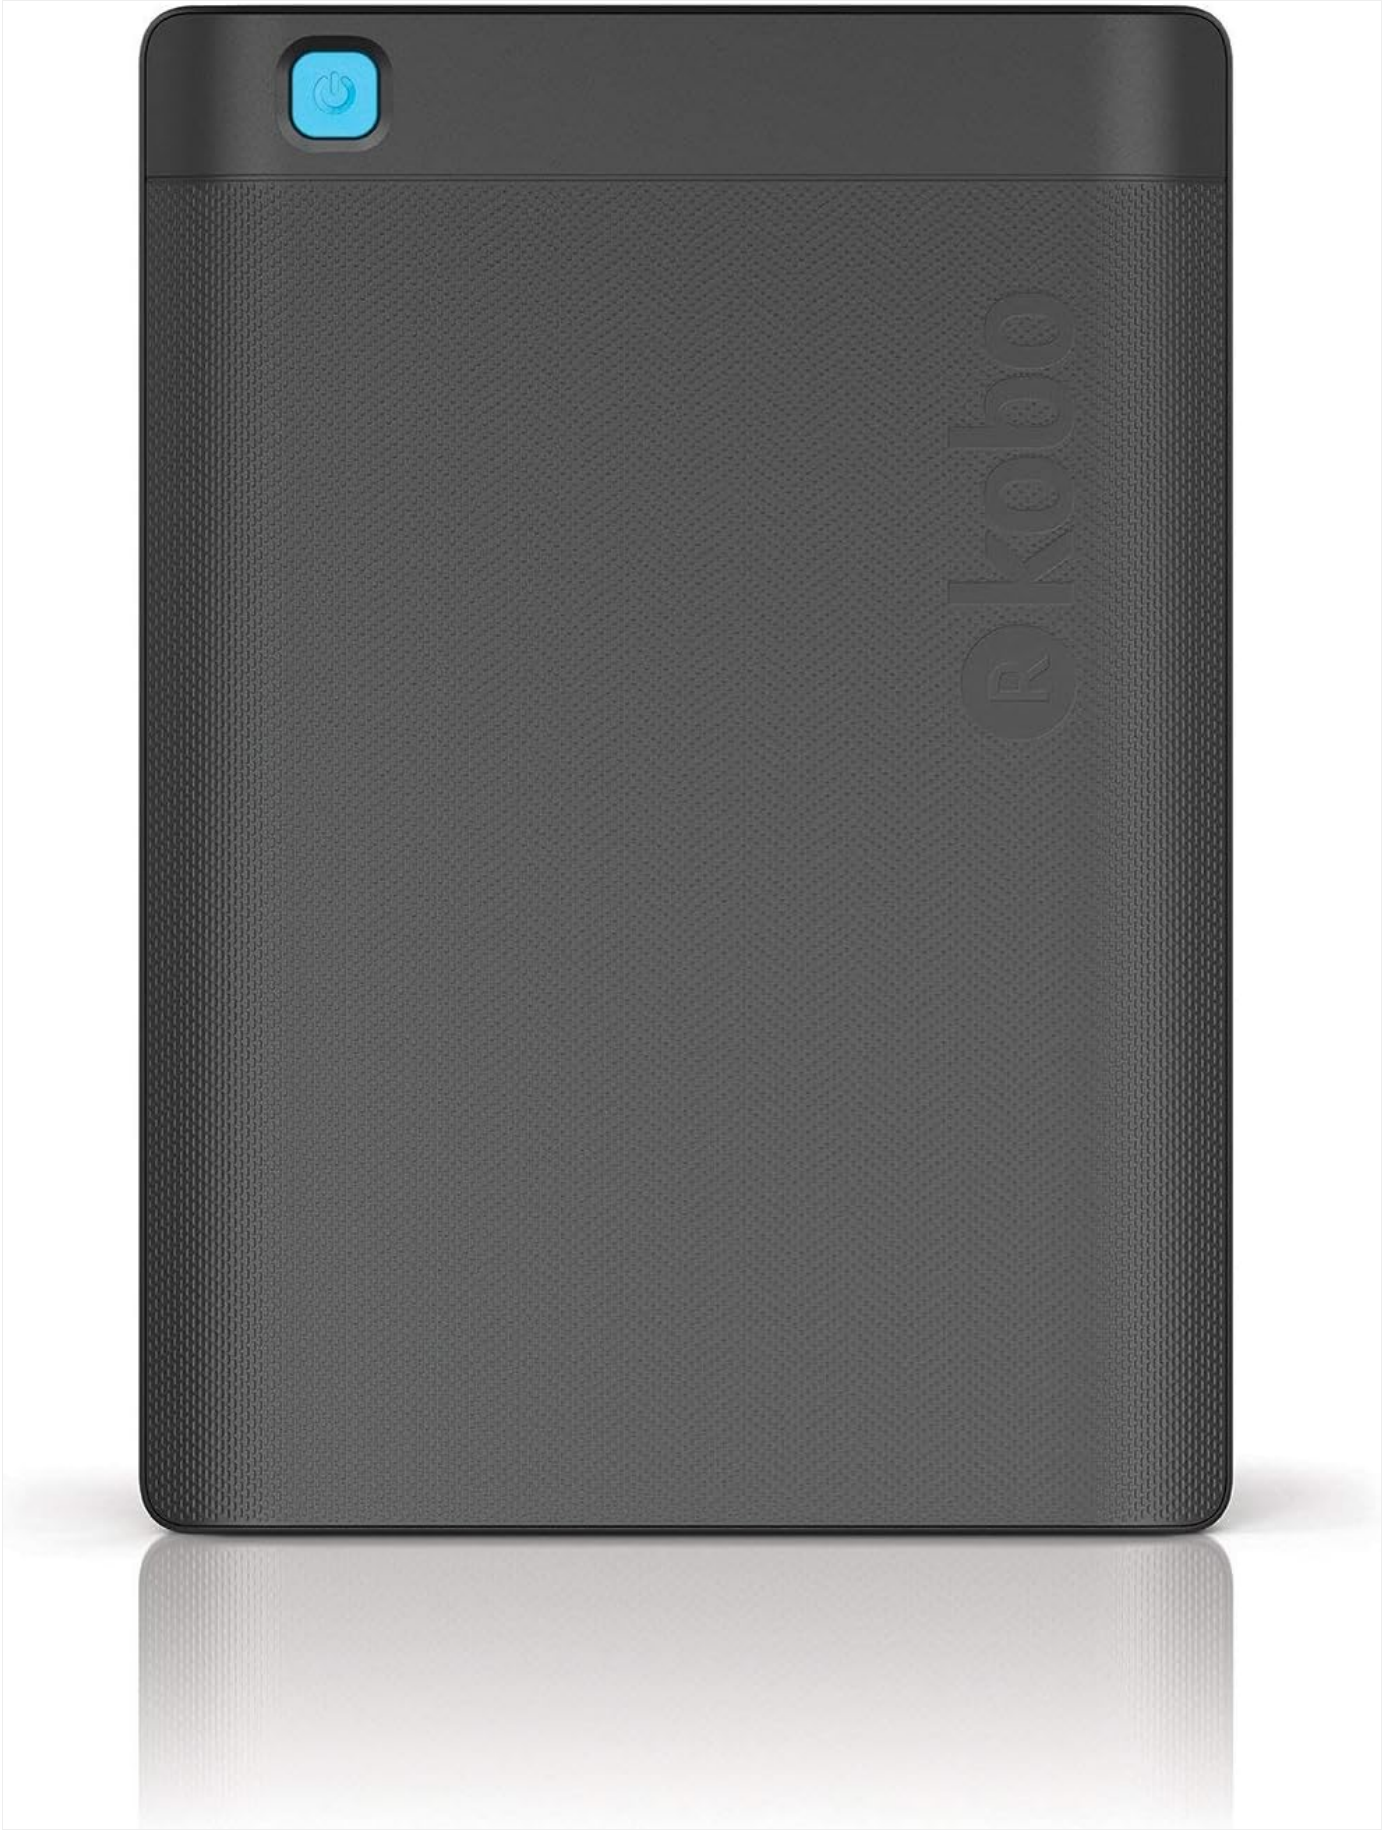


Figure 1: Front view of the Kobo Aura eBook Reader, showing a book open on its screen.

Setup

1. **Charge Your Device:** Before first use, fully charge your Kobo Aura using the provided USB cable connected to a

computer or a compatible USB power adapter. The charging port is typically located at the bottom or side of the device.

2. **Power On:** Press and hold the power button (usually located on the top or side) until the screen activates.
3. **Initial Setup:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and sign in or create a Kobo account. A Wi-Fi connection is required to download books and receive software updates.
4. **Explore the Interface:** Once setup is complete, you will be guided to the home screen where you can browse your library, discover new books, and access settings.

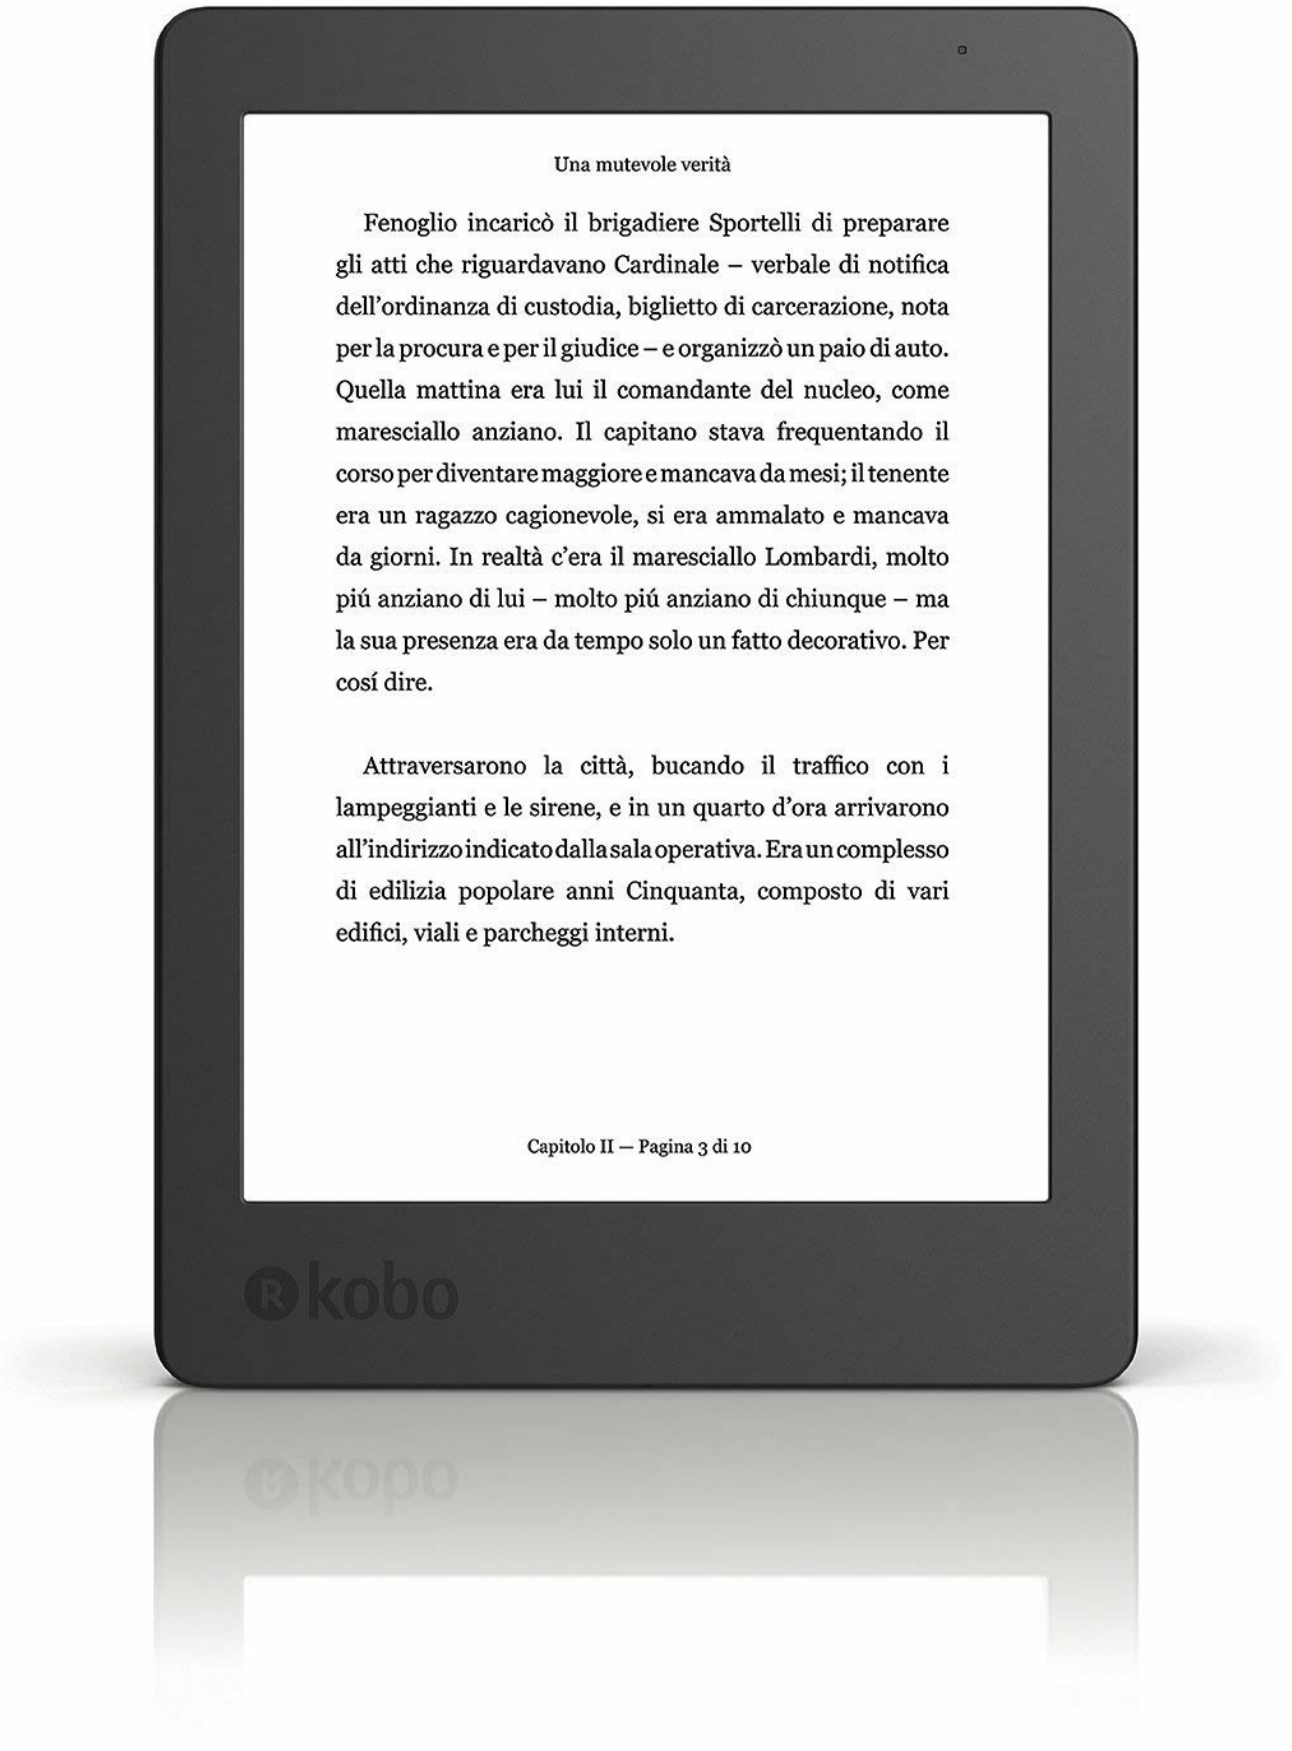


Figure 2: Back view of the Kobo Aura, highlighting the textured surface and the power button.

Operating Instructions

Navigating Your Kobo Aura

- **Touchscreen Gestures:**
  - Tap to turn pages while reading.
  - Swipe left or right to navigate through menus or books.
  - Tap the center of the screen while reading to bring up reading options and settings.
- **Home Screen:** Access your library, the Kobo Store, and reading statistics from the main home screen.
- **Library:** All your downloaded books are stored here. You can sort and filter them as needed.
- **Kobo Store:** Browse and purchase new eBooks directly from your device.

Adjusting Reading Settings

- **ComfortLight:** The Kobo Aura features an adjustable front-light. Tap the light icon (usually at the top of the screen) to adjust brightness and natural light settings. You can customize the warmth of the light for comfortable reading at any time of day.
- **Font Settings:** While reading, tap the center of the screen, then select the 'Aa' icon to change font type, size, line spacing, and margins.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the screen and body of your Kobo Aura. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly, but avoid leaving it fully discharged for extended periods.
- **Software Updates:** Connect your Kobo Aura to Wi-Fi periodically to check for and install software updates. Updates often include performance improvements and new features.
- **Storage:** Keep your device in a protective cover when not in use to prevent scratches and damage.

Troubleshooting

Device Not Turning On:
Ensure the device is fully charged. Connect it to a power source for at least 30 minutes, then try pressing and holding the power button for 15-20 seconds.

Screen Frozen or Unresponsive:
Perform a soft reset by pressing and holding the power button for 15-20 seconds until the device restarts. If this doesn't work, a hard reset might be necessary (consult Kobo support for instructions, as this may erase data).

Cannot Connect to Wi-Fi:

- Ensure your Wi-Fi network is active and within range.
- Verify the Wi-Fi password.
- Try restarting your Wi-Fi router.
- Restart your Kobo Aura.

Books Not Downloading:
Check your Wi-Fi connection. Ensure you are signed into your Kobo account. Verify that your payment method is up to date if purchasing new content.

Specifications

Feature	Detail
Brand	Kobo
Model Name	Aura
Model Number	121824
Display Technology	Electronic Ink (Pearl E Ink)
Screen Size	6 inches
Display Resolution	1024x768
Memory Storage Capacity	4 GB
Connectivity Technology	Wi-Fi
Supported File Format	EPUB
Human-Interface Input	Touchscreen
Item Weight	0.2 kg
Color	Black
GTIN / UPC	681495007233

Warranty and Support

Specific warranty details for your Kobo Aura eBook Reader are typically provided at the point of purchase or within the product packaging. For detailed warranty information, please refer to the documentation included with your device or visit the official Kobo website.

For technical support, frequently asked questions, or further assistance, please visit the official Kobo support page. You can usually find contact information for customer service on their website.

Note: This manual provides general guidance. Product features and software may be updated. Always refer to the latest information available from Kobo for the most accurate and up-to-date details.

© 2023 Kobo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01KWX0EL4

More documents and user manuals: **https://manuals.plus/**