Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nexera 105131

Nexera Rustik 3 Drawers TV Stand User Manual

Model: 105131 | Brand: Nexera

1. Product Overview

The Nexera Rustik 3 Drawers TV Stand, Model 105131, is a 60-inch entertainment unit designed to complement modern living spaces. This stand features a walnut finish, offering both aesthetic appeal and practical storage solutions. It is part of the Rustik collection, known for its wood grain design, smart features, and efficient wire management.



Image 1.1: Fully assembled Nexera Rustik TV Stand, 60-inch, Walnut.

Key Features:

- Accommodates TV screens up to 66 inches.
- Three storage drawers equipped with metal slides for smooth operation.
- Three open spaces designed for electronic components, ensuring optimal air flow.
- Integrated wire access points for organized cable management.
- Constructed with top-quality melamine finish, providing scratch, stain, and water resistance.
- Rustic style design in a walnut finish.

2. Safety Information

Always prioritize safety during assembly and use of the TV stand. Failure to follow these guidelines may result in injury or damage to the product.

- **Assembly:** Assemble the TV stand strictly according to the provided instructions. Do not deviate from the steps or use unauthorized parts.

- **Tip-Over Prevention:** Secure the television to the stand using appropriate safety straps or anti-tip brackets. This is crucial to prevent accidental tip-overs, especially in households with children or pets.
- **Weight Distribution:** Distribute weight evenly across the stand. Avoid placing heavy objects on the top shelves or in a manner that could cause imbalance.
- **Clearance:** Keep the area around the TV stand clear of heavy objects or items that could fall and cause damage or injury.
- **Placement:** Place the TV stand on a level, stable surface to ensure stability.
- **Overloading:** Do not exceed the maximum weight capacity of the stand or its individual shelves/drawers. Refer to the specifications section for weight limits.

3. Assembly Instructions

This TV stand requires assembly. It is recommended that two adults perform the assembly to ensure safety and proper construction. Please read all instructions carefully before beginning.

3.1. Unpacking and Part Identification

- Carefully unpack all components from the box.
- Verify that all parts and hardware listed in the instruction manual are present and undamaged. Contact customer support immediately if any parts are missing or damaged.
- Lay out all parts on a soft, clean surface (e.g., a blanket or carpet) to prevent scratches during assembly.

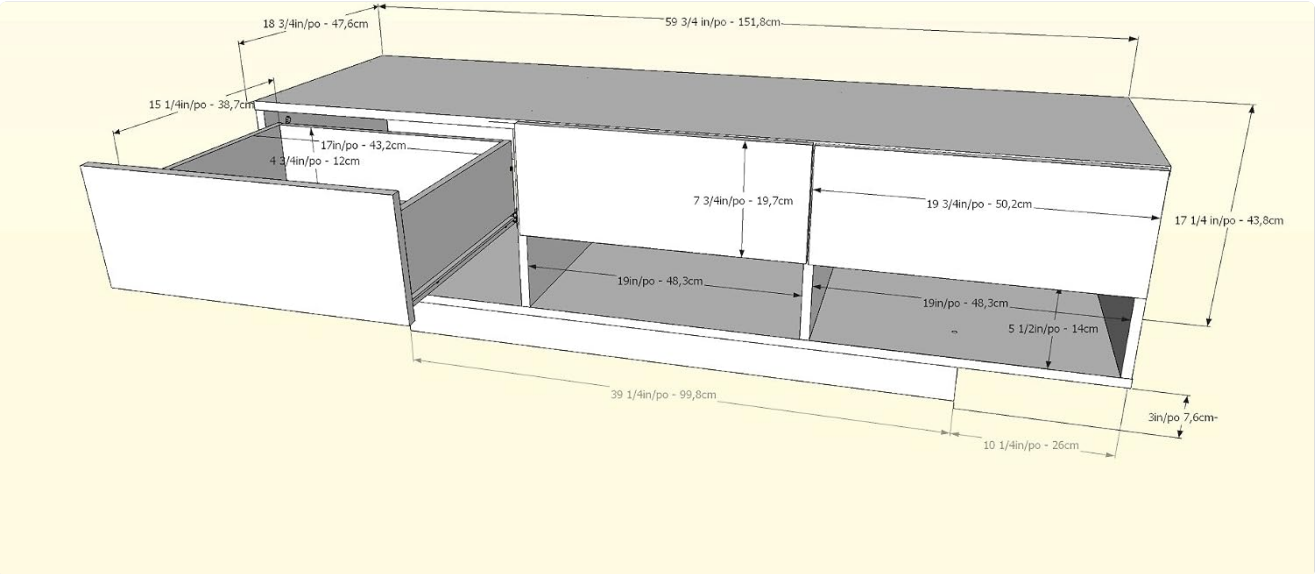


Image 3.1: Dimensional diagram of the Nexera Rustik TV Stand, illustrating key measurements for assembly and placement.

3.2. General Assembly Steps

1. **Prepare the Base:** Begin by assembling the base structure of the TV stand according to the diagrams in your specific instruction manual.
2. **Attach Side Panels:** Securely attach the side panels to the base and any internal dividers using the provided hardware. Ensure all connections are tight.
3. **Install Drawer Slides:** Mount the drawer slides to the internal panels as indicated. Pay close attention to the orientation of the slides.
4. **Assemble Drawers:** Construct the three drawers. Ensure all drawer components are correctly aligned and secured.
5. **Insert Drawers:** Carefully insert the assembled drawers onto their respective slides. Test for smooth

operation.

6. **Attach Back Panel:** Secure the back panel to the rear of the stand. This often provides additional structural integrity and helps with cable management.
7. **Place Top Panel:** Position and secure the top panel of the TV stand.
8. **Final Checks:** Once assembled, gently move the stand to its desired location. Ensure it is level and stable. Re-tighten any loose fasteners if necessary.

Note: Refer to the detailed step-by-step diagrams and instructions included in your product packaging for precise assembly.

4. Operating Instructions

Once assembled, the Nexera Rustik TV Stand is ready for use. Follow these guidelines for optimal functionality.

4.1. Placing Your Television

- Place your television centrally on the top surface of the stand.
- Ensure the TV's base fits entirely within the stand's top surface.
- Verify that the television's weight does not exceed the stand's maximum weight capacity. This stand is designed to fit TVs up to 66 inches.
- For added safety, consider using an anti-tip strap to secure the TV to the wall or the stand itself.

4.2. Using Storage Drawers and Open Compartments

The stand features three open compartments and three drawers for organized storage of media devices, accessories, and other items.



Image 4.1: An open drawer of the TV stand, demonstrating storage capacity for media and accessories.

- **Open Compartments:** Utilize the three open spaces for electronic components such as cable boxes, gaming consoles, or soundbars. Ensure adequate ventilation around devices.
- **Drawers:** The three drawers provide enclosed storage for remotes, media (DVDs, Blu-rays), game controllers, or other items you wish to keep out of sight.
- Avoid overloading drawers to ensure smooth operation of the metal slides.

4.3. Cable Management

The stand is designed with wire access points to help manage and conceal cables from your television and media devices.

- Route all power and signal cables through the designated openings in the back panel.
- Use cable ties or wraps to bundle cables neatly, preventing tangles and improving air circulation.
- Ensure cables are not pinched or strained, which could damage them or create a fire hazard.

5. Maintenance

Proper care and maintenance will extend the life and appearance of your Nexera Rustik TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the melamine finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage, especially on the wood grain finish.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain structural integrity.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.
- **Heat:** Do not place hot items directly on the surface without protective coasters.

6. Troubleshooting

If you encounter issues with your TV stand, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners; uneven floor; incorrect assembly.	Check and tighten all screws and bolts. Ensure the stand is on a level surface; use shims if necessary. Review assembly steps.
Drawers do not slide smoothly or get stuck.	Drawer slides incorrectly installed; drawer overloaded; debris in slides.	Ensure drawer slides are correctly aligned and installed. Reduce weight in drawers. Clean slides of any dust or debris.
Missing parts or damaged components upon arrival.	Manufacturing error; shipping damage.	Do not proceed with assembly. Contact Nexera customer support immediately with your product model number and a description of the issue.
Difficulty aligning holes during assembly.	Parts oriented incorrectly; minor manufacturing tolerance.	Double-check part orientation against diagrams. Apply gentle pressure to align. If holes are completely missing, contact customer support.

7. Product Specifications

Detailed specifications for the Nexera Rustik 3 Drawers TV Stand, Model 105131.

Specification	Detail
Brand	Nexera
Model Name	Nexera 105131 Rustik TV Stand, 60-inch, 3 Drawers, Walnut
Item Model Number	105131
Color	Walnut
Product Dimensions (L x W x H)	59.75 x 18.75 x 17.25 inches
Item Weight	80 Pounds

Specification	Detail
Material	Melamine (Frame and Top Material), Engineered Wood (Back Material)
Mounting Type	Floor Mount (Freestanding)
Number of Drawers	3
Number of Open Compartments	3
Assembly Required	Yes
UPC	687174987223

8. Warranty and Customer Support

Nexera products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official Nexera website. If you require assistance with assembly, have questions about your product, or need to report missing/damaged parts, please contact Nexera customer support directly.

When contacting support, please have your model number (105131) and proof of purchase readily available to expedite the process.

Online Support: www.nexeradesign.com (Check for a support or contact section)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01M1NYQSB

More documents and user manuals: **https://manuals.plus/**