Nettech IR AKB72915239

Nettech Universal Remote Control for LG Smart TVs

Model: IR AKB72915239

1. Introduction and Overview

Thank you for choosing the Nettech Universal Remote Control for your LG Smart TV. This remote is designed to be a direct replacement for your original LG TV remote, offering seamless functionality without the need for complex programming. Its compact design ensures a comfortable and secure grip.

Important Notice: This remote is an infrared (IR) remote. **IT DOES NOT support voice control or pointer function.**

This remote is compatible with various LG Smart TVs, including LCD, LED, HDTV, and 3D models. It replaces original LG Smart Universal Controls such as AKB75095307, AKB74475401, AKB74475433, AKB73975702, AKB75055701, AKB73975711, AKB73715608, AKB74475401, AKB75375604, and AGF76631064.



Image 1: Nettech Universal Remote Control shown alongside an LG TV, highlighting its broad compatibility with various LG TV models.

2. Setup Instructions

Setting up your Nettech Universal Remote Control is quick and easy. No programming or complex setup is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote is now ready for immediate use. It will work instantly once the batteries are inserted.



Image 2: Front and side views of the Nettech Universal Remote Control, illustrating its ergonomic design and the location of the battery compartment on the back.

3. Operating Instructions

This remote control is designed for intuitive operation, mirroring the functions of your original LG TV remote. Below is a guide to the main buttons and their uses:

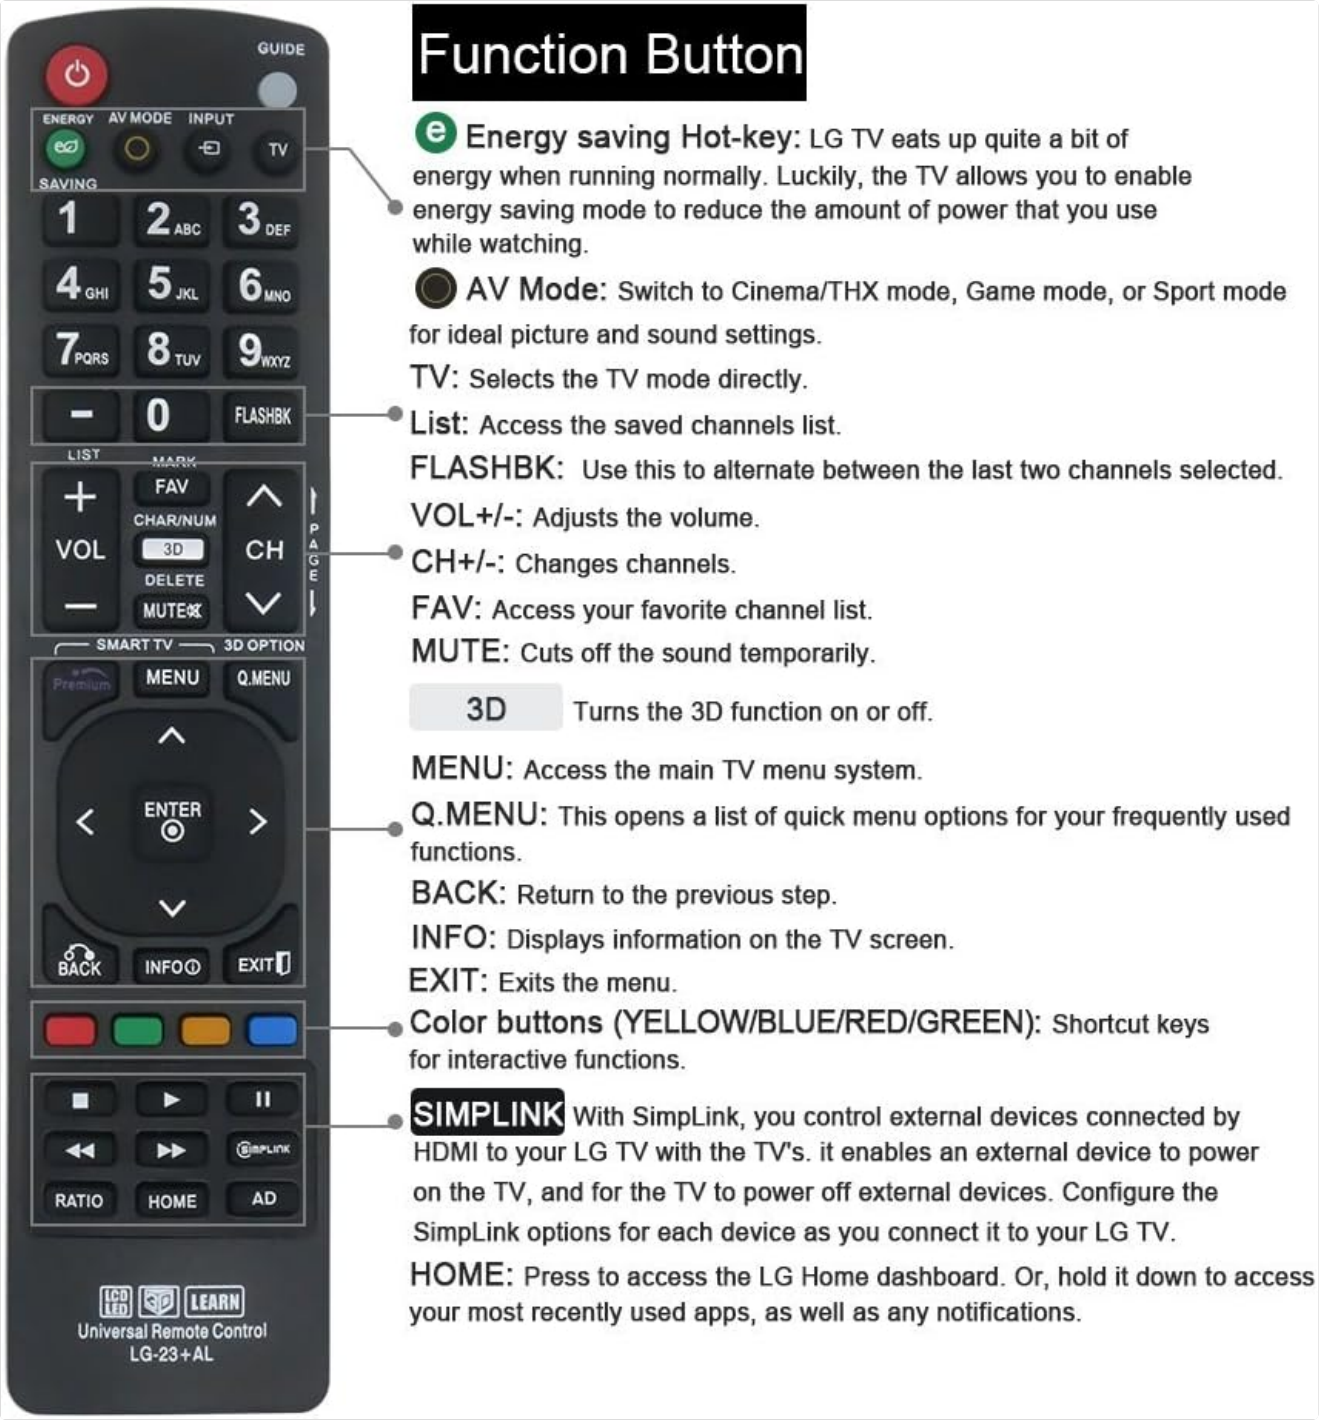


Image 3: A detailed diagram labeling the various function buttons on the Nettech Universal Remote Control.

- **Power Button (Red):** Turns the TV on or off.
- **Number Pad (0-9):** Directly select channels.
- **Energy Saving (Green 'e' icon):** Activates LG's energy-saving mode to reduce power consumption.
- **AV Mode:** Switches between various picture and sound settings like Cinema/THX, Game, or Sport mode.
- **TV:** Selects the TV mode directly.
- **List:** Accesses the saved channels list.
- **FLASHBK:** Use this to alternate between the last two channels selected.
- **VOL +/-:** Adjusts the volume.
- **CH +/-:** Changes channels.
- **FAV:** Accesses your favorite channel list.
- **MUTE:** Mutes the TV sound.

- **3D:** Turns the 3D function on or off (if supported by your TV).
- **MENU:** Accesses the main TV menu system.
- **Q.MENU:** Opens a list of quick menu options for frequently used functions.
- **BACK:** Returns to the previous step or screen.
- **INFO:** Displays information on the TV screen.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (Yellow/Blue/Red/Green):** Shortcut keys for interactive functions, specific to content or applications.
- **SIMPLINK:** With Simplink, you can control external devices connected by HDMI to your LG TV. This enables the TV to power on/off external devices. Configure Simplink options via your LG TV settings.
- **HOME:** Press to access the LG Home dashboard. Hold down to access your most recently used apps or notifications.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix and Prime Video allow for instant access.

4. Maintenance

To ensure the longevity and optimal performance of your Nettech Universal Remote Control, follow these simple maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote or exposing it to strong impacts, which can damage internal components.

5. Troubleshooting

If you encounter any issues with your Nettech Universal Remote Control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with fresh AAA batteries.
  - Ensure there are no obstructions between the remote and the TV's IR receiver.
  - Point the remote directly at the TV.
- **Buttons Not Working:**
  - Clean the remote's surface, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
  - If only specific buttons are not working, it might indicate a hardware issue.
- **TV Not Turning On/Off:**

- Verify that the TV is plugged into a power source and is receiving power.
- Ensure the remote is within effective range of the TV.

- **No Voice Control or Pointer Function:**
  - As stated in the introduction, this is an infrared remote and does not support voice control or pointer functions. This is normal operation for this model.

If these steps do not resolve the issue, please contact customer support for further assistance.

6. Specifications

Detailed specifications for your Nettech Universal Remote Control:



Image 4: A visual representation of the key specifications for the Nettech Universal Remote Control.

- **Brand:** Nettech
- **Model Number:** FBA_NettechLG-23+AL (IR AKB72915239)
- **Material:** ABS & Plastic
- **Color:** Black
- **Product Dimensions:** Approximately 8.3 x 1.9 inches (2.99 x 2.99 x 2.99 inches as per general product dimensions, but 8.3x1.9 is more specific for a remote)
- **Item Weight:** 3 ounces
- **Batteries:** 2 x AAA batteries required (included)
- **Compatible Devices:** LG Smart TVs (LCD, LED, HDTV, 3D, WebOS, NanoCell Smart TVs)
- **Max Number of Supported Devices:** 10 (for universal control, though primarily designed for LG)
- **Special Feature:** Extended transmission range, stable performance, no programming required.

7. Warranty and Support

Your Nettech Universal Remote Control comes with a **1-Year Full Warranty**, ensuring peace of mind regarding its quality and performance.

For any questions, technical assistance, or warranty claims, please contact the seller or manufacturer directly through the platform where you purchased the product. Please have your model number (IR AKB72915239) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question