KODAK KPHC-120

KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120 - 120 Pack Instruction Manual

Model: KPHC-120 | Brand: KODAK

1. Introduction and Product Overview

This manual provides essential instructions for the KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120. This product includes a combination ink cartridge and photo sheets designed for use with compatible Kodak Dock Printers. It utilizes D2T2 innovation for advanced dye diffusion transfer technology, ensuring bold, vibrant colors and maximum gradation to reduce blurring and distortion. A unique 4th layer overcoat laminates the paper, preserving image quality and creating a humidity and fingerprint-resistant finish that will not fade.

The PHC-120 pack contains supplies for 120 photos, making it suitable for printing various types of images, including portrait photos, landscapes, family pictures, and greeting cards.

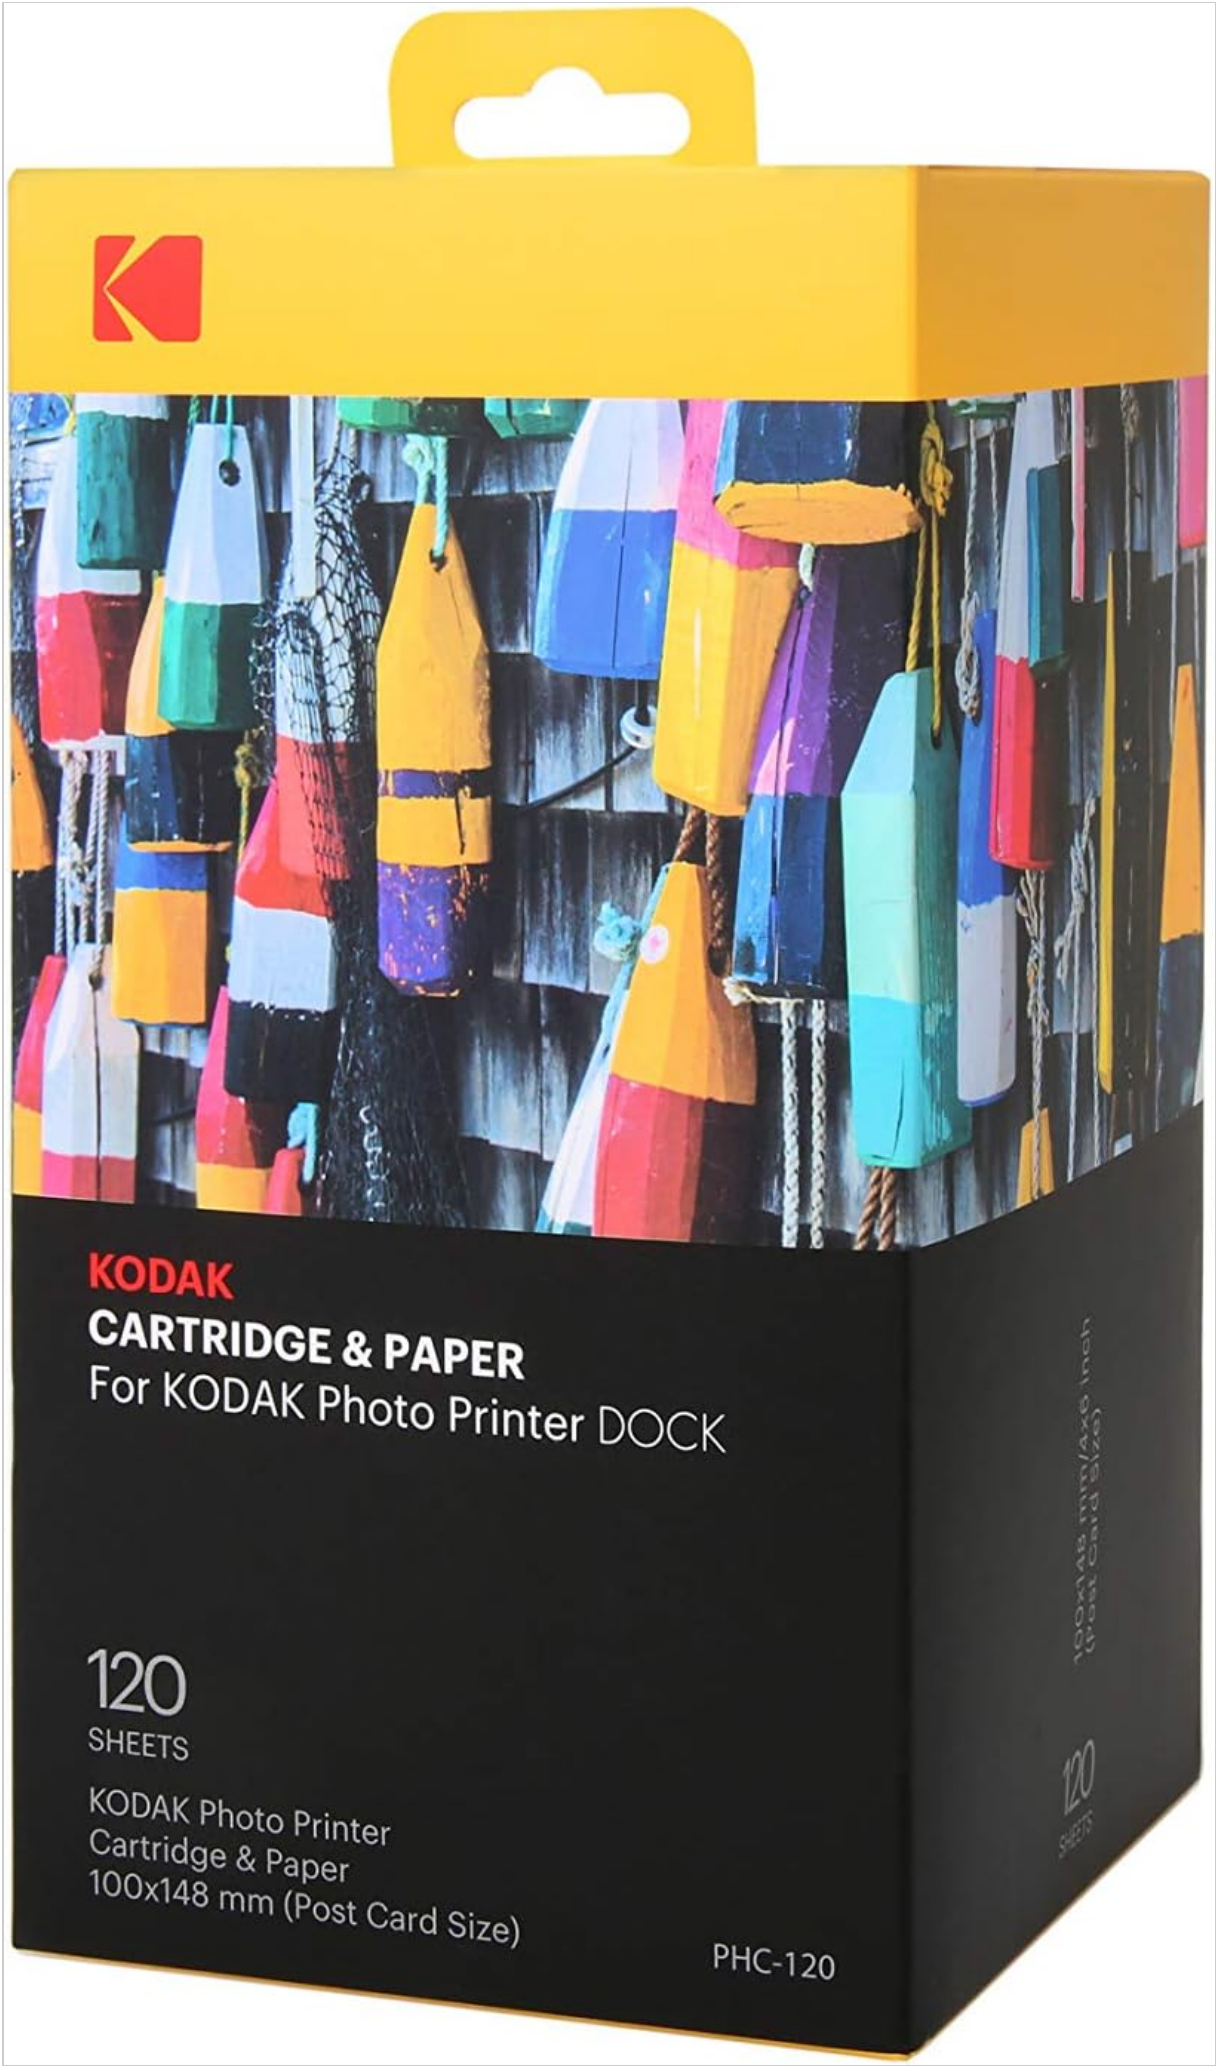

KODAK
CARTRIDGE & PAPER
For KODAK Photo Printer DOCK
120
SHEETS
KODAK Photo Printer
Cartridge & Paper
100x148 mm (Post Card Size)
PHC-120
100x148 mm/4x6 inch
(Post Card Size)
120
SHEETS

Figure 1: KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120 product box. This box contains the ink cartridge and photo paper.

2. Setup and Installation

Installing the KODAK Dock Plus & Dock Photo Printer Cartridge and photo sheets is a straightforward process. Ensure your printer is powered off before beginning installation.

2.1. Installing the Photo Paper

1. Open the paper slot on your Kodak Dock Printer.
2. Carefully insert the stack of photo paper into the paper tray. Ensure the glossy side of the paper is facing up and the stack is aligned correctly. Do not touch the print side of the photo paper.
3. Close the paper slot securely.

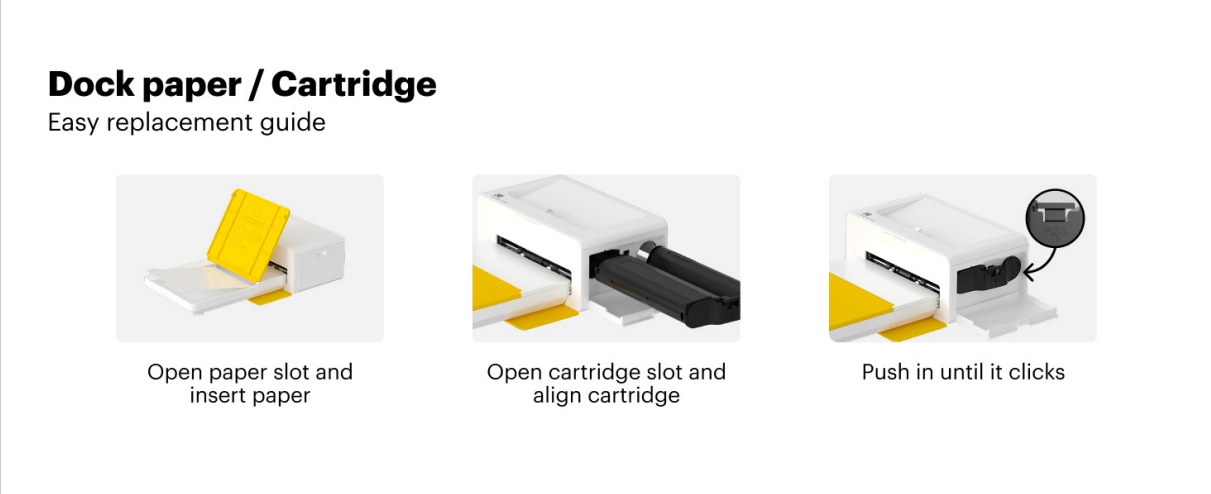


Figure 2: Easy replacement guide. This image illustrates the steps for opening the paper slot, inserting paper, opening the cartridge slot, aligning the cartridge, and pushing it until it clicks.

2.2. Installing the Ink Cartridge

1. Locate the cartridge slot on your Kodak Dock Printer.
2. If an old cartridge is present, gently pull it out with two fingers to eject it.
3. Unpack the new PHC-120 ink cartridge.
4. Align the new cartridge with the slot and gently push it in until you hear a click, indicating it is securely in place.



Figure 3: A KODAK Dock Photo Printer with the ink cartridge correctly inserted into its designated slot.

2.3. Video Guide: Cartridge and Paper Installation

Your browser does not support the video tag.

Video 1: This video demonstrates the process of installing the Kodak cartridge and paper pack into the printer, showing how to open the paper tray, load paper, and insert the ink cartridge.

Your browser does not support the video tag.

Video 2: This video provides a visual guide on how to install the 80-sheet photo paper and two cartridges, detailing the steps for proper placement.

3. Operating Instructions

Once the cartridge and paper are installed, you can begin printing high-quality photos from your compatible Kodak Dock Printer. The printer uses advanced dye diffusion transfer technology (D2T2) to apply colors quickly and evenly, resulting in maximum gradation and reduced blurring.

3.1. Printing Process

1. Connect your smartphone or device to the Kodak Dock Printer via Bluetooth or by docking it directly.
2. Open the Kodak Photo Printer application on your device.
3. Select the desired photo(s) from your gallery.
4. Choose your preferred print settings (e.g., border or borderless, quantity).
5. Initiate the print command from the app. The printer will process the image in multiple passes, applying yellow, magenta, cyan, and a protective overcoat layer.
6. Once printing is complete, the photo will be ejected. Allow a moment for the print to fully dry and set.

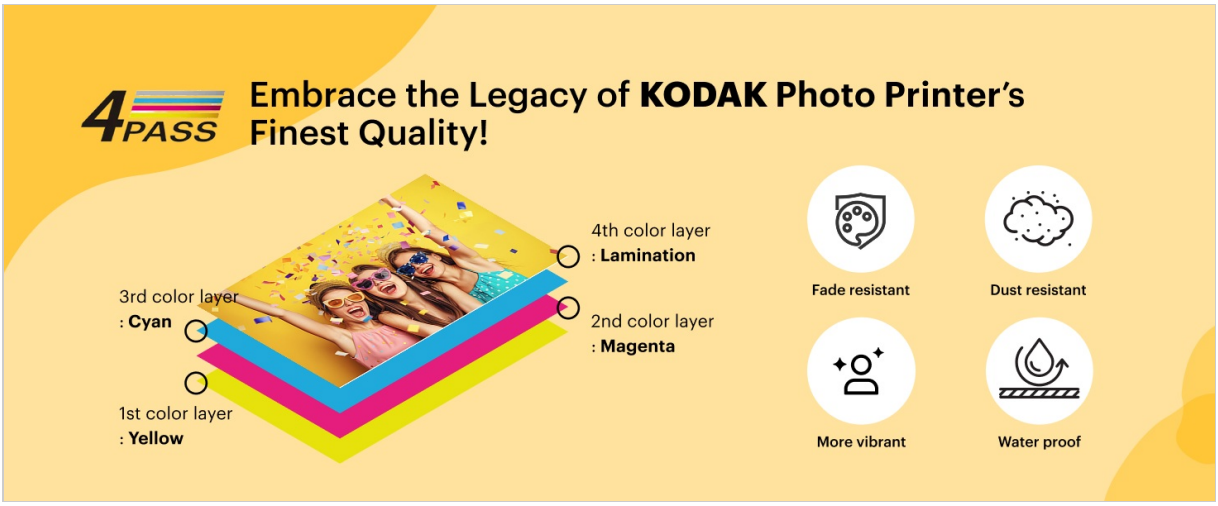


Figure 4: This diagram explains the KODAK 4PASS Dye sub printing process, showing the sequential layering of yellow, magenta, cyan, and a lamination layer for durable prints.

3.2. Print Options and Quality

The KODAK Dock Printer supports 4x6 inch photo sizes and offers both border and borderless printing options. The unique 4th layer overcoat provides a protective laminate, making prints resistant to humidity and fingerprints, ensuring they won't fade over time.

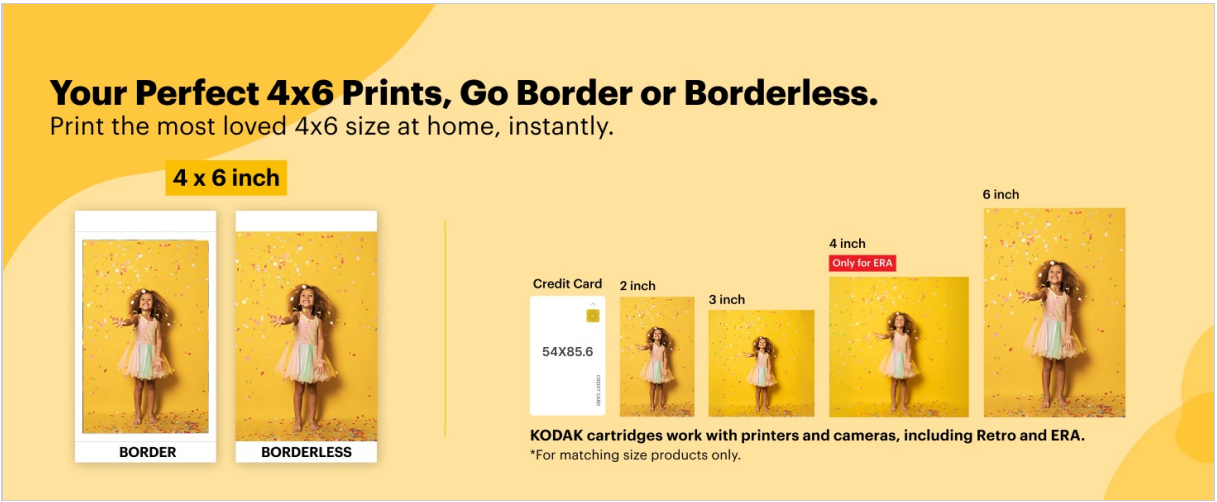


Figure 5: This image displays examples of 4x6 inch photos, illustrating both border and borderless printing options available with the Kodak Dock Printer.

3.3. Video Guide: Printing Demonstration

Your browser does not support the video tag.

Video 3: This video provides a review of the Kodak Dock Plus 4PASS, including an app and print demonstration, showcasing the printing process and results.

Your browser does not support the video tag.

Video 4: This video demonstrates printing a picture from a phone using the Kodak Dock Printer, highlighting the ease of use and the final print quality.

4. Maintenance

The KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120 is designed for easy maintenance. The simple cartridge refills are effortless to remove and replace. When the cartridge is empty or needs replacement, simply pull it out with two fingers and insert a new one to resume printing.



Figure 6: The KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120, showing the ink cartridge and photo paper sheets. These components are designed for easy replacement.

5. Troubleshooting

If you encounter issues with your KODAK Dock Photo Printer or cartridge, consider the following common troubleshooting steps:

- **Printer Not Responding:** Ensure the printer is properly connected to a power source and turned on. Check the connection between your device and the printer (Bluetooth or docked connection).
- **Poor Print Quality:** Verify that the ink cartridge is correctly installed and not empty. Ensure the photo paper is loaded correctly with the glossy side up and is not damaged.
- **Paper Jams:** Make sure the paper tray is not overloaded and the paper is aligned properly. Remove any jammed paper carefully according to your printer's specific instructions.
- **Cartridge Error:** Re-insert the ink cartridge to ensure it is seated correctly. If the error persists, the cartridge may be faulty or empty and require replacement.

For more detailed troubleshooting, refer to the complete user manual provided with your Kodak Dock Printer or visit the official KODAK support website.

6. Specifications

Feature	Detail
Product Dimensions	4.33 x 7.87 x 3.54 inches
Item Weight	1 pounds
Item Model Number	KPHC-120
Brand	KODAK

Ink Color	Black (for color printing)
Page Yield	2400 (This value seems to be for a different product, actual yield is 120 photos per pack)
Compatibility Options	Printer
Compatible Printer Models	KODAK PD450, KODAK PD450WIFI, KODAK PD460, KODAK PD480
Number of Items	1 (containing cartridge and paper for 120 prints)
Date First Available	September 29, 2016

7. Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your KODAK Dock Plus & Dock Photo Printer Cartridge PHC-120 or visit the official KODAK website. You can also find additional support and FAQs on the product's Amazon page or by contacting KODAK customer service directly.