Norifon DB-L80-U

Norifon DB-L80 USB Charger Instruction Manual

Model: DB-L80-U

Introduction

This manual provides essential instructions for the safe and efficient use of your Norifon DB-L80 USB Charger. Please read this manual thoroughly before use and retain it for future reference.

Package Contents

Verify that all items listed below are included in your package:

- 1 x Norifon DB-L80 USB Charger
- 1 x Micro USB Cable (30cm / 11.8 inches)

Specifications

Specification	Value
Input	5V
Output	4.2V 0.6A 2.5W
Micro USB Cable Length	30cm (11.8 inches)
Product Dimensions	3.31 x 1.85 x 0.79 inches
Item Weight	1.06 ounces (30 Grams)
Certifications	CE, FCC, RoHS

Compatibility

The Norifon DB-L80 USB Charger is compatible with Sanyo cameras using the DB-L80 battery model. Please verify the battery model on your battery's label (not the camera model) to ensure compatibility. Compatible Sanyo Xacti camera models include:

- DMX-CA100, DMX-CA100K, DMX-CA100P, DMX-CA100Y
- DMX-CG10, DMX-CG100, DMX-CG100L, DMX-CG100R, DMX-CG100W, DMX-CG10C, DMX-CG10K, DMX-CG10L, DMX-CG10P
- DMX-CG11, DMX-CG110, DMX-CG110K, DMX-CG110R, DMX-CG11D, DMX-CG11G, DMX-CG11N, DMX-CG11S, DMX-CG11W
- DMX-CS1, DMX-CS1G, DMX-CS1P, DMX-CS1S
- DMX-GH1, DMX-GH1L, DMX-GH1P, DMX-GH1S
- DSC-X1200, DSC-X1200K, DSC-X1200R, DSC-X1250, DSC-X1250N, DSC-X1250S, DSC-X1260, DSC-X1260K, DSC-X1260R
- ICR-XPS01MF, ICR-XPS03MF, ICR-XRS120MF
- VPC-CA100, VPC-CA100EXBK, VPC-CA100EXP, VPC-CA100EXYL, VPC-CA102, VPC-CA102YL
- VPC-CG10, VPC-CG100, VPC-CG100EXBK-B, VPC-CG100EXW-B, VPC-CG102BK, VPC-CG10BK, VPC-CG10EXBK-B, VPC-CG10EXP-B, VPC-CG10EXW-B, VPC-CG10GX, VPC-CG10P
- VPC-CG20, VPC-CG20BK, VPC-CG20EX-B
- VPC-CG21, VPC-CG88, VPC-CS1, VPC-CS1EX-B, VPC-CS1EXP-B, VPC-CS1P
- VPC-GH1, VPC-GH1EX-B, VPC-GH2, VPC-GH3, VPC-GH4, VPC-PD1, VPC-PD2BK
- VPC-X1200, VPC-X1220, VPC-X1420

Setup and Operation

Follow these steps to set up and operate your Norifon DB-L80 USB Charger:

1. **Connect the Charger:** Plug the micro USB cable into the charger's micro USB port. Connect the other end of the USB cable to a power source such as a laptop, PC, power bank, USB wall charger, USB travel charger, or USB car adapter. The charger is designed for indoor and outdoor use.
2. **Insert the Battery:** Carefully insert the DB-L80 battery into the charger slot. Ensure the positive (+) and negative (-) terminals of the battery align correctly with the charger's contacts.
3. **Monitor Charging Status:** The charger features an indicator light to display the charging status:
    - **Blue Light (No-load):** Indicates the charger is powered on but no battery is inserted, or the battery is fully charged.
    - **Red Light:** Indicates the battery is currently charging.
    - **Blue Light (Fully Charged):** Indicates the battery has completed charging.
4. **Remove Battery:** Once the light turns blue, the battery is fully charged. Carefully remove the battery from the charger.



Image: The Norifon DB-L80 USB Charger can be powered by various USB sources like a PC, AC charger, car charger, or power bank.



Image: Detail of the Micro USB port on the charger for connecting the power cable.

Your browser does not support the video tag.

Video: This video demonstrates how to correctly insert a battery into a similar charger and observe the charging indicator lights. It shows the red light for charging and blue for fully charged.

Safety Warnings and Maintenance

To ensure safe operation and prolong the life of your charger, please observe the following:

- Do not open or modify the charger.
- Do not immerse the charger in water or expose it to excessive moisture.
- Use the charger only in dry locations.
- Only use the compatible battery model (DB-L80) with this charger.
- Keep the charger clean and free from dust. Use a soft, dry cloth for cleaning.
- Store the charger in a cool, dry place when not in use.



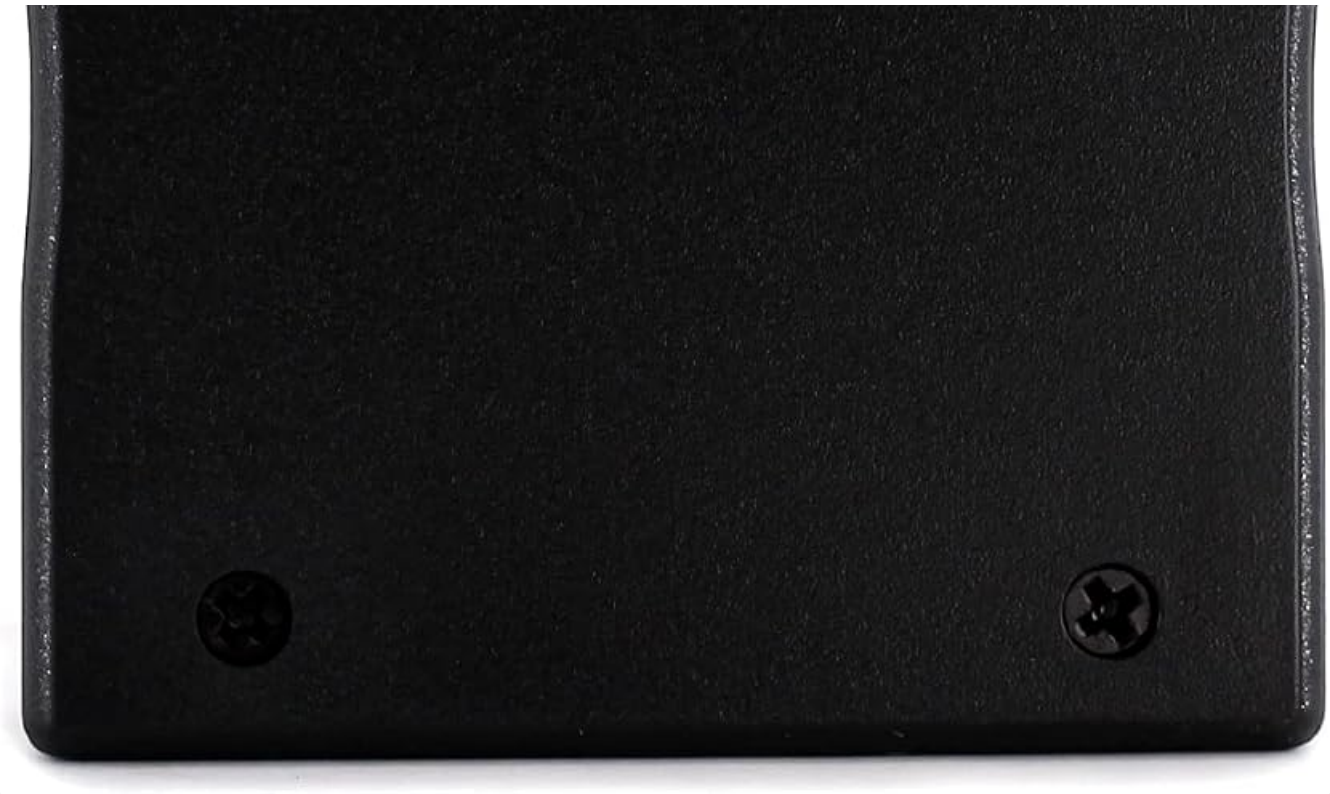


Image: The back of the charger displays important warnings and product specifications, including safety certifications.

Troubleshooting

If you encounter issues with your charger, refer to the following common solutions:

- **Charger Light is Blue but Battery Not Charging:**
  - Ensure the battery is correctly inserted with terminals aligned.
  - Verify the battery model is DB-L80.
  - Check if the battery is already fully charged.
- **No Light on Charger:**
  - Confirm the USB cable is securely connected to both the charger and the power source.
  - Try a different USB power source or outlet.
  - Ensure the power source is active.
- **Slow Charging:**
  - Ensure the power source provides sufficient current (e.g., a standard USB port).
  - Avoid using excessively long or low-quality USB cables.

Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Norifon customer service directly. Keep your purchase receipt as proof of purchase.

© 2026 Norifon. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question