Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sharp EL-334WB

Sharp EL-334WB Business Calculator User Manual

Model: EL-334WB

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your Sharp EL-334WB Business Calculator. This 12-digit desktop calculator features an extra-large LCD for clear display, durable and well-spaced keys for accurate data entry, and specialized functions for business calculations.

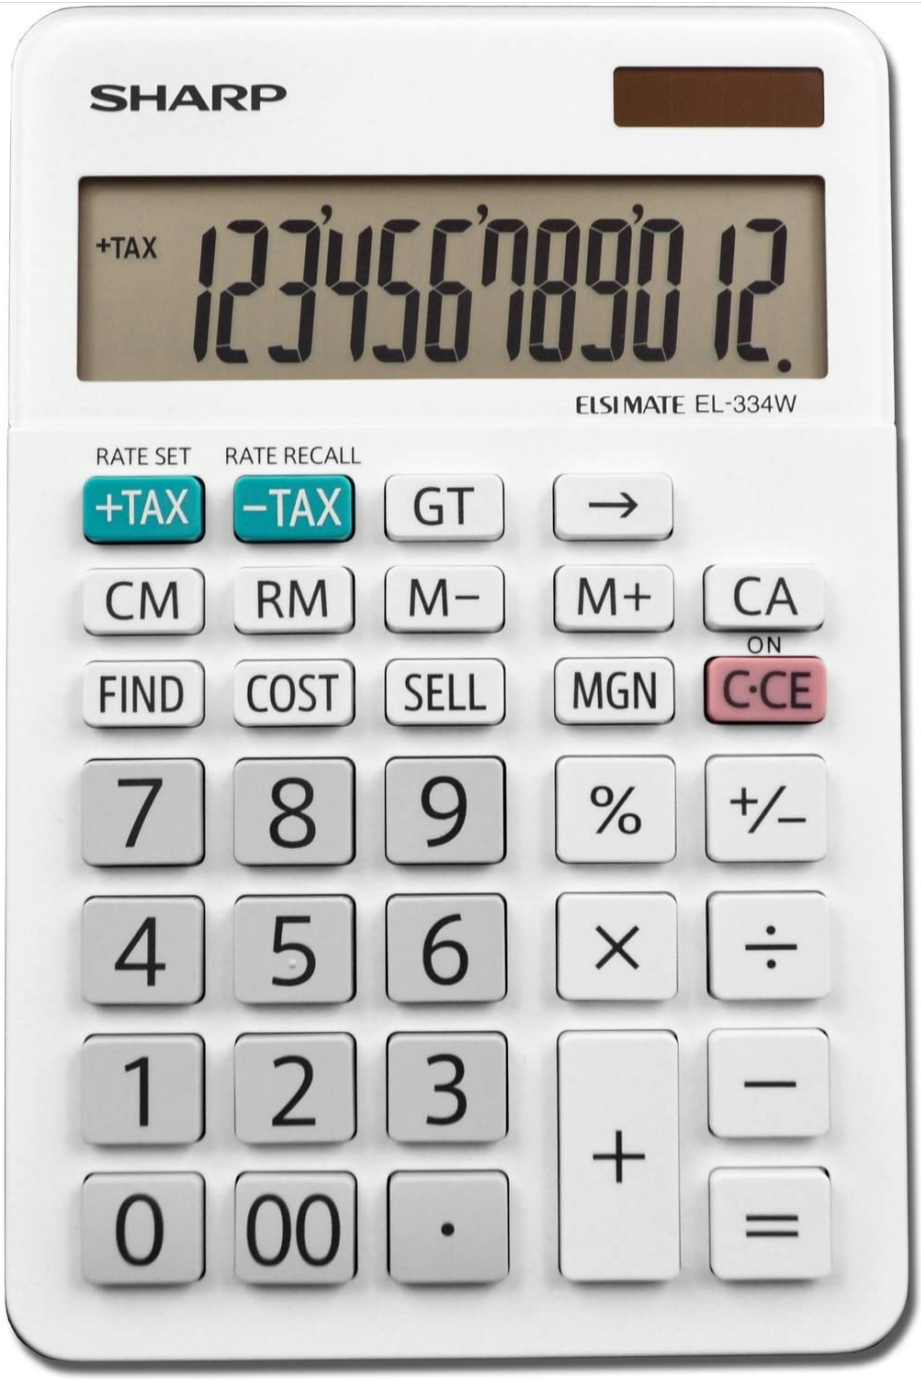


Figure 1: Front view of the Sharp EL-334WB Business Calculator.

2. Setup

2.1 Power Source

The Sharp EL-334WB calculator operates on a twin-power system, utilizing both solar energy and a battery backup. This ensures consistent and reliable performance in various lighting conditions.

- **Solar Power:** The calculator primarily uses solar energy when sufficient light is available. Ensure the solar panel, located above the display, is exposed to light for operation.
- **Battery Backup:** For low-light conditions or when solar power is insufficient, the calculator uses a 1 LR44 battery (included).

2.2 Initial Use

To power on the calculator, simply ensure the solar panel is exposed to light or press any numeric key. The calculator features an

automatic power-down function to conserve energy when not in use.

3. Operating Instructions

The EL-334WB is designed for ease of use with its large, clearly labeled keys and extra-large 12-digit LCD display.

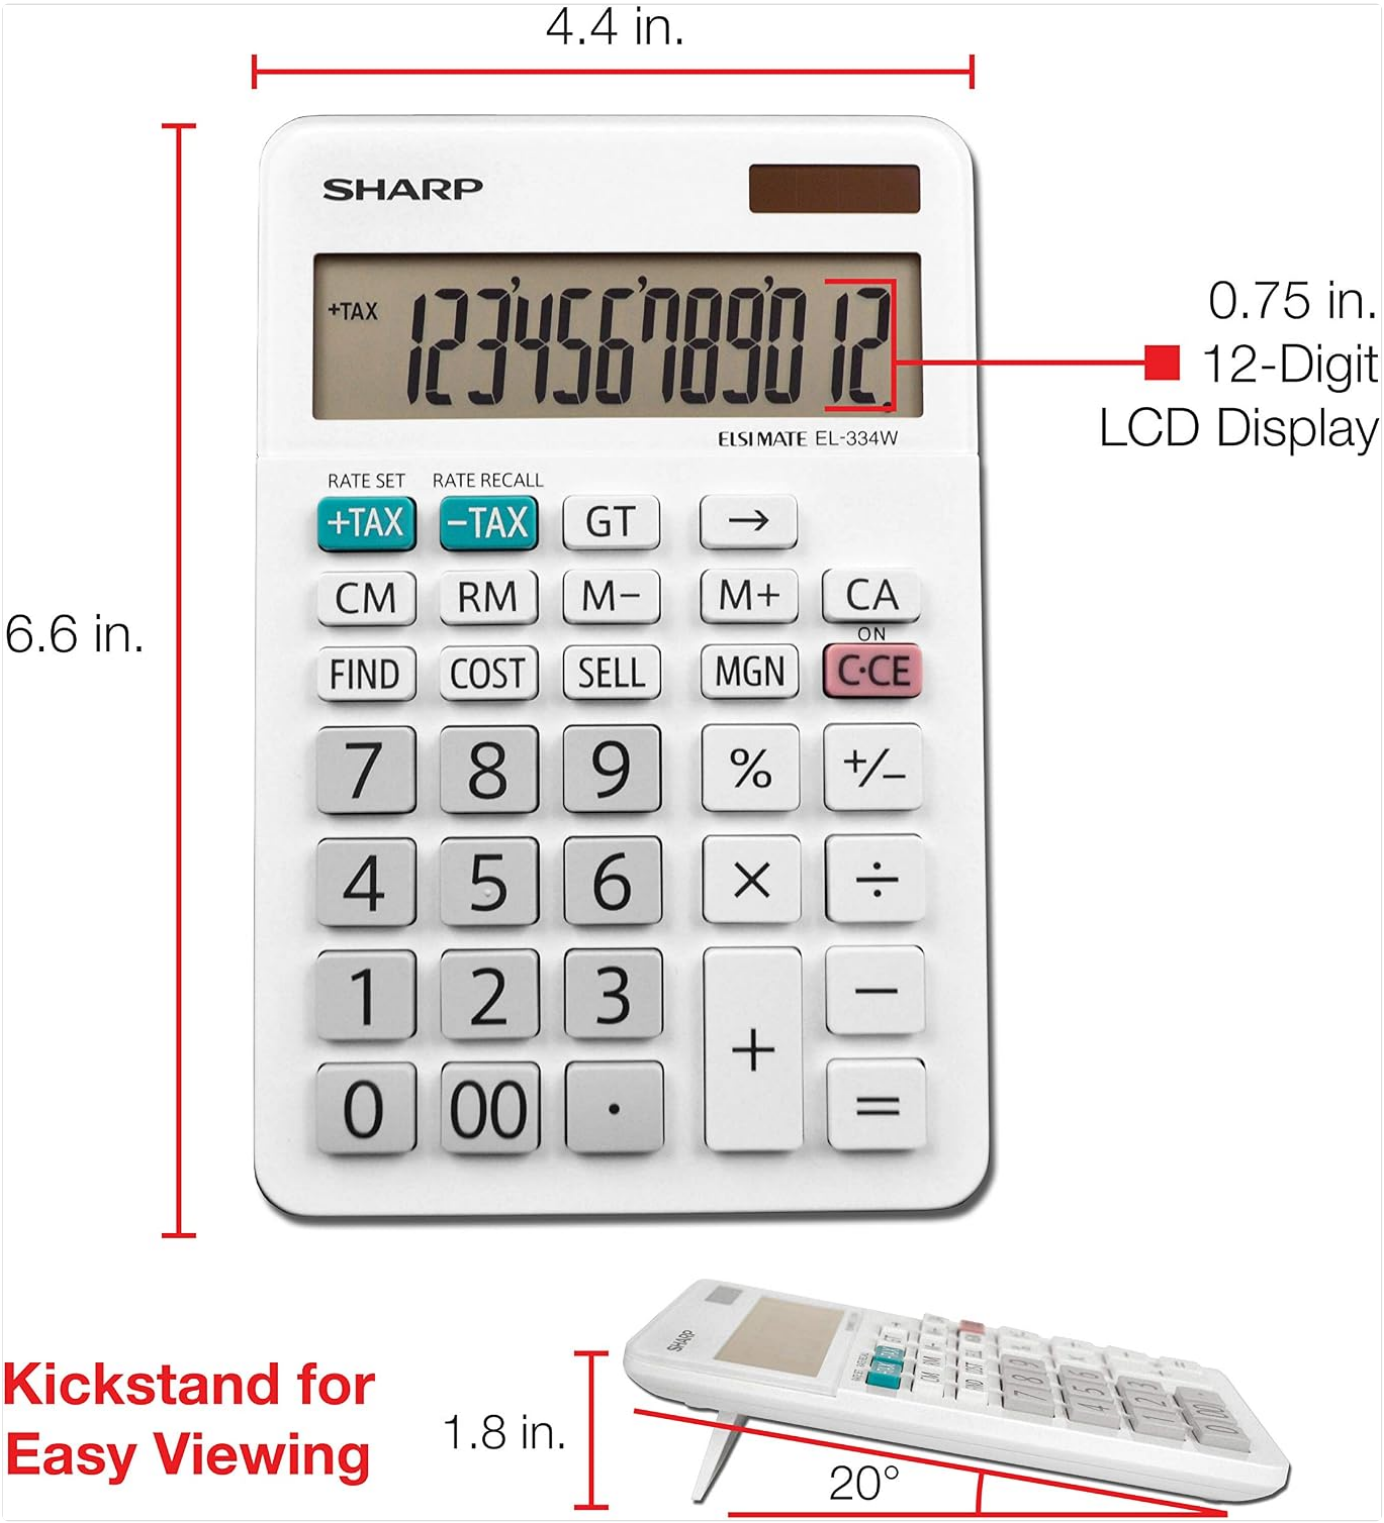


Figure 2: Key features and functions of the Sharp EL-334WB.

3.1 Basic Arithmetic Operations

Perform standard addition, subtraction, multiplication, and division using the dedicated keys. Input numbers and operators in sequence, then press the **=** key for the result.

3.2 Specialized Business Functions

- **Cost-Sell-Margin (CSM) Keys:** These keys simplify profit margin calculations. Enter any two variables (Cost, Sell, or Margin), and the calculator will automatically compute the third.
- **Automatic Tax Keys (+TAX, -TAX):** Use these keys to easily add or subtract a pre-set tax rate from a value. The tax rate can typically be set and stored in the calculator's memory.
- **Four-Key Independent Memory (M+, M-, MR, MC):**
  - **M+:** Adds the displayed value to the memory.
  - **M-:** Subtracts the displayed value from the memory.
  - **MR:** Recalls the value stored in memory.
  - **MC:** Clears the memory.
- **Grand Total (GT) Key:** Accumulates the results of multiple calculations.
- **Double-Zero (00) Key:** For quick entry of double zeros.

3.3 Correction and Clearing

- **Backspace Key (→):** Allows for single-digit corrections, deleting the last entered digit.
- **Clear Entry (CE) Key:** Clears the last entered number without affecting previous calculations or memory.
- **All Clear (CA/ON/C-CE) Key:** Clears all entries, calculations, and memory, resetting the calculator.

4. Maintenance

4.1 Cleaning

To maintain the calculator's appearance and functionality, wipe the unit with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic enclosure and display.

4.2 Battery Replacement

The calculator uses one LR44 battery as a backup power source. If the display becomes dim or unresponsive in low light, the battery may need replacement. Refer to the battery compartment on the back of the unit for instructions on how to open and replace the battery.

4.3 Storage

Store the calculator in a cool, dry place away from direct sunlight and extreme temperatures. The compact dimensions (16.76 x 11.18 x 3.81 cm) make it easy to store in a desk drawer or bag.



Figure 3: Side view showing the integrated kickstand for easy viewing.

5. Troubleshooting

5.1 Display is Blank or Dim

- **Check Lighting:** Ensure the solar panel is exposed to sufficient light.
- **Replace Battery:** If the issue persists in adequate lighting, the LR44 backup battery may need to be replaced.

5.2 Incorrect Calculation Results

- **Clear All:** Press the **CA** or **ON/C-CE** key to clear any previous entries or memory contents that might be affecting the calculation.
- **Review Input:** Double-check the numbers and operations entered.

5.3 Keys are Unresponsive

- **Clean Keys:** Ensure no debris is lodged under the keys. Gently clean around the keys with a soft, dry cloth.
- **Power Cycle:** Turn the calculator off and then on again (if applicable, or ensure solar panel is exposed to light).

6. Specifications

Feature	Detail
Model Number	EL-334WB
Display Type	LCD
Screen Size	4 Inches
Number of Digits	12
Power Source	Solar Powered with 1 LR44 battery backup (included)
Product Dimensions (L x W x H)	16.76 x 11.18 x 3.81 cm
Item Weight	141.97 g
Enclosure Material	Plastic

Color	White
Calculator Type	Financial





Figure 4: Dimensions of the Sharp EL-334WB Business Calculator.

7. Product Videos

7.1 Large LCD Display Button 12 Digits Desktop Calculator

Your browser does not support the video tag.

Video 1: A demonstration of a 12-digit desktop calculator with a large LCD display and responsive buttons, showcasing basic operations and ease of use. This video is provided by Huizhi Stationery Store CA.

7.2 Standard Function Electronics Desktop Calculators

Your browser does not support the video tag.

Video 2: An overview of standard functions on an electronic desktop calculator, highlighting its utility for everyday calculations. This video is provided by HANDA-ONXE.

8. Warranty Information

The Sharp EL-334WB Business Calculator comes with a **1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

9. Support and Contact

For further assistance, technical support, or inquiries regarding your Sharp EL-334WB Business Calculator, please contact the manufacturer:

- **Manufacturer:** Victor Technology LLC
- **Contact Address:** SMYRNA, GA, 30082 US
- **Brand Store:** Visit the Sharp Store on Amazon

© 2026 Sharp Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01M9JTV0T

More documents and user manuals: **https://manuals.plus/**