H.Koenig AGE8

H.Koenig AGE8 Wine Cooler Instruction Manual

1. Introduction

1.1 Product Overview

This manual provides essential instructions for the safe and efficient operation of your H.Koenig AGE8 Wine Cooler. Designed to store up to 8 bottles of wine, this appliance features an adjustable temperature range from 11°C to 18°C, thermoelectric cooling, and three wooden shelves for optimal wine preservation.

1.2 Safety Information

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Ensure the appliance is placed on a stable, level surface.
- Do not obstruct ventilation openings.
- Keep the appliance away from direct sunlight and heat sources.
- Do not store explosive substances in this appliance.
- Unplug the appliance before cleaning or maintenance.
- This appliance is intended for household use only.

2. Setup Guide

2.1 Unpacking

Carefully remove the wine cooler from its packaging. Inspect the appliance for any signs of damage. Retain packaging materials for future transport if needed.

2.2 Placement

- Place the wine cooler on a firm, level floor that can support its weight when fully loaded.
- Ensure adequate air circulation around the appliance. Leave at least 10 cm (4 inches) of space at the back and sides for proper ventilation.

- Avoid placing the unit near heat-generating appliances (e.g., oven, dishwasher) or in direct sunlight.
- The appliance is designed for freestanding installation only.

2.3 Initial Power-On

1. After placement, allow the wine cooler to stand upright for at least 2 hours before plugging it into a power outlet. This allows refrigerants to settle.
2. Plug the appliance into a dedicated and properly grounded electrical outlet.
3. The unit will begin to cool. Allow it to operate for several hours (e.g., 2-4 hours) to reach the desired temperature before loading bottles.



Figure 1: Front view of the H.Koenig AGE8 Wine Cooler, showing the digital temperature display and control buttons.

3. Operation

3.1 Control Panel

The control panel is located at the top of the appliance door. It features a digital display for temperature and touch-sensitive buttons for adjustments.

- **Temperature Display:** Shows the current internal temperature.
- **Up/Down Arrows:** Used to increase or decrease the desired temperature.
- **Light Button:** Activates or deactivates the internal LED light.

3.2 Temperature Adjustment

1. Press the **Up** or **Down** arrow buttons to set your desired temperature.
2. The temperature range is from 11°C to 18°C.
3. The display will flash the set temperature for a few seconds, then revert to showing the actual internal temperature.

3.3 Internal Lighting

Press the **Light** button on the control panel to turn the internal LED light on or off. The light is designed for viewing bottles and should not be left on for extended periods to avoid affecting internal temperature.

3.4 Loading Bottles

The wine cooler is equipped with three removable wooden shelves. Arrange bottles carefully to ensure proper air circulation and to prevent damage.



Figure 2: Angled view of the wine cooler showing bottles stored on the wooden shelves.



Figure 3: The wine cooler with its door open, revealing the internal layout and bottles.



Figure 4: Close-up of the three wooden shelves, designed for secure bottle placement.

4. Maintenance

4.1 Cleaning

1. Always unplug the appliance before cleaning.
2. **Interior:** Clean the interior with a soft cloth dampened with a mild detergent solution. Avoid abrasive cleaners or solvents. Remove shelves for easier cleaning.
3. **Exterior:** Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
4. Ensure all parts are dry before plugging the appliance back in.

4.2 Defrosting

The H.Koenig AGE8 Wine Cooler features an automatic defrosting system. Any frost that forms on the back wall will melt and evaporate. If excessive ice builds up, manually defrost the unit by unplugging it and leaving the door ajar until the ice melts. Clean and dry the interior thoroughly afterward.

4.3 Long-Term Storage / Moving

- If the appliance will not be used for an extended period, unplug it, clean the interior, and leave the door slightly ajar to prevent odors and mold growth.
- When moving the appliance, secure the door with tape and ensure it is transported in an upright position to prevent damage to the cooling system.

5. Troubleshooting

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; power outage; circuit breaker tripped.	Ensure plug is securely in outlet; check power supply; reset circuit breaker.
Temperature is not cold enough.	Door not closed properly; excessive door opening; poor ventilation; ambient temperature too high; temperature setting too high.	Ensure door is sealed; reduce frequency of door opening; check for adequate clearance around unit; move to cooler location; lower temperature setting.
Excessive noise.	Appliance not level; loose parts; fan obstruction.	Adjust leveling feet; check for loose components; ensure nothing is blocking the fan.
Internal light not working.	Light switch off; LED malfunction.	Press the light button; if still not working, contact customer support.

6. Technical Specifications

Model Number	AGE8
Brand	H.Koenig
Capacity	8 bottles / 23 Liters
Temperature Range	11°C - 18°C
Cooling System	Thermoelectric, Anti-vibration
Shelves	3 wooden shelves
Noise Level	26 dB
Power	55 W
Dimensions (W x D x H)	25.91 x 46.99 x 51.05 cm (approx. 10.2 x 18.5 x 20.1 inches)
Weight	10 kg (approx. 22 lbs)

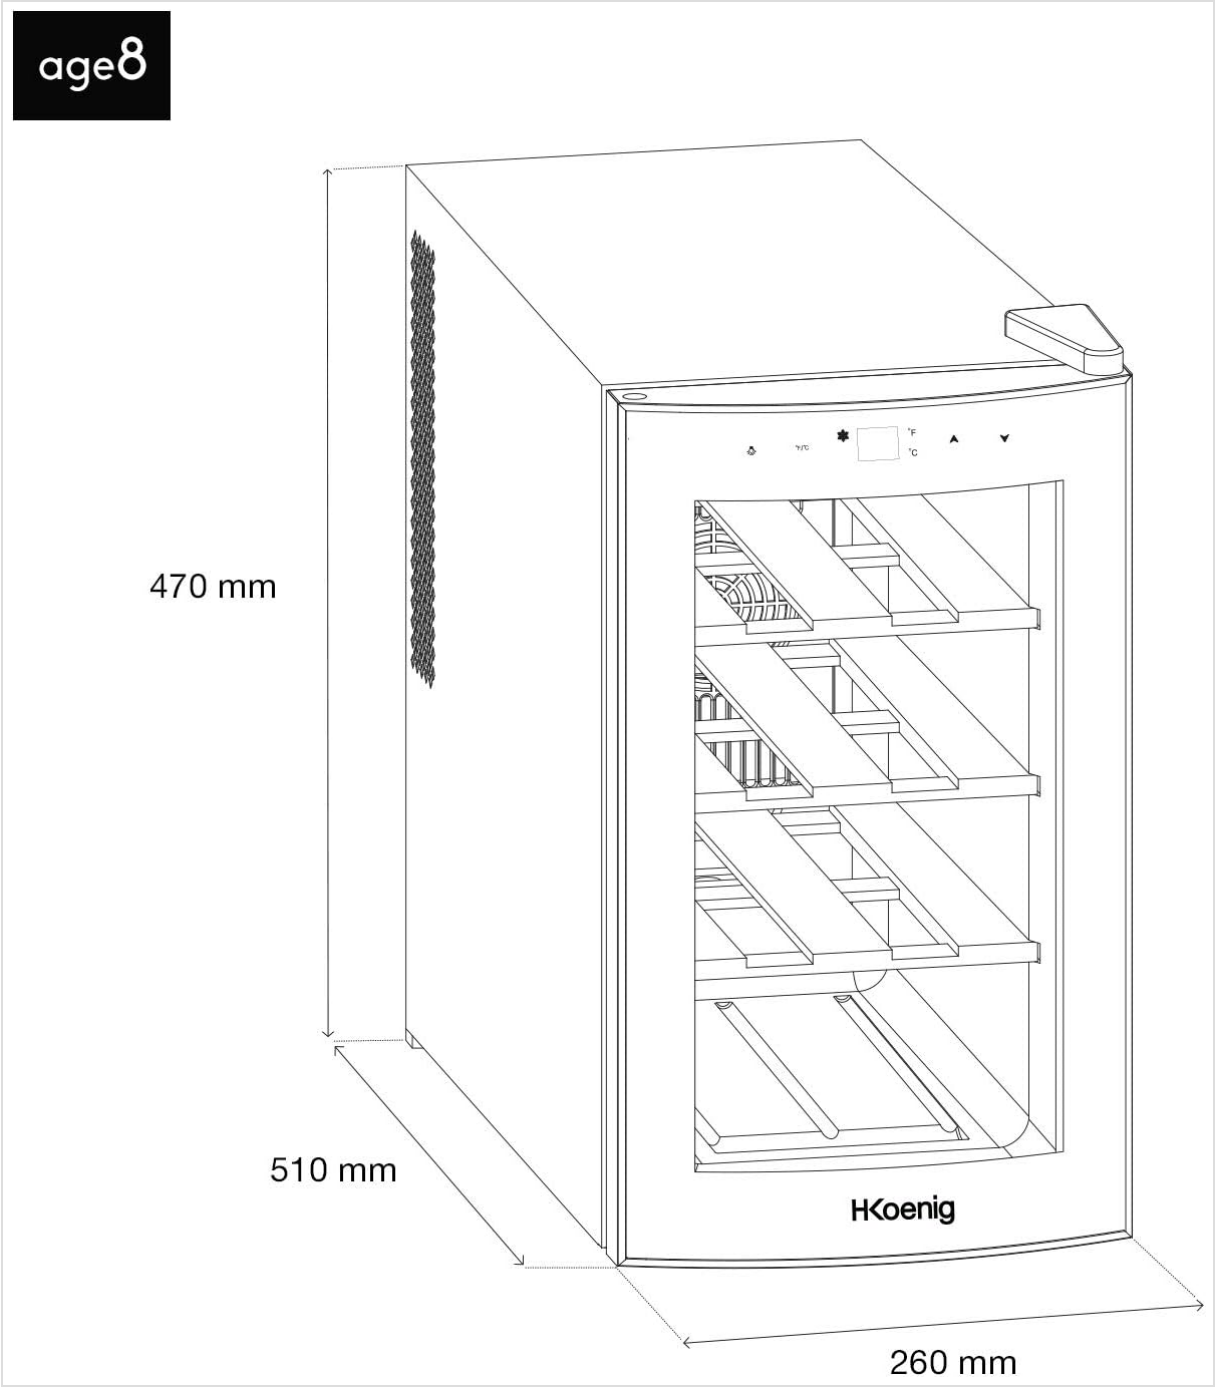


Figure 5: Dimensional drawing of the H.Koenig AGE8 Wine Cooler.

6.1 Energy Information

For detailed energy consumption information, please refer to the energy label.

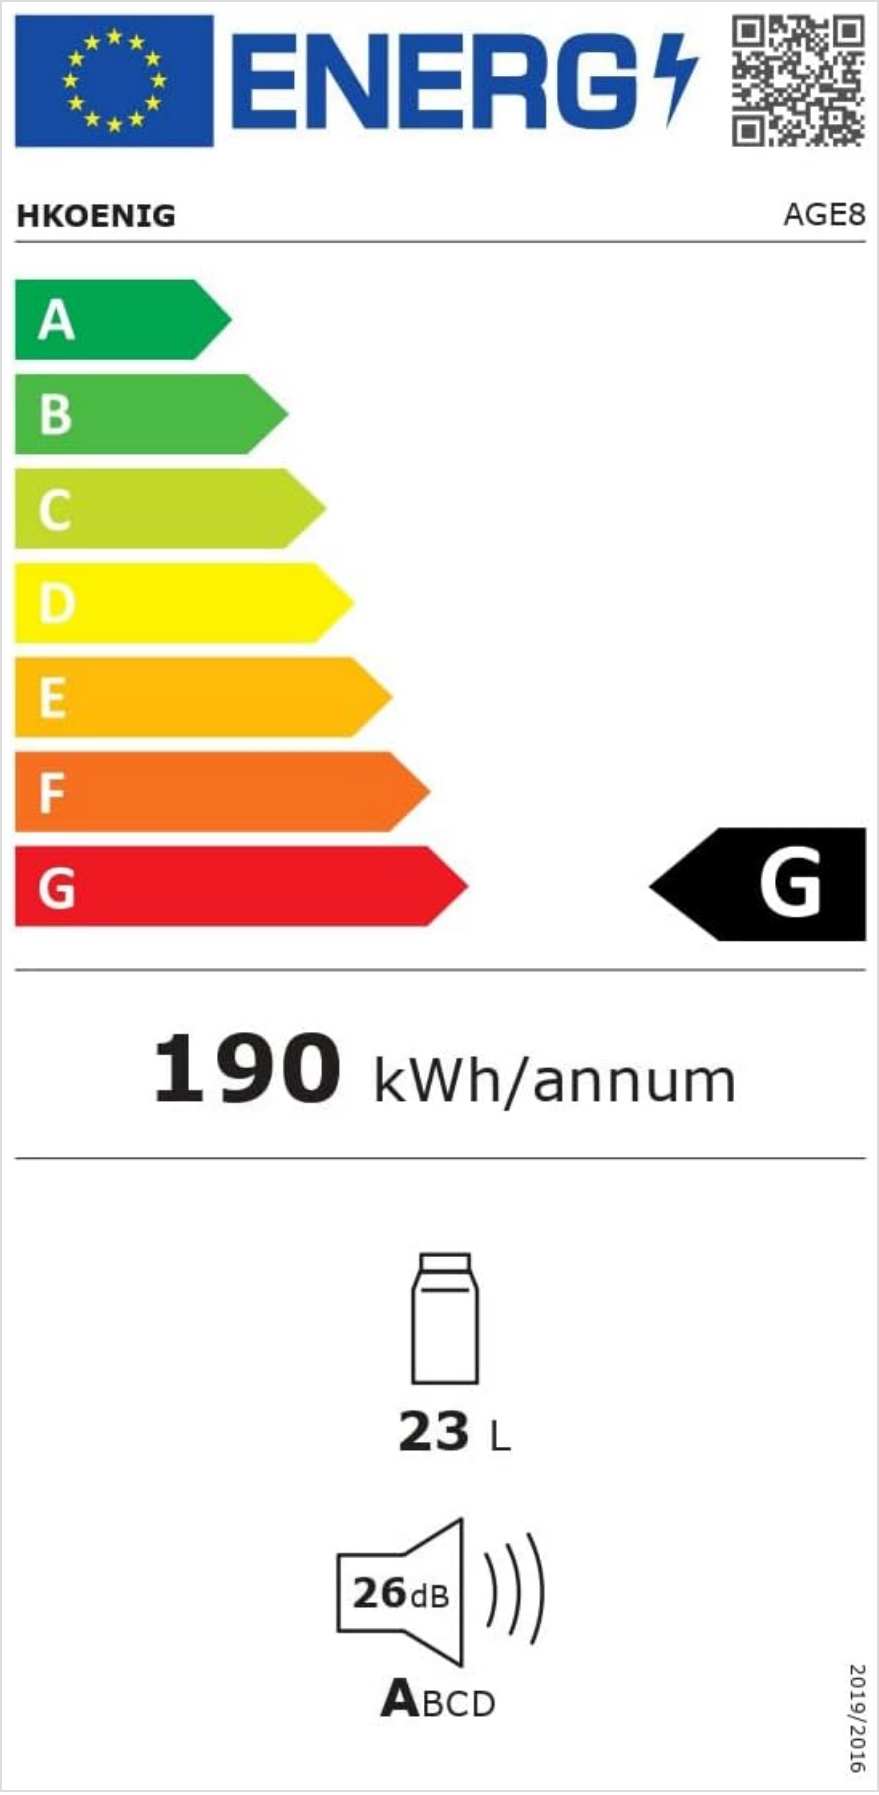


Figure 6: Energy Label for the H.Koenig AGE8 Wine Cooler. For more details, visit the official EPREL database: https://eprel.ec.europa.eu/qr/768762

7. Warranty and Customer Support

7.1 Warranty Information

This H.Koenig AGE8 Wine Cooler comes with a**2-year extended warranty**. This warranty covers manufacturing defects and ensures peace of mind for prolonged and reliable use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact H.Koenig customer support. Refer to the contact information provided with your purchase or visit the official H.Koenig website for support details.