HAISSKY Speakers-012

HAISSKY Bluetooth Shower Speaker User Manual

Model: Speakers-012

Introduction

This manual provides instructions for the HAISSKY Bluetooth Shower Speaker, Model Speakers-012. Please read this manual carefully before using the product to ensure proper operation and to extend its lifespan.



Image: The HAISSKY Bluetooth Shower Speaker, black in color, with water splashing around it, highlighting its waterproof design.

Package Contents

Verify that all items are present in the package:

- HAISSKY Bluetooth Shower Speaker
- USB Charging Cable
- User Manual (this document)

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. The speaker has a 1200mAh battery and takes approximately 3 hours to fully charge.

1. Locate the charging port on the side of the speaker.
2. Connect the provided USB charging cable to the speaker's charging port.

3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate during charging and turn off when fully charged.

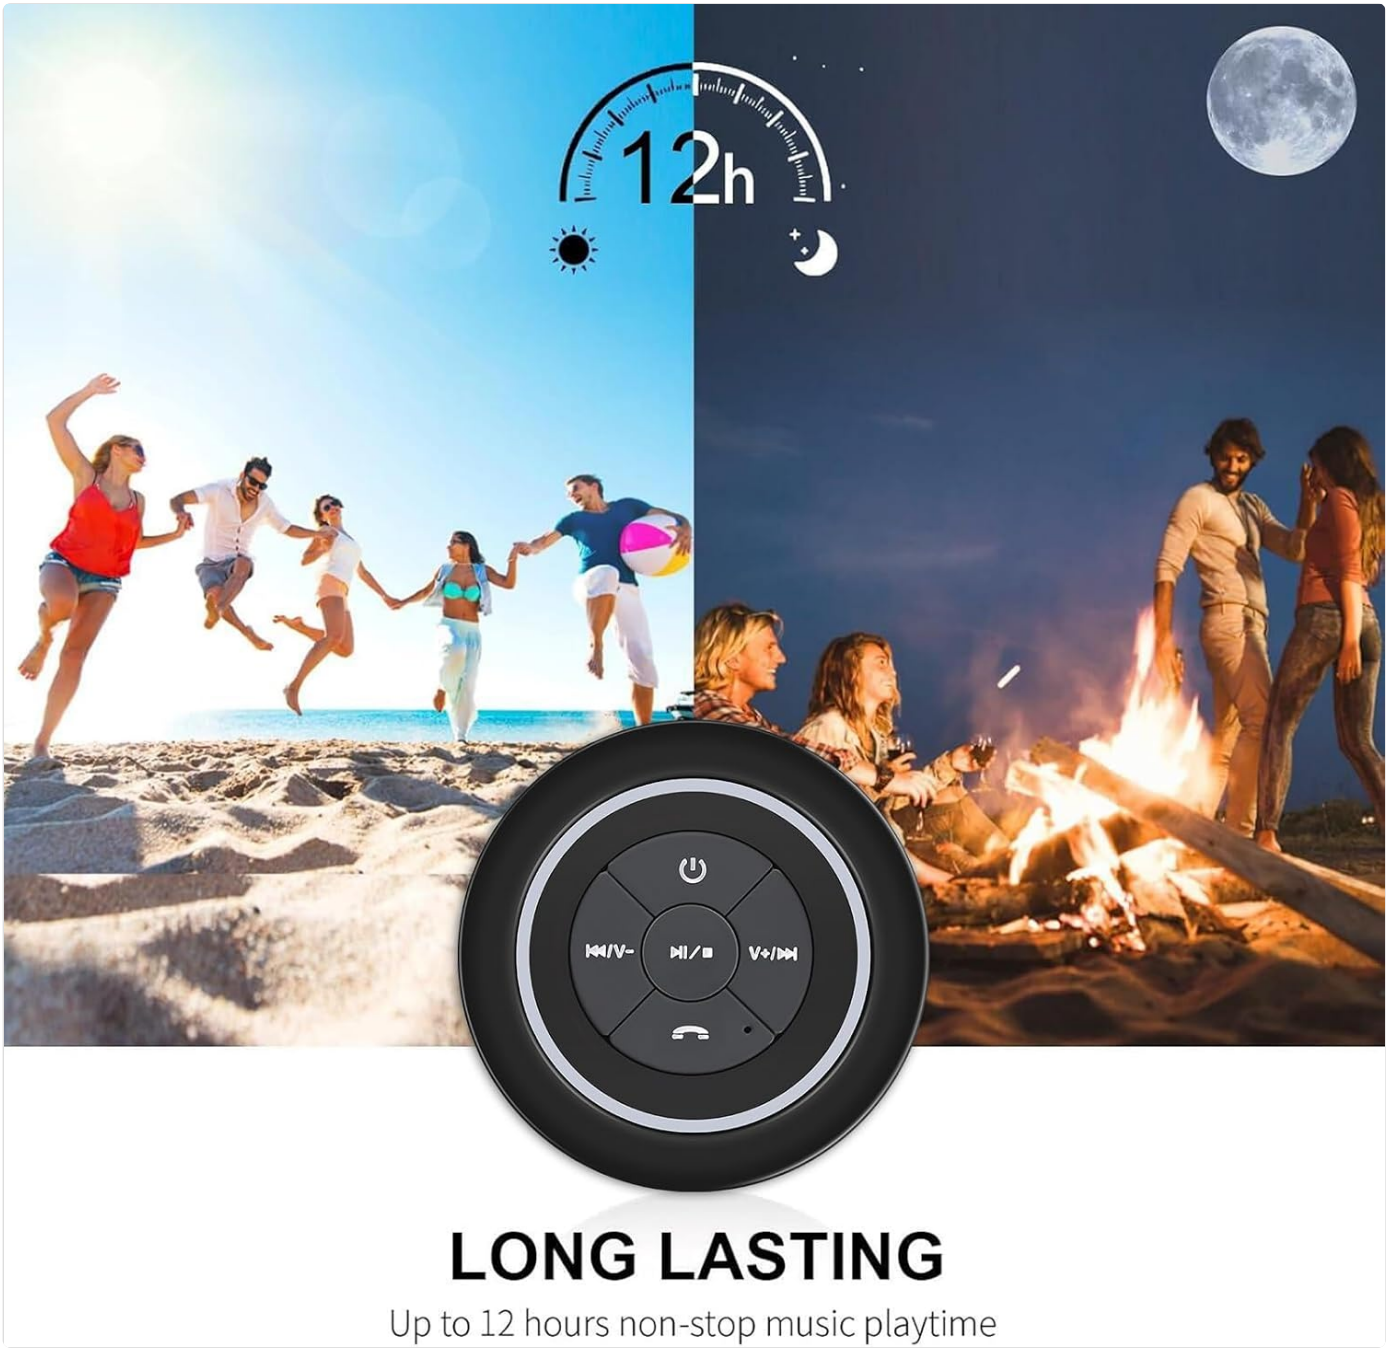


Image: The HAISSKY Bluetooth Shower Speaker with an overlay indicating "LONG LASTING" and "Up to 12 hours non-stop music playtime," illustrating its battery endurance.

2. Attaching the Suction Cup

The speaker features a detachable suction cup for easy mounting on smooth surfaces.

1. Ensure the surface (e.g., glass, ceramic tile) is clean and dry.
2. Press the suction cup firmly against the desired smooth surface.
3. Verify that the speaker is securely attached before releasing it.



Image: The HAISSKY Bluetooth Shower Speaker partially submerged in water with splashes, demonstrating its IP67 waterproof rating.

Operating Instructions



Image: A detailed diagram showing the buttons on the HAISSKY Bluetooth Shower Speaker and their corresponding functions, including Power On/Off, Play/Pause, Next/Previous Song, Volume Up/Down, Built-in Microphone, and Call Answer/End.

1. Power On/Off

- To power on: Press and hold the **Power On/Off** button (labeled with a power symbol) for approximately 3 seconds until you hear an audible prompt and the indicator light flashes.
- To power off: Press and hold the **Power On/Off** button for approximately 3 seconds until you hear an audible prompt and the indicator light turns off.

2. Bluetooth Pairing

The speaker pairs with your device via Bluetooth 4.0.

1. Ensure the speaker is powered on and in pairing mode (indicator light will flash rapidly).
2. On your smartphone, tablet, or computer, enable Bluetooth and search for available devices.
3. Select "HAISSKY" from the list of devices.
4. Once paired, you will hear a confirmation sound, and the indicator light will flash slowly or remain solid.
5. The speaker has a Bluetooth range of up to 33 feet (10 meters).



Image: The HAISSKY Bluetooth Shower Speaker positioned near a smartphone, illustrating its wireless connectivity and long range capabilities.

3. Music Playback

- **Play/Pause:** Press the **Play/Pause** button (labeled with a play/pause symbol) to play or pause music.
- **Next Song:** Short press the **Next Song/Volume Up** button (labeled with a skip forward symbol).
- **Previous Song:** Short press the **Previous Song/Volume Down** button (labeled with a skip backward symbol).
- **Volume Up:** Long press the **Next Song/Volume Up** button.
- **Volume Down:** Long press the **Previous Song/Volume Down** button.

4. Speakerphone Function

The speaker has a built-in microphone for hands-free calling.

- **Answer Call:** Press the **Call** button (labeled with a phone receiver symbol) when an incoming call rings.
- **End Call:** Press the **Call** button again to end the call.

- **Reject Call:** Press and hold the **Call** button for 2 seconds to reject an incoming call.

Maintenance

To ensure the longevity and optimal performance of your HAISSKY Bluetooth Shower Speaker, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the charging port cover is securely closed before cleaning or exposing to water.
- **Water Exposure:** While the speaker is IP67 waterproof and can be fully immersed up to 3 feet, it is recommended to dry it thoroughly after exposure to water, especially before charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Suction Cup:** For best adhesion, periodically clean the suction cup and the surface it attaches to.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source using the USB cable and allow it to charge for at least 15 minutes before attempting to power on again.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode (rapidly flashing indicator light). Make sure Bluetooth is enabled on your device and it is within 33 feet (10 meters) of the speaker. Forget "HAISSKY" from your device's Bluetooth list and try pairing again. Restart both the speaker and your Bluetooth device.
Poor sound quality or distortion.	Ensure the speaker and your device are within Bluetooth range and there are no obstructions. Adjust the volume on both the speaker and your connected device. Check if the speaker's battery is low; low battery can affect sound quality.
Suction cup does not stick.	Clean both the suction cup and the desired surface thoroughly. Ensure the surface is smooth, dry, and free of dust or soap residue. Moisten the suction cup slightly before pressing it firmly onto the surface.
Speaker is not charging.	Verify that the USB charging cable is securely connected to both the speaker and the power source. Try a different USB cable or power adapter. Ensure the charging port is clean and free of debris.

Specifications



Image: An infographic displaying the dimensions (80mm/3.2" diameter, 48mm/2" height) of the HAISSKY Bluetooth Shower Speaker and icons for its key features: IP67 Waterproof, HD Audio, Rechargeable Battery, 10 Meters Wireless Range, and 6 Hours Playback Time.

Feature	Detail
Model Name	HAISSKY
Item Model Number	Speakers-012
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth 4.0
Bluetooth Range	Up to 33 feet (10 meters)
Water Resistance Level	IP67 (Fully submersible up to 3 feet)
Power Source	Battery Powered
Battery Type	1 Lithium Polymer battery
Battery Capacity	1200 mAh
Charging Time	Approximately 3 hours

Feature	Detail
Playback Time	Up to 12 hours
Speaker Maximum Output Power	5 Watts
Signal-to-Noise Ratio	85 dB
Control Method	Touch buttons
Built-in Microphone	Yes, for hands-free calling
Product Dimensions	3.15"D x 3.15"W x 1.89"H (80mm x 80mm x 48mm)
Item Weight	5.3 ounces (0.15 Kilograms)
Included Components	User Manual, USB Charging Cable

Warranty Information

This HAISSKY product comes with a**Limited Warranty**. For specific terms and conditions, please refer to the warranty card included with your purchase or contact HAISSKY customer support.

Customer Support

If you encounter any issues or have questions regarding your HAISSKY Bluetooth Shower Speaker, please contact HAISSKY customer support through the retailer's platform or the official HAISSKY website for assistance.

© 2025 HAISSKY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question