**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Lucky Star 025706630283

# Lucky Star Replacement Remote Control

**MODEL: 025706630283**

User Manual

## 1. Introduction

This manual provides detailed instructions for the Lucky Star Replacement Remote Control, designed to operate various Roku TV models and Roku Players. This is an Infrared (IR) remote control, requiring a direct line of sight to the device it controls. It does not require programming or pairing for Roku devices.

### 1.1. Compatibility

This remote control is compatible with:

- All major Roku TV brands, including TCL, Hisense, Hitachi, Haier, RCA, Philips, LG, Element, Sanyo, Insignia, and Sharp Roku TV models.
- Roku Players, including Roku 1, Roku 2 (HD/XD/XS), Roku 3, Roku 4, Roku HD, Roku LT, Roku XD, and Roku XDS.

**Important Note:** This remote control is **NOT** compatible with Roku Streaming Stick models. It is not a Wi-Fi or RF remote and does not support voice control or have a headphone jack.




Image: Compatibility overview. The remote works with built-in Roku Smart TVs and Roku Player Boxes, but not with Roku Streaming Sticks.

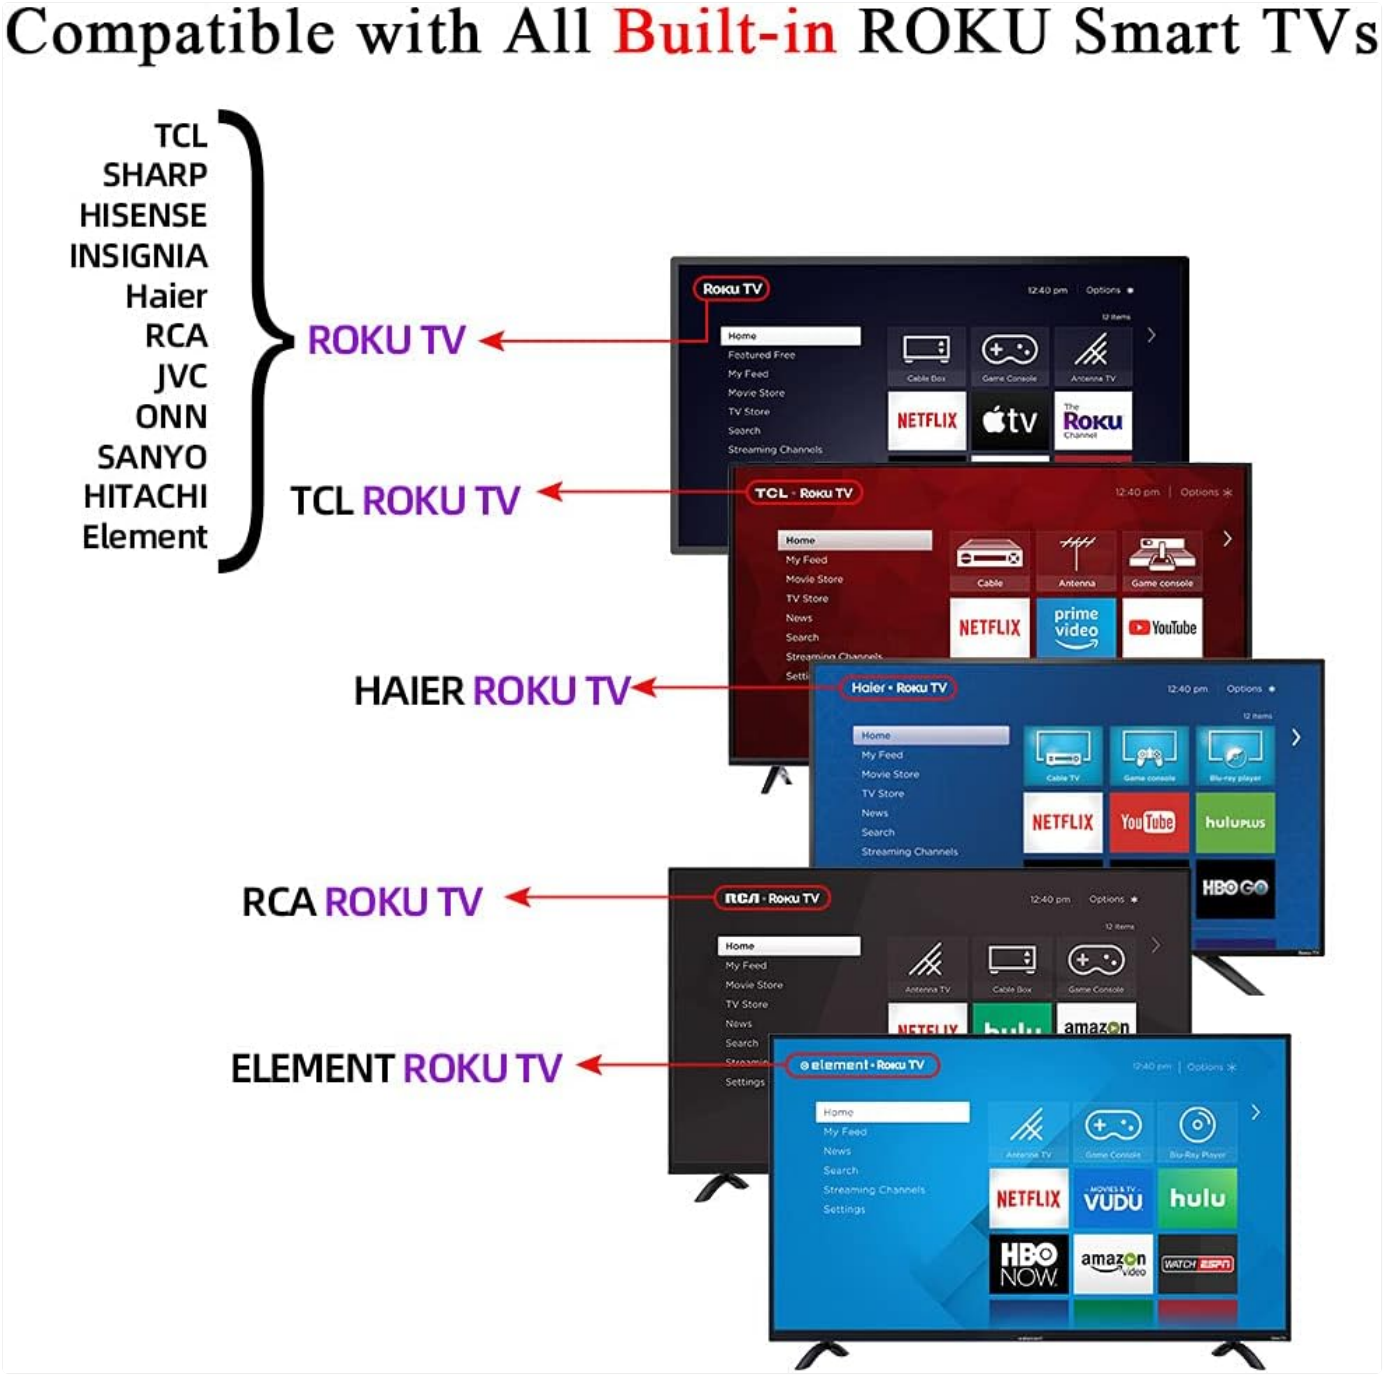



Image: Specific Roku TV brands compatible with the remote control, such as TCL, Hisense, Haier, RCA, and Element Roku TVs.

## 2. Setup

### 2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **Batteries are not included.**
4. Replace the battery cover by sliding it back into position until it clicks securely.

### 2.2. Initial Use

This remote control is designed for immediate use with compatible Roku TVs and Roku Players. No programming or pairing is required. Simply insert the batteries, point the remote at your device, and begin operation.

## 3. Operating Instructions

The remote control features a standard layout for easy navigation and control of your Roku device and TV functions. Ensure a clear line of sight between the remote and your device for optimal performance.




Image: Function Button Diagram. This image illustrates the layout and purpose of each button on the remote control.

### 3.1. Button Functions

- **TV Power (Red Button):** Turns the TV on or off.
- **TV Box (Red Button):** Turns the Roku Player Box on or off.
- **Input:** Switches TV input sources.

- **Menu:** Displays the main on-screen menu.
- **Exit:** Exits the current menu or screen.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection.
- **Home:** Immediately returns to the Home screen.
- **Return:** Goes back to the previous menu or screen.
- **Options (*):** Displays additional options when available.
- **Mute:** Cuts off the sound temporarily.
- **Volume (+/-):** Adjusts the volume.
- **Channel (CH +/-):** Changes channels (used for TV function).
- **Quick Access Buttons (Netflix, Hulu, etc.):** Provides one-touch access to popular streaming channels. These buttons are pre-assigned and cannot be programmed.
- **APP1, APP2, APP3, APP4, APP5:** These are DIY App Keys, which may require programming if you wish to assign them to specific applications not covered by the pre-assigned quick access buttons. (Note: Programming instructions for these specific buttons are not provided in the product information. Refer to the original remote's manual if available for programming features.)




Image: Remote control overview with quick access buttons for various streaming services.




Image: Remote control in use, highlighting its ergonomic design for easy grip and access to frequently used buttons.

## 4. Maintenance

### 4.1. Battery Replacement

When the remote control's performance degrades or it stops responding, replace the two (2) AAA batteries. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

### 4.2. Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## 5. Troubleshooting

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with fresh AAA batteries.
- Ensure there is a clear line of sight between the remote control and the infrared sensor on your Roku device or TV. Obstructions can block the signal.
- Make sure you are within the effective operating range (up to 10 meters).

- **TV power or volume control not working:**
  - Confirm that your TV is a compatible Roku TV model.
  - Ensure a direct line of sight to your TV's IR sensor.
- **Quick access app buttons not working:**
  - These buttons are pre-assigned and cannot be changed. Ensure the corresponding app is installed and accessible on your Roku device.
- **Remote does not work with Roku Streaming Stick:**
  - This remote is not compatible with Roku Streaming Stick models. It is designed for Roku TVs and Roku Player Boxes.

## 6. Specifications

| | |
|---|---|
| **Brand** | Lucky Star |
| **Model Number** | 025706630283 |
| **Connectivity Technology** | Infrared (IR) |
| **Compatible Devices** | Roku TVs, Roku Players |
| **Maximum Range** | 10 meters (33 feet) |
| **Battery Type** | 2 x AAA batteries (not included) |
| **Number of Buttons** | Approximately 30 (including quick access buttons) |
| **Color** | Black, Blue |
| **Dimensions (Approximate)** | Length: 6.89 inches (17.5 cm)<br>Width: 1.77 inches (4.5 cm)<br>Thickness: 0.79 inches (2.0 cm) |




Image: Remote control dimensions, showing length, width, and thickness.

## 7. Warranty and Support

Specific warranty information for this product is not available in the provided documentation. For support or warranty inquiries, please refer to the retailer or manufacturer's official website where the product was purchased.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B01MYH132H**

More documents and user manuals: **https://manuals.plus/**