Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit SHP-RKU

ZdalaMit Replacement Remote Control SHP-RKU User Manual

For Sharp Roku Ready TVs

1. Introduction

This manual provides instructions for the ZdalaMit SHP-RKU replacement remote control. This remote is designed to function as a direct replacement for your original Sharp Roku TV remote, requiring no programming or pairing. Simply insert batteries, and it is ready for use.



Image 1: Front view of the ZdalaMit SHP-RKU Replacement Remote Control.

2. Package Contents

- 1 x ZdalaMit SHP-RKU Replacement Remote Control

Note: AAA batteries and a physical instruction manual are not included in the package.

3. Compatibility

This replacement remote control is compatible with the following Sharp Roku TV models:

- LC-43LB371U
- LC-50LB371U
- LC-43LB371C
- LC-50LB371C

- LC-55LB481U
- LC-32LB591U
- LC-43LB481U
- LC-32LB481U
- LC-50LB481U
- Roku 50R4A5R
- Roku 55R4A5R
- Roku 65R6A5R
- Roku 75R4A5R

4. Setup

4.1 Battery Installation

To begin using your remote control, you need to install two AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your compatible Sharp Roku TV. No programming or pairing is required.

5. Operating the Remote Control

The ZdalaMit SHP-RKU remote control provides full functionality for your Sharp Roku TV. Point the remote directly at your TV's infrared receiver for optimal performance.



Image 2: Demonstrating the use of the remote control with a television.

5.1 Button Functions Overview

- **Power Button ( ):** Turns the TV on or off.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (⌂):** Navigates to the Roku Home screen.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and content.
- **OK Button:** Selects an item or confirms an action.
- **Game Mode/Input Button (gamepad icon):** Accesses game mode or switches input.
- **Sleep/Night Mode Button (moon icon):** Activates sleep timer or night listening mode.
- **Options/Settings Button (asterisk icon):** Opens context-sensitive options or settings.
- **Instant Replay Button (◀◀):** Jumps back a few seconds during video playback.
- **Play/Pause Button (▶):** Plays or pauses media content.
- **Fast Forward Button (▶▶):** Fast forwards during video playback.
- **Shortcut Buttons (Netflix, Cineplex, Rdio, Google Play):** Provides direct access to specified streaming services.

Note: This remote does not feature dedicated volume or mute buttons. Volume control is typically managed via your TV's original remote or the Roku mobile application. This remote primarily controls Roku streaming functions.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight. Keep it away from water

and other liquids.


7. Troubleshooting

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Ensure there are no obstructions between the remote and the TV's infrared receiver.
  - Point the remote directly at the TV.
- **Buttons are not working:**
  - Check if the remote is responding to other commands. If not, refer to "Remote not responding" above.
  - Clean the remote surface, especially around the buttons, to ensure no debris is interfering.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure you are within the effective operating range (up to 33 feet) and have a clear line of sight to the TV.

If issues persist after following these steps, please contact customer support.

8. Specifications

Brand	ZdalaMit
Model Name	SHP-RKU
Connectivity Technology	Infrared
Compatible Devices	Sharp Roku Televisions
Power Supply	2 x 1.5V AAA Alkaline batteries
Maximum Range	33 Feet (approx. 10 meters)
Number of Buttons	18
Color	Black
Item Weight	40 Grams
Dimensions (L x W x H)	5.56" x 1.59" x 0.55" (approx. 14.12 cm x 4.04 cm x 1.4 cm)

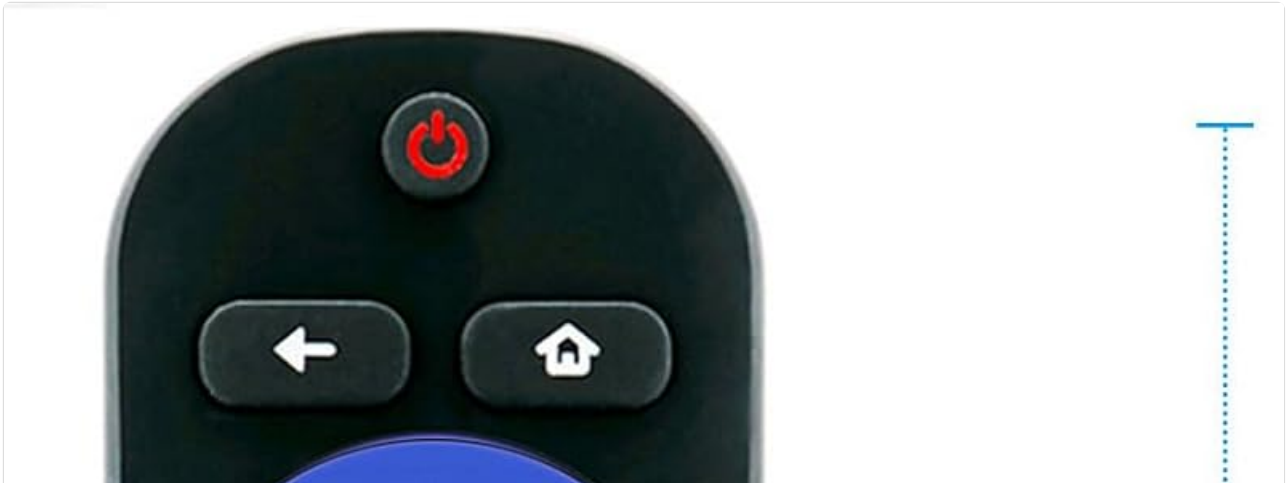

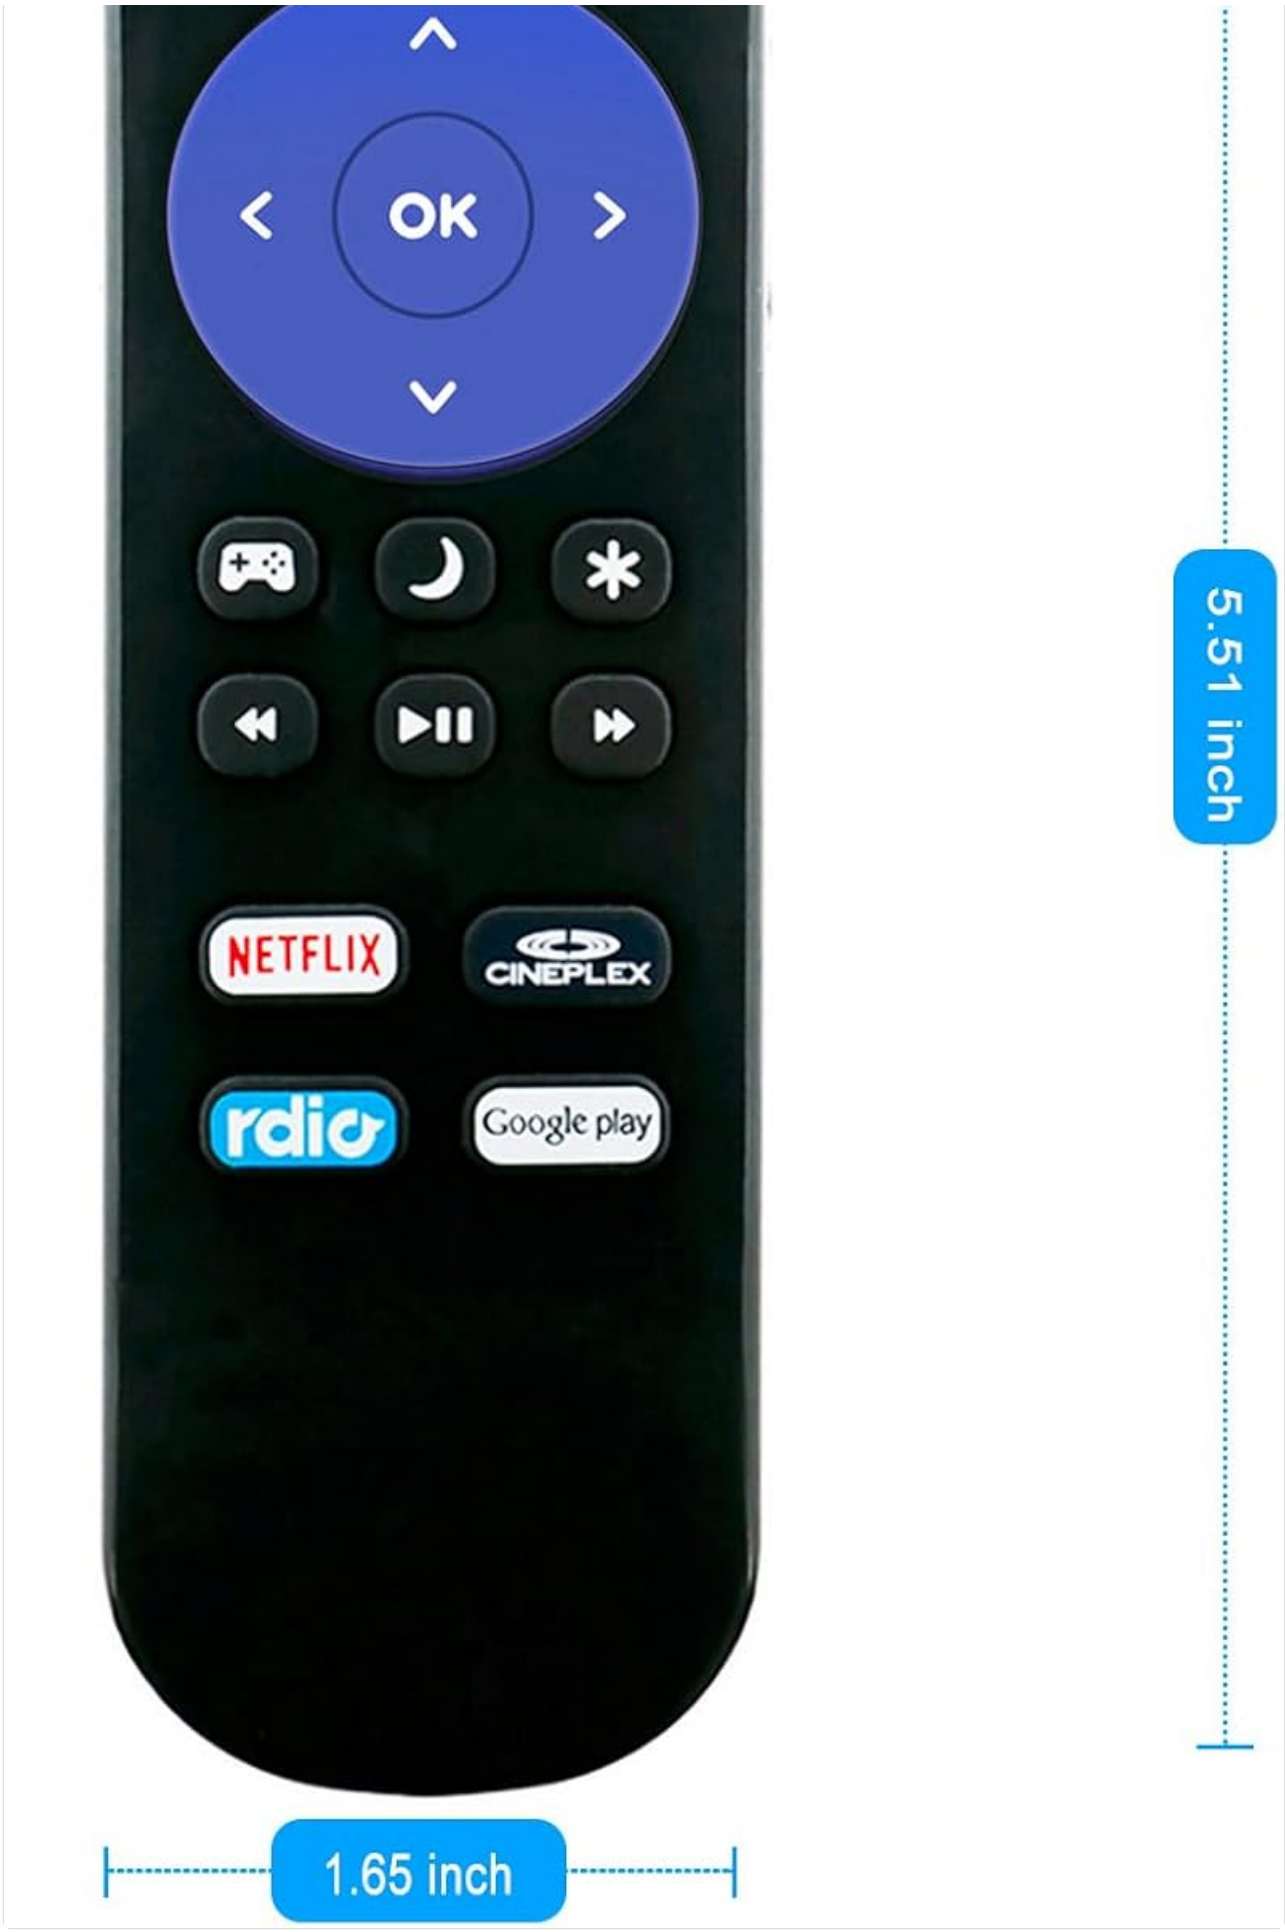


Image 3: Dimensions of the ZdalaMit SHP-RKU Remote Control.

9. Warranty and Support

9.1 Warranty Information

This ZdalaMit SHP-RKU replacement remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

9.2 Customer Support

If you have any questions, encounter issues with your remote control, or need to claim warranty service, please contact the seller or ZdalaMit customer support through the platform where you purchased the product. Please provide your order number and a detailed description of the issue for faster assistance.

© 2024 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01N6Z1LRW

More documents and user manuals: **https://manuals.plus/**