Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Norifon VW-VBK180

Norifon VW-VBK180 USB Charger Instruction Manual

Model: VW-VBK180

1. Introduction

This manual provides essential information for the safe and effective use of your Norifon VW-VBK180 USB Charger. This charger is designed to provide convenient power for compatible Panasonic camcorder batteries, ensuring your devices are always ready for use. Please read these instructions carefully before operating the charger.

2. Product Overview

The Norifon VW-VBK180 USB Charger is a compact and lightweight device, ideal for travel and everyday use. It features a micro USB input for versatile power options.



Image 1: Norifon VW-VBK180 USB Charger showing its compact dimensions (3.31 x 1.85 x 0.79 inches).



Image 2: The charger can be powered by various USB sources such as a PC, AC charger, car charger, or power bank.



Image 3: Detail of the Micro USB Port for connecting the power cable.





Image 4: The included USB charging cable measures 11.8 inches (30cm) in length.

3. Compatibility

This charger is compatible with a wide range of Panasonic batteries and camcorder models. To ensure proper fit and function, always verify the battery model printed on your battery's label (not the camera itself).

Compatible Battery Models:

- VW-VBK180, VW-VBK180-K, VW-VBK180GK
- VW-VBK360, VW-VBK360-K, VW-VBK360GK
- VW-VBL090, VW-VBL090GK, VW-VBL090PPK
- VW-VBL360

Compatible Panasonic Camera Models:

- **HC-V Series:** HC-V10, HC-V100, HC-V100EG-K, HC-V100EG-W, HC-V100K, HC-V100M, HC-V100MK, HC-V10EB-K, HC-V10EB-R, HC-V10EG-K, HC-V10EG-R, HC-V10GK, HC-V10K, HC-V10M, HC-V11M, HC-V300M, HC-V500, HC-V500EG-K, HC-V500EG-R, HC-V500EG-S, HC-V500GK, HC-V500K, HC-V500M, HC-V500MGK, HC-V500MK, HC-V600M, HC-V700, HC-V700GK, HC-V700K, HC-V700M, HC-V700MGK, HC-V700MK, HC-V707, HC-V707EG-K, HC-V707EG-S, HC-V707M
- **HDC-H Series:** HDC-H80, HDC-HS60, HDC-HS60K, HDC-HS60P, HDC-HS80, HDC-HS80GK, HDC-HS80K, HDC-HS80P, HDC-HS80PC
- **HDC-SD Series:** HDC-SD40, HDC-SD40GK, HDC-SD40K, HDC-SD40P, HDC-SD40PC, HDC-SD60, HDC-SD60K, HDC-SD60P, HDC-SD60PC, HDC-SD60S, HDC-SD66, HDC-SD80, HDC-SD80GK, HDC-SD80P, HDC-SD80PC, HDC-SD80R, HDC-SD90, HDC-SD90EB-W-2012, HDC-SD90GK, HDC-SD90GK-3D, HDC-SD90K, HDC-SD90P, HDC-SD90PC, HDC-SD99, HDC-SDX1, HDC-SDX1H
- **HDC-TM Series:** HDC-TM25, HDC-TM35, HDC-TM40, HDC-TM40GK, HDC-TM40K, HDC-TM40P, HDC-TM40PC, HDC-TM41H, HDC-TM41P, HDC-TM41PC, HDC-TM45, HDC-TM55, HDC-TM55K, HDC-TM55P, HDC-TM55PC, HDC-TM60, HDC-TM60P, HDC-TM60PC, HDC-TM70, HDC-TM80, HDC-TM80GK, HDC-TM80K, HDC-TM80P, HDC-TM80PC, HDC-TM85, HDC-TM90, HDC-TM90GK, HDC-TM90GK-3D, HDC-TM90K, HDC-TM90P, HDC-TM90PC, HDC-TM99
- **SDR Series:** SDR-H100, SDR-H100K, SDR-H100P, SDR-H100PC, SDR-H101, SDR-H101GK, SDR-H85, SDR-H85A, SDR-H85K, SDR-H85S, SDR-H95, SDR-HS85P, SDR-HS85PC, SDR-S45, SDR-S50, SDR-S50A, SDR-S50K, SDR-S50N, SDR-S50P, SDR-S50PC, SDR-S70, SDR-S70K, SDR-S70P, SDR-S70PC, SDR-S70R, SDR-S70S, SDR-S71, SDR-S71GK, SDR-S71P, SDR-S71PC, SDR-T50, SDR-T50K, SDR-T50P, SDR-T50PC, SDR-T55, SDR-T55P, SDR-T55PC, SDR-T70, SDR-T70K, SDR-T70P, SDR-T70PC, SDR-T71, SDR-T76, SDR-T95

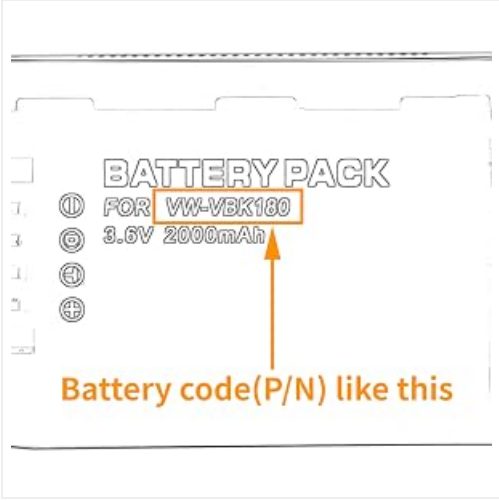


Image 5: Always check the battery code (P/N) on your battery's label to confirm compatibility.

4. Setup and Operation

Follow these steps to correctly set up and operate your Norifon VW-VBK180 USB Charger.

Video Guide: How to Use the Charger

Video 1: This official seller video demonstrates how to choose the correct VW-VBK180 charger and provides a step-by-step guide on its usage.

Step-by-Step Instructions:

1. **Connect the Battery:** Ensure the positive (+) and negative (-) terminals of the battery align correctly with the charger's terminals. This is crucial for proper charging. Gently push the battery into the charger slot until it is securely seated.
2. **Connect to Power:** Plug the micro USB cable into the charger's micro USB port. Connect the other end of the USB cable to a compatible USB power source (e.g., laptop, PC, power bank, USB wall adapter, USB car adapter).
3. **Monitor Charging Status:** The charger features an LED indicator to show the charging status:
    - **Blue Light (No-load):** Indicates the charger is powered on but no battery is inserted, or the battery is fully charged.
    - **Red Light:** Indicates the battery is currently charging.
    - **Blue Light (Solid):** Indicates the battery is fully charged.
4. **Remove Battery:** Once the blue light indicates a full charge, disconnect the charger from the power source and carefully remove the battery.

5. Important Safety Information

Adhering to these safety guidelines will help prevent damage to the charger, battery, and potential injury.

- Do not open or modify the charger.
- Do not immerse the charger in water or any other liquid.
- Use the charger in a dry location only.
- Only use compatible batteries with this charger as listed in the compatibility section.





Image 6: Charger label displaying model, input/output specifications, and safety warnings.

6. Specifications

Feature	Detail
Model Number	VW-VBK180
Product Dimensions	3.31 x 1.85 x 0.79 inches
Item Weight	1.12 ounces (0.07 Pounds)
Input Voltage	5 Volts

Output Voltage	4.2 Volts
Manufacturer	VN/Norifon
Color	Blue, Red (LED indicators)

7. Maintenance

To ensure the longevity and optimal performance of your charger, follow these simple maintenance tips:

- Keep the charger clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Store the charger in a cool, dry place when not in use.
- Avoid dropping the charger or subjecting it to strong impacts.
- Do not expose the charger to extreme temperatures.

8. Troubleshooting

If you encounter issues with your charger, refer to the following common problems and solutions:

- **Charger not turning on (no light):**
  - Ensure the USB cable is securely connected to both the charger and the power source.
  - Try a different USB power source or cable to rule out issues with external components.
- **Battery not charging (blue light remains on with battery inserted):**
  - Verify that the battery is correctly inserted with positive and negative terminals aligned.
  - Confirm that your battery model is listed as compatible with this charger.
  - The battery might already be fully charged.
  - The battery may be faulty or at the end of its lifespan. Try charging a different compatible battery if available.
- **Slow charging:**
  - Ensure your USB power source provides sufficient current (e.g., a wall adapter typically charges faster than a laptop USB port).
  - Avoid using excessively long or low-quality USB cables, which can reduce charging efficiency.

If the issue persists after trying these steps, please contact customer support.

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Norifon customer service directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01N9FTZPN

More documents and user manuals: **https://manuals.plus/**