Bosch SMS25AW05E

Bosch SMS25AW05E Freestanding Dishwasher Instruction Manual

Model: SMS25AW05E

1. Introduction

Welcome to your new Bosch SMS25AW05E Freestanding Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the dishwasher for the first time and keep it for future reference.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Never open the door during operation, especially during the hot water cycle.
- Sharp items should be loaded with handles up to prevent injury.

3. Setup and Installation

Proper installation is crucial for the performance and safety of your dishwasher. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage immediately to your dealer.

3.2 Placement

Place the dishwasher on a firm, level floor. Adjust the leveling feet to ensure stability and proper door alignment. The dishwasher is designed for freestanding installation.

3.3 Dimensions and Connections

Ensure adequate space and proper connections for water and electricity.

- **Appliance Dimensions (H x W x D):** 84.5 cm x 60 cm x 60 cm
- **Water Inlet Hose Length:** 165 cm
- **Water Outlet Hose Length:** 190 cm
- **Voltage:** 230 Volts

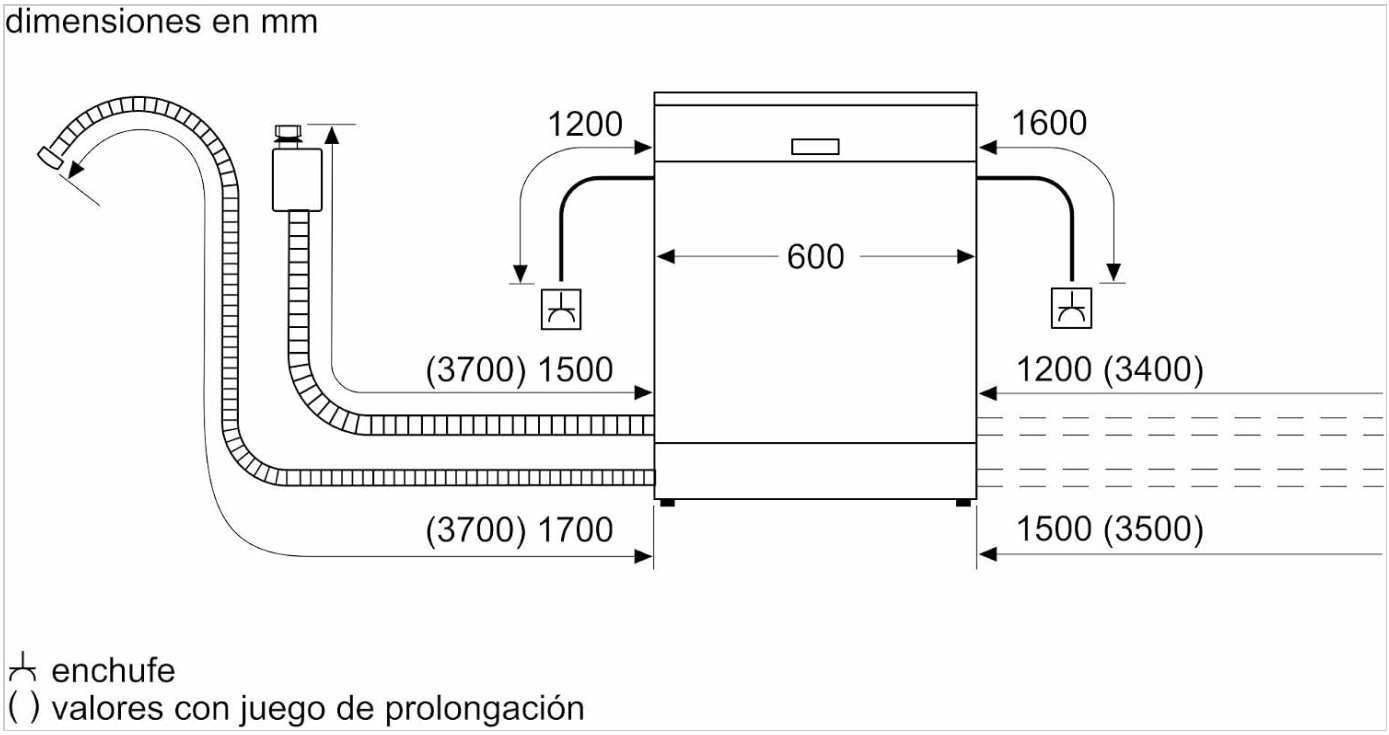


Figure 3.1: Dishwasher dimensions and connection points. Values in parentheses indicate lengths with extension kits.

4. Operating Instructions

This section guides you through the daily use of your Bosch dishwasher.

4.1 Control Panel Overview

The control panel features an LCD display and various buttons for program selection and settings.



Figure 4.1: The dishwasher control panel, showing the LCD display and program selection options.

4.2 Loading the Dishwasher

Load dishes efficiently to ensure optimal cleaning. The dishwasher has a capacity for up to 12 place settings.

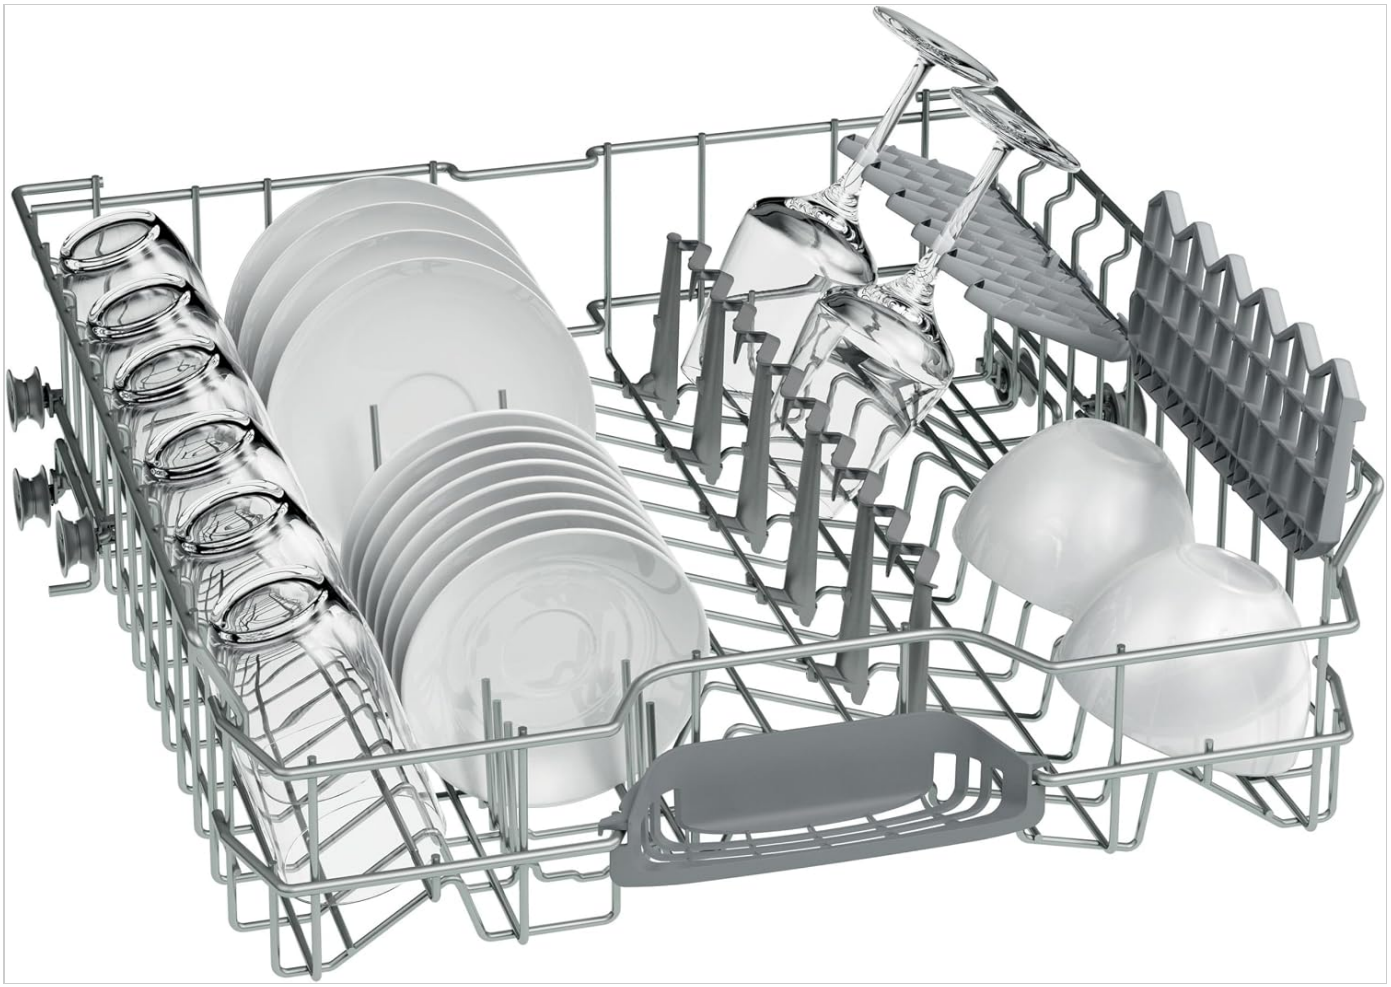


Figure 4.2: Upper rack for glasses and smaller items.



Figure 4.3: Lower rack for plates, pots, and cutlery.



Figure 4.4: Full interior view of the dishwasher with racks.

4.3 Adding Detergent and Rinse Aid

Open the detergent dispenser and add the appropriate amount of dishwasher detergent. Fill the rinse aid dispenser as needed.

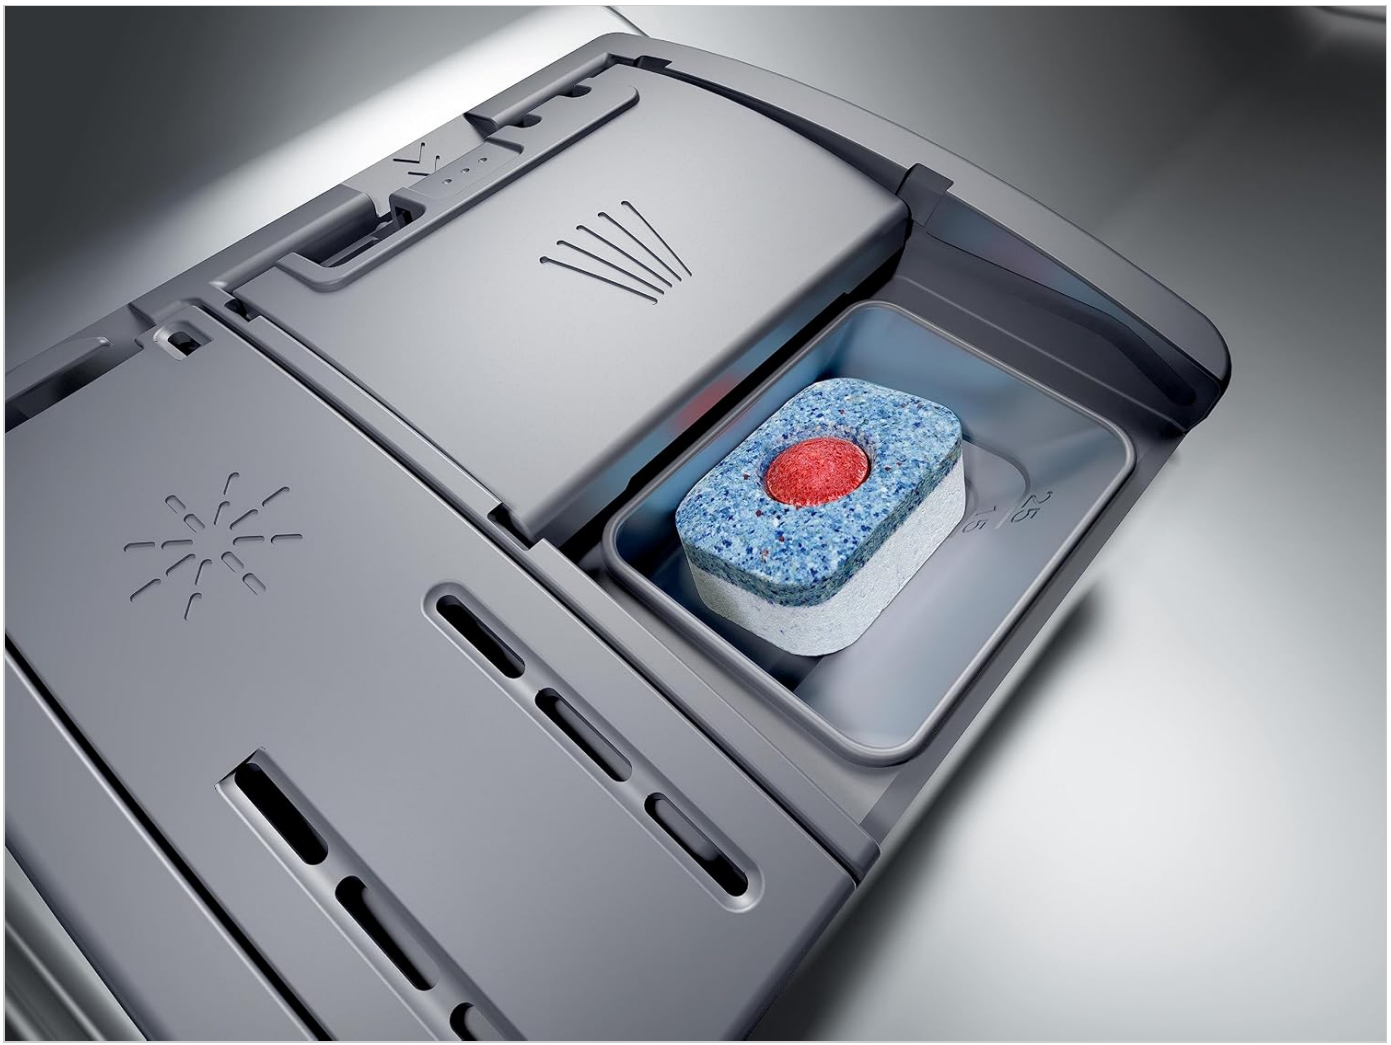


Figure 4.5: Detergent dispenser with a tablet.

4.4 Program Selection

Your dishwasher offers 5 wash programs to suit various needs:

- **Eco:** An energy-efficient program for normally soiled dishes.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Quick:** A faster cycle for lightly soiled items.
- **Automatic:** The dishwasher automatically adjusts the temperature and water usage based on the soil level.
- **Other options:** Delayed start, Half Load.

4.5 Drying System

The dishwasher features an advanced drying system for optimal results.

Your browser does not support the video tag.

Video 4.1: Explanation of the Sauber dishwasher drying system, highlighting its innovative structure for exceptional performance.

4.6 General Use

The dishwasher simplifies daily chores, allowing more time for family and leisure.

Your browser does not support the video tag.

Video 4.2: Demonstrates the convenience of using a dishwasher, allowing users to enjoy time with family instead of washing dishes.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning Filters

Regularly check and clean the filter system at the bottom of the dishwasher to prevent blockages and ensure efficient cleaning.

5.2 Cleaning Spray Arms

Ensure the spray arm nozzles are not blocked by food particles. Remove and clean them if necessary.

5.3 AquaStop System

The AquaStop system provides maximum protection against water leaks and potential damage. If a leak is detected, the dishwasher automatically stops and drains the water.



Figure 5.1: The AquaStop system for water leak protection.

5.4 Exterior and Interior Cleaning

Wipe the exterior with a damp cloth. The interior is made of stainless steel and can be cleaned with a dishwasher cleaner or a mild detergent solution.

6. Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

- **Dishes not clean:** Check filter, spray arms, detergent amount, and program selection.
- **Water not draining:** Check drain hose for kinks or blockages, and clean the filter.
- **Dishwasher not starting:** Ensure the door is fully closed, power is connected, and the program is selected.
- **Unusual noises:** Check for foreign objects in the pump area or spray arms.

For more detailed troubleshooting, consult the comprehensive user manual available on the Bosch website.

7. Specifications


Key technical specifications for the Bosch SMS25AW05E dishwasher:

Feature	Value
Model Number	SMS25AW05E
Brand	Bosch
Form Factor	Freestanding
Dimensions (H x W x D)	84.5 x 60 x 60 cm

Feature	Value
Weight	45.8 kg
Capacity	12 Place Settings
Water Consumption per Cycle	9.5 Liters
Annual Energy Consumption	258 kWh/year
Noise Level	48 Decibels
Number of Programs	5
Special Functions	GlassProtection, EcoSilence Motor, AquaStop, ActiveWater Technology
Interior Material	Stainless Steel
Voltage	230 Volts
Display Type	LCD
Color	White

7.1 Energy Label

The energy label provides information on the appliance's energy efficiency.

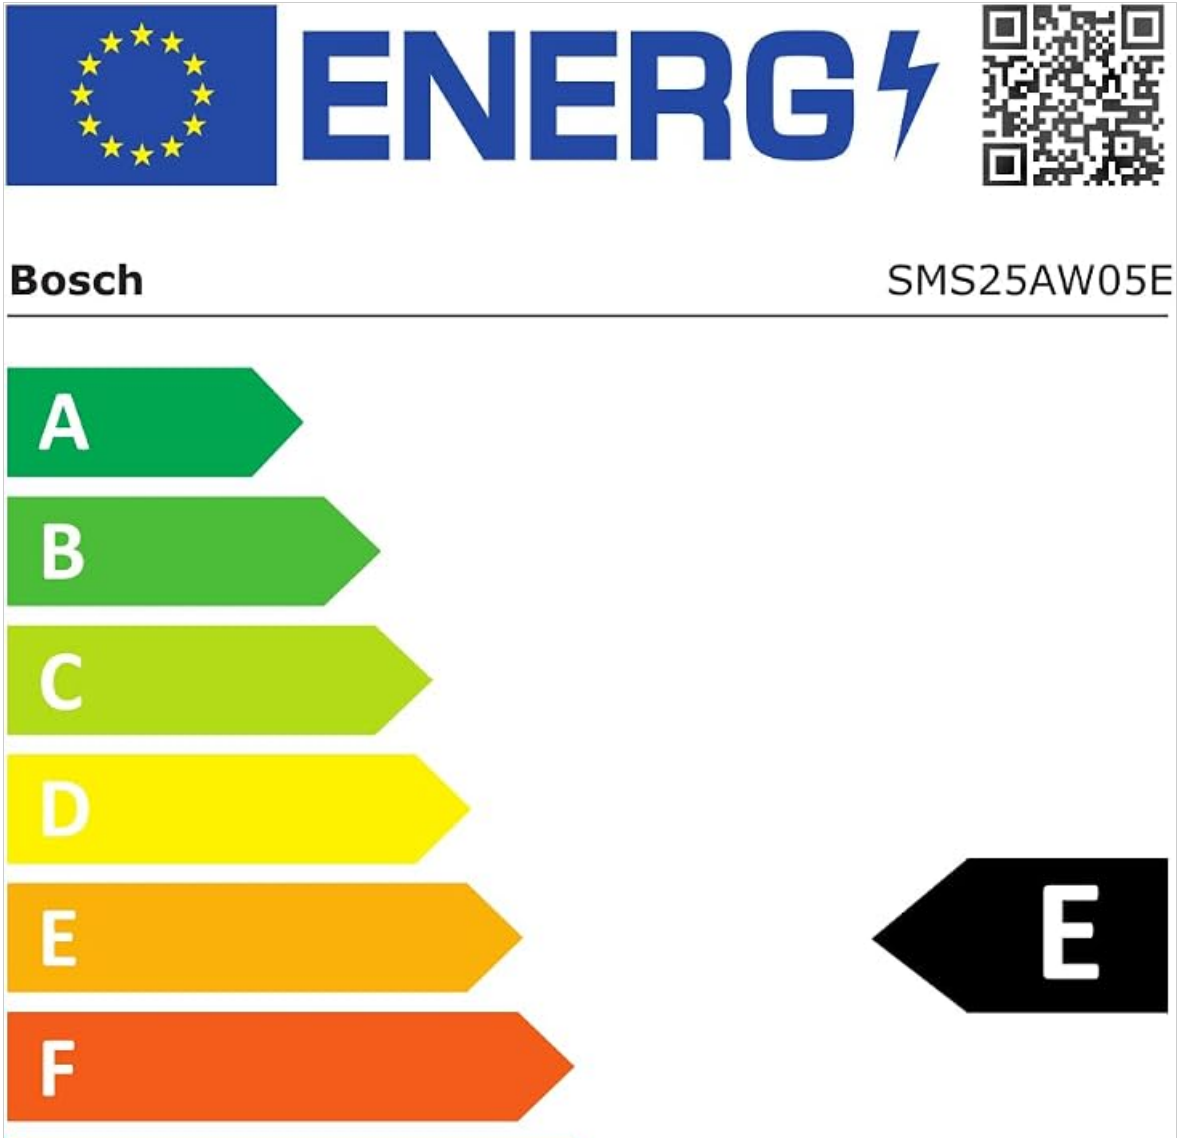

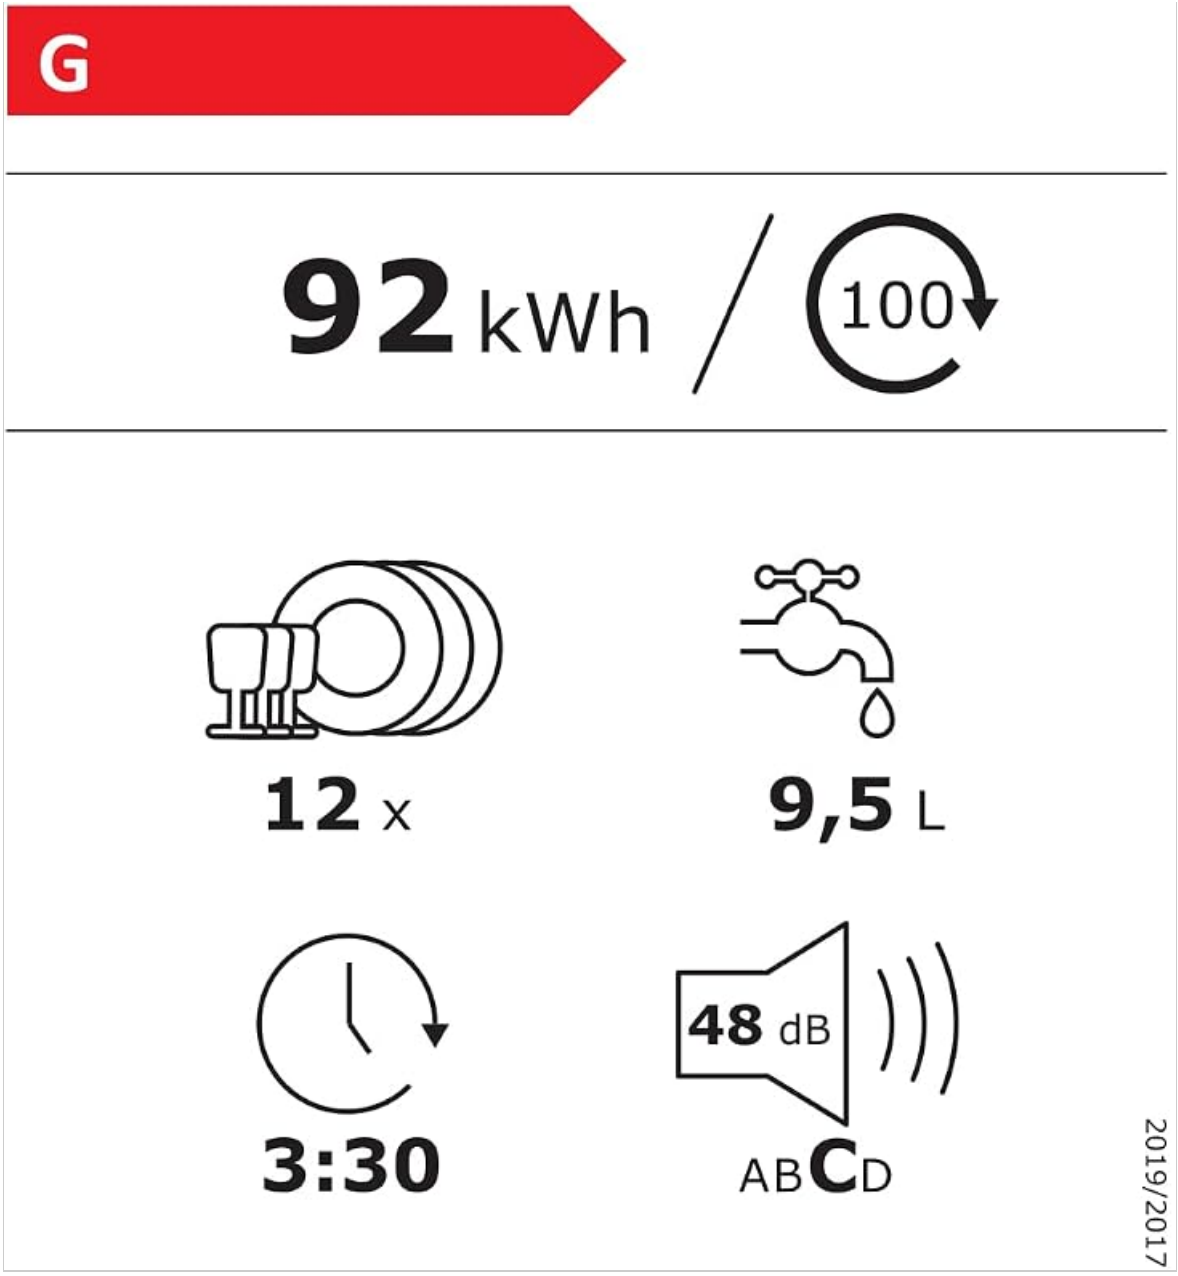


Figure 7.1: EU Energy Label for Bosch SMS25AW05E. For more details, visit the EPREL database.

8. Warranty

This product comes with a minimum warranty period of 24 months provided by the manufacturer. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty card included with your appliance or contact Bosch customer service.

9. Support

For technical assistance, spare parts, or further information, please contact Bosch customer service. You can find contact details and additional resources on the official Bosch website.

Bosch Official Website: www.bosch-home.com