Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Surpars House S017001000001

Surpars House Farmhouse Table Lamp Instruction Manual

Model: S017001000001

Introduction

Thank you for purchasing the Surpars House Farmhouse Table Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read these instructions carefully before installation and operation, and retain them for future reference.



Image: The Surpars House Farmhouse Table Lamp, featuring a clear glass shade, an Edison bulb, and a wooden base.

Important Safety Instructions

- Always disconnect the power supply before cleaning, changing the bulb, or performing any maintenance.
- Do not use this lamp in wet or damp locations. For indoor use only.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Do not exceed the maximum wattage specified for the bulb (3 watts incandescent, E26 Medium base).
- Keep flammable materials away from the lamp when in use.
- The lamp is not dimmable. Do not connect to a dimmer switch.
- Handle the glass shade and bulb with care to avoid breakage.

Setup

1. Unpacking

1. Carefully remove all components from the packaging.
2. Inspect all parts for any damage. Do not use if any part is damaged.
3. Ensure all components listed in the "What's in the Box" section are present.

2. Assembly and Bulb Installation

The Surpars House Farmhouse Table Lamp comes pre-assembled with the bulb included. No complex assembly is required.

1. Place the lamp on your desired stable surface.
2. Ensure the included Edison bulb is securely screwed into the E26 Medium base socket. If replacing, gently screw in the new bulb clockwise until snug. Do not overtighten.
3. Plug the power cord into a standard 120V AC electrical outlet.



Image: The fully assembled Surpars House Farmhouse Table Lamp, ready for use.

Operating Instructions

1. Power On/Off

The lamp features an on/off toggle switch located on the power cord.

- To turn the lamp on, locate the toggle switch on the cord and press it to the "ON" position.
- To turn the lamp off, press the toggle switch to the "OFF" position.

2. Placement

This table lamp is designed for indoor use and is ideal for bedrooms, living rooms, or offices. Place it on a flat, stable surface away from direct moisture or excessive heat.



Image: The Surpars House Farmhouse Table Lamp illuminating a desk area, showcasing its ambient light.

Maintenance

1. Cleaning

- Before cleaning, ensure the lamp is unplugged from the power outlet.
- Wipe the glass shade with a soft, dry, or slightly damp cloth. Avoid abrasive cleaners.
- Clean the wooden base and metal components with a soft, dry cloth. Do not use liquid cleaners directly on the wood.
- Ensure all parts are completely dry before plugging the lamp back in.

2. Bulb Replacement

The lamp uses an E26 Medium base bulb, with a maximum wattage of 3 watts (incandescent). An Edison-style bulb is included for its vintage aesthetic.

1. Unplug the lamp from the power outlet and allow the bulb to cool completely.

2. Gently unscrew the old bulb counter-clockwise.
3. Carefully screw in the new E26 Medium base bulb clockwise until snug. Do not overtighten.
4. Plug the lamp back into the outlet.

Troubleshooting

Problem	Possible Cause	Solution
Lamp does not light up.	Power cord not plugged in. Bulb is loose or burnt out. Wall outlet is not functioning. Switch is in the "OFF" position.	Ensure the power cord is securely plugged into a live outlet. Tighten or replace the bulb. Test the outlet with another appliance. Flip the toggle switch to the "ON" position.
Light is too dim.	Bulb wattage is low. Edison bulb design provides ambient light.	The included Edison bulb is 3 watts and designed for ambient lighting. If brighter light is desired, replace with an E26 LED bulb of equivalent brightness (e.g., 40W equivalent LED) but ensure it does not exceed the physical size limits of the glass shade.
Glass shade is wobbly.	Shade not seated correctly.	Gently lift and reseat the glass shade onto the base, ensuring it is stable.

Specifications

Feature	Detail
Model Number	S017001000001
Brand	Surpars House
Product Dimensions	6.29"D x 6.29"W x 10.23"H
Item Weight	1.76 pounds (0.8 Kilograms)
Material	Wood (Base), Glass (Shade), Metal (Components)
Finish Type	Painted
Shade Color	Clear
Bulb Base	E26 Medium

Feature	Detail
Light Source Type	Incandescent (Edison bulb included)
Wattage	3 watts (included bulb)
Voltage	120 Volts
Switch Type	Toggle (on cord)
Special Feature	Not Dimmable
Indoor/Outdoor Usage	Indoor
Included Components	Bulb

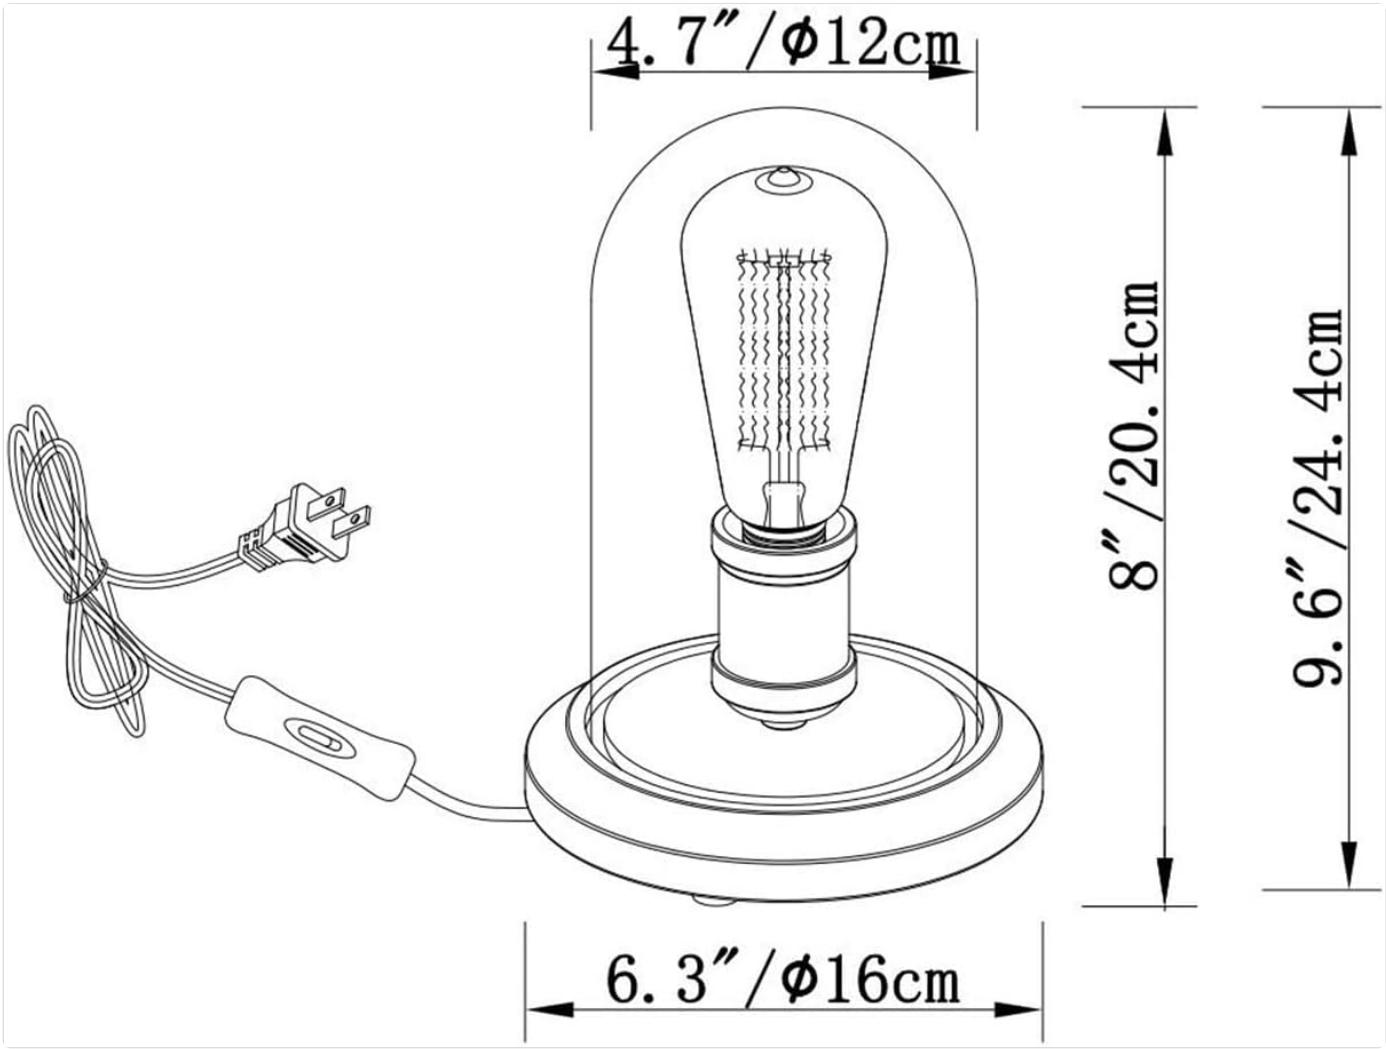


Image: Technical diagram showing the dimensions of the Surpars House Farmhouse Table Lamp.

Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For specific warranty details, please refer to the documentation provided at the time of purchase or contact customer support.

Customer Support

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Surpars House customer support.

- **Online:** Visit the Surpars House Store on Amazon.
- **Email:** Refer to your purchase documentation for direct email contact.

© 2024 Surpars House. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B06XVRZWTX

More documents and user manuals: **https://manuals.plus/**