Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Norifon BP-808-U

Norifon BP-808 USB Charger User Manual

Model: BP-808-U

1. Product Overview

The Norifon BP-808 USB Charger is designed for charging compatible Canon camcorder batteries. Its compact design allows for convenient use both indoors and during travel.

1.1 Package Contents

- Norifon BP-808 USB Charger
- USB Charging Cable

1.2 Compatibility

This charger is compatible with the following Canon battery models:

- BP-807
- BP-808
- BP-808D
- BP-809
- BP-819
- BP-819D
- BP-827
- BP-827D

It is also compatible with various Canon camcorder series including FS, HF, HG, iVIS, LEGRIA, and VIXIA that use these battery types. Please verify your battery model number, typically printed on the battery label, to ensure compatibility.



Image: Example of a Canon BP-808 battery, showing where the model number is typically located.

Your browser does not support the video tag.

Video: This video demonstrates how to identify the correct BP-808 charger and provides instructions on its usage.

2. Getting Started

2.1 Connecting the Charger

The Norifon BP-808 USB Charger can be powered by various USB sources. Connect the provided USB cable to the charger's Type-C port and then to a compatible USB power source.

- Laptop or PC USB port
- USB wall charger
- USB travel charger
- USB car adapter
- Power bank



Image: The USB Type-C port on the charger for power input.



Image: The charger can be powered by a PC, AC charger, car charger, or power bank.





Image: The included USB charging cable, measuring 11.8 inches (30 cm) in length.

3. Operating Instructions

3.1 Battery Insertion

To charge a battery, align the battery's positive (+) and negative (-) terminals with the corresponding contacts in the charger slot. Ensure the battery is inserted correctly for charging to begin.

1. Identify the battery model number on your battery.
2. Ensure the battery's terminals are aligned with the charger's contacts. If the battery does not fit or align, do not force it.
3. If terminals are not aligned, flip the battery over and re-attempt insertion.
4. Insert the battery firmly until it is securely seated in the charging slot.



Image: Incorrect battery insertion where positive and negative terminals are not aligned.

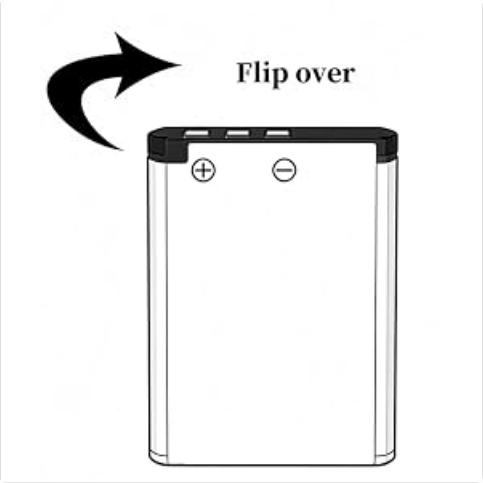


Image: Instruction to flip the battery over if terminals do not align initially.

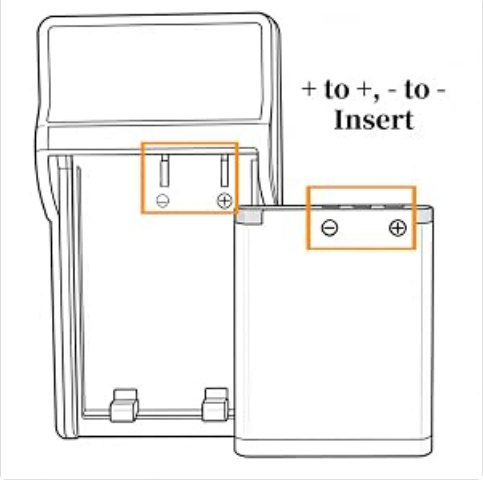


Image: Correct battery insertion, ensuring positive (+) to positive (+) and negative (-) to negative (-) terminal alignment.

3.2 Charging Status Indicator

The charger features an LED indicator to display the charging status:

- **Blue Light (No-load):** Indicates the charger is powered on but no battery is inserted, or the battery is fully charged.
- **Red Light:** Indicates the battery is currently charging.
- **Blue Light (Fully Charged):** Indicates the battery has completed charging.

4. Maintenance and Warnings

4.1 General Care

- Keep the charger in a dry location.
- Clean the charger with a soft, dry cloth. Do not use liquid cleaners.
- Store the charger away from extreme temperatures.
- The charger features a compact and lightweight design (2cm thick), making it suitable for travel and outdoor use.

4.2 Safety Warnings

To ensure safe operation and prevent damage, please observe the following warnings:

- Do not open or modify the charger.
- Do not immerse the charger in water or expose it to excessive moisture.
- Use in dry locations only.
- Only use compatible batteries with this charger.





Image: The back label of the charger detailing model, input/output, and safety warnings.

5. Troubleshooting

- **Charger LED is blue but battery is not charging:** Ensure the battery is correctly inserted and its terminals are making proper contact with the charger. Verify the battery is compatible with the charger.
- **Charger LED is off:** Check if the USB cable is securely connected to both the charger and the power source. Try a different USB port or power adapter to rule out issues with the power source.
- **Battery not fully charging:** Ensure the battery is compatible. If the issue persists, the battery may be faulty or at the end of its lifespan.

6. Technical Specifications

Specification	Detail
Brand	Norifon

Model Number	BP-808-U
Input Voltage	DC 5V
Output Voltage	DC 4.2V / 8.4V ±5%
Current Rating	0.6 A (500mA)
Connector Type	USB-A (for cable), USB Type-C (on charger)
Item Weight	30 g
Certifications	CE, FCC

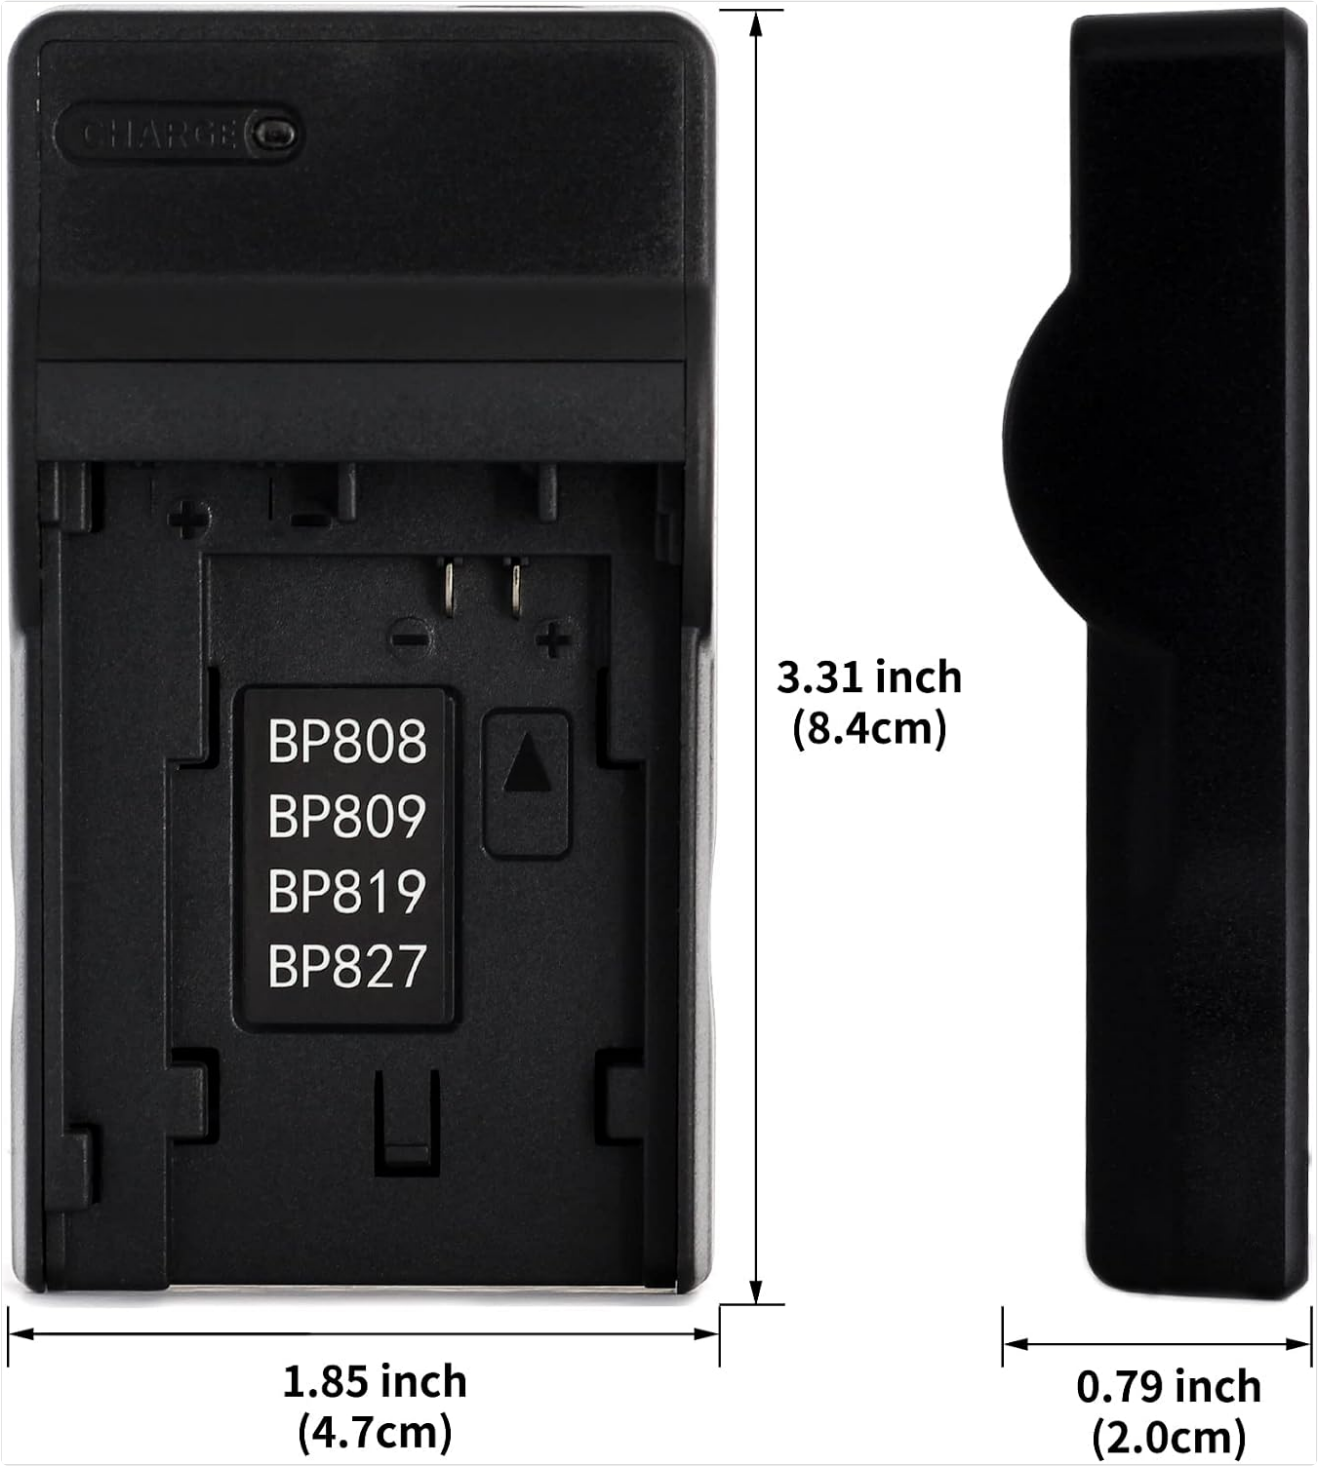


Image: Physical dimensions of the charger: 3.31 inches (8.4 cm) x 1.85 inches (4.7 cm) x 0.79 inches (2.0 cm).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B06ZYRFYQJ

More documents and user manuals: **https://manuals.plus/**