NEEWER 10087322

Neewer Camera Backpack Bag Instruction Manual

Model: 10087322

Introduction

This manual provides comprehensive instructions for the proper use, setup, and maintenance of your Neewer Camera Backpack Bag. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

Product Overview

The Neewer Camera Backpack Bag is designed to protect and transport your camera equipment. It features a durable, waterproof exterior and a shockproof interior with customizable partitions. The bag is suitable for DSLR and mirrorless cameras, multiple lenses, flashes, and various accessories.



Image: Front, side, and interior views of the Neewer Camera Backpack Bag, highlighting its compact design and internal organization. Dimensions are visible on the side view.

Key features include:

- **Waterproof Exterior:** Provides protection against moisture.
- **Shockproof Interior:** Padded compartments safeguard delicate equipment.
- **Customizable Partitions:** Adjustable dividers allow for flexible organization.
- **External Tripod Holder:** Securely carries a tripod or monopod.
- **Multiple Pockets:** Offers additional storage for small items.

Setup

1. Adjusting Interior Dividers

The backpack features a fully customizable interior with hook-and-loop fastened dividers. To adjust:

1. Open the main compartment zipper.

2. Carefully detach the desired divider from the interior lining.
3. Reattach the divider in a new position to create compartments that fit your specific camera body, lenses, and accessories. Ensure the dividers are firmly pressed against the lining for secure attachment.

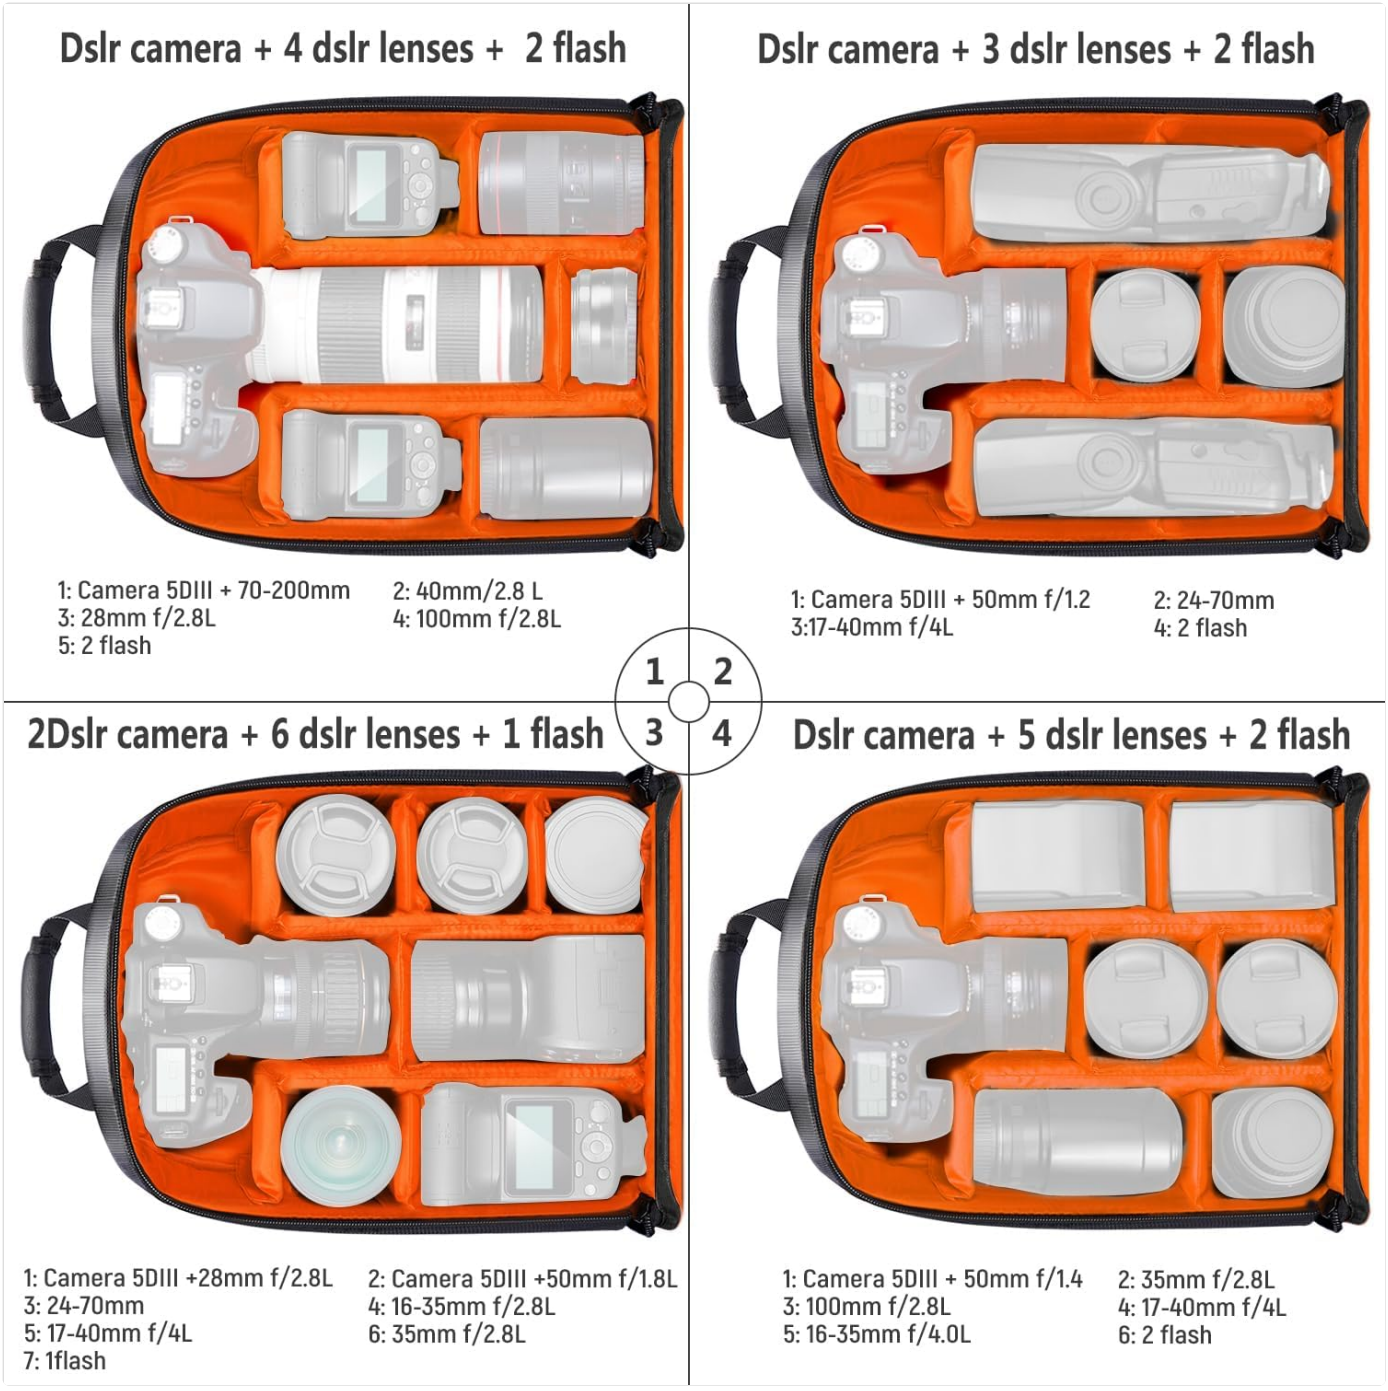


Image: Examples of interior configurations, demonstrating how the customizable dividers can be arranged to accommodate different camera setups, including DSLR bodies, multiple lenses, and flashes.

2. Adjusting Shoulder Straps

The shoulder straps are adjustable to ensure a comfortable fit. Loosen or tighten the straps using the buckles located at the bottom of each strap until the backpack rests comfortably on your back.

3. Attaching a Tripod/Monopod

A dedicated holder on the side of the backpack allows for secure attachment of a tripod or monopod:

1. Place the base of the tripod/monopod into the mesh pocket on the side of the bag.
2. Secure the upper part of the tripod/monopod using the adjustable strap located above the mesh pocket. Fasten the buckle and tighten the strap to prevent movement during transport.



Image: The Neewer Camera Backpack demonstrating the side tripod/monopod holder with a tripod securely fastened by the mesh pocket and adjustable strap.

Operating Instructions

1. Loading Equipment

After configuring the interior dividers, carefully place your camera body, lenses, and other accessories into their designated compartments. Ensure that all items fit snugly to prevent shifting and potential damage during transport.

2. Securing the Bag

Close all zippers completely. If present, fasten any external buckles or straps to further secure the contents and maintain the bag's compact form.

3. Carrying the Backpack

Use the adjustable shoulder straps for comfortable carrying. For short distances, the top carry handle can be used. Always ensure the bag is properly balanced when carrying heavy equipment.

Maintenance

Cleaning

To clean the exterior of the backpack, wipe with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow the bag to air dry completely before storing or using. For the interior, use a soft brush or vacuum cleaner to remove dust and debris.

Water Resistance

The bag features a waterproof exterior. While designed to protect against light rain and splashes, it is not intended for submersion. In heavy rain, consider using an additional rain cover for maximum protection.

Troubleshooting

Zipper Stiffness

If zippers become stiff, apply a small amount of zipper lubricant or wax to the teeth. Avoid forcing the zipper, as this can cause damage.

Loose Dividers

Ensure that all hook-and-loop dividers are firmly pressed against the interior lining. If dividers consistently detach, reposition them to ensure maximum contact with the hook-and-loop material.

Discomfort While Carrying

Adjust the shoulder straps to distribute weight evenly. Ensure the bag is not overloaded beyond its intended capacity. For prolonged carrying, consider taking breaks.

Specifications

Feature	Detail
Brand	NEEWER
Model Number	10087322
UPC	191073015845
Closure Type	Buckle
Capacity	20 liters
Strap Type	Adjustable
Pocket Description	Utility Pocket
Handle Type	Carry Handle
Number of Compartments	7
Water Resistance Level	Waterproof
Color	Orange (Interior)
Item Dimensions (L x W x H)	11.8" x 5.5" x 14.6" (30cm x 14cm x 37cm)

Size	Medium
Material Type	Nylon
Shell Type	Soft

Warranty Information

Please refer to the manufacturer's official website or the product packaging for detailed warranty information regarding your Neewer Camera Backpack Bag.

Support

For further assistance, technical support, or inquiries about your Neewer Camera Backpack Bag, please visit the official NEEWER website or contact their customer support department directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question