Tefal GV9071G0

Tefal Pro Express Care High Pressure Steam Generator Iron

Model: GV9071G0

Introduction

This manual provides detailed instructions for the safe and efficient use of your Tefal Pro Express Care High Pressure Steam Generator Iron. Designed for powerful and effective garment care, this appliance combines high-pressure steam with advanced features to simplify your ironing tasks. Please read this manual thoroughly before first use and keep it for future reference.

Safety Instructions

Always observe the following basic safety precautions when using electrical appliances:

- Read all instructions before use.
- Do not leave the iron unattended while it is connected to the mains supply.
- Unplug the iron from the mains socket before filling with water, cleaning, or performing maintenance.
- Keep the iron and its cord out of reach of children and persons with reduced physical, sensory, or mental capabilities.
- Use the iron only on a stable, heat-resistant surface.
- Never direct steam towards people or pets.
- Do not immerse the iron or base unit in water or any other liquid.
- Only use tap water in the water tank. Do not use distilled, demineralized, or scented water, as this can damage the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

Product Overview

Components

- Iron unit with soleplate
- Steam generator base

- Removable water tank (1.6L capacity)
- Steam hose
- Power cord
- Control panel with fabric settings
- Removable Scale Collector
- Lock system for secure transport

Features

- **Spiral Protect Anti-drip System:** Prevents dirty water drips from staining garments.
- **Removable Scale Collector:** Captures scale particles to maintain steam performance over time.
- **Three Preset Ironing Levels:** Delivers optimal temperature and steam for various ironable fabrics.
- **High Pressure Steam:** Up to 7.5 bars of pressure for efficient crease removal.
- **Powerful Steam Boost:** 500g/min steam boost for stubborn creases.
- **Large Water Tank:** 1.6L removable tank allows for longer ironing sessions and can be refilled during use.



Figure 1: The Tefal Pro Express Care Steam Generator Iron with its base unit.



Figure 2: Illustration of the five fabric settings: Synthetics, Silk, Wool, Cotton, and Linen.

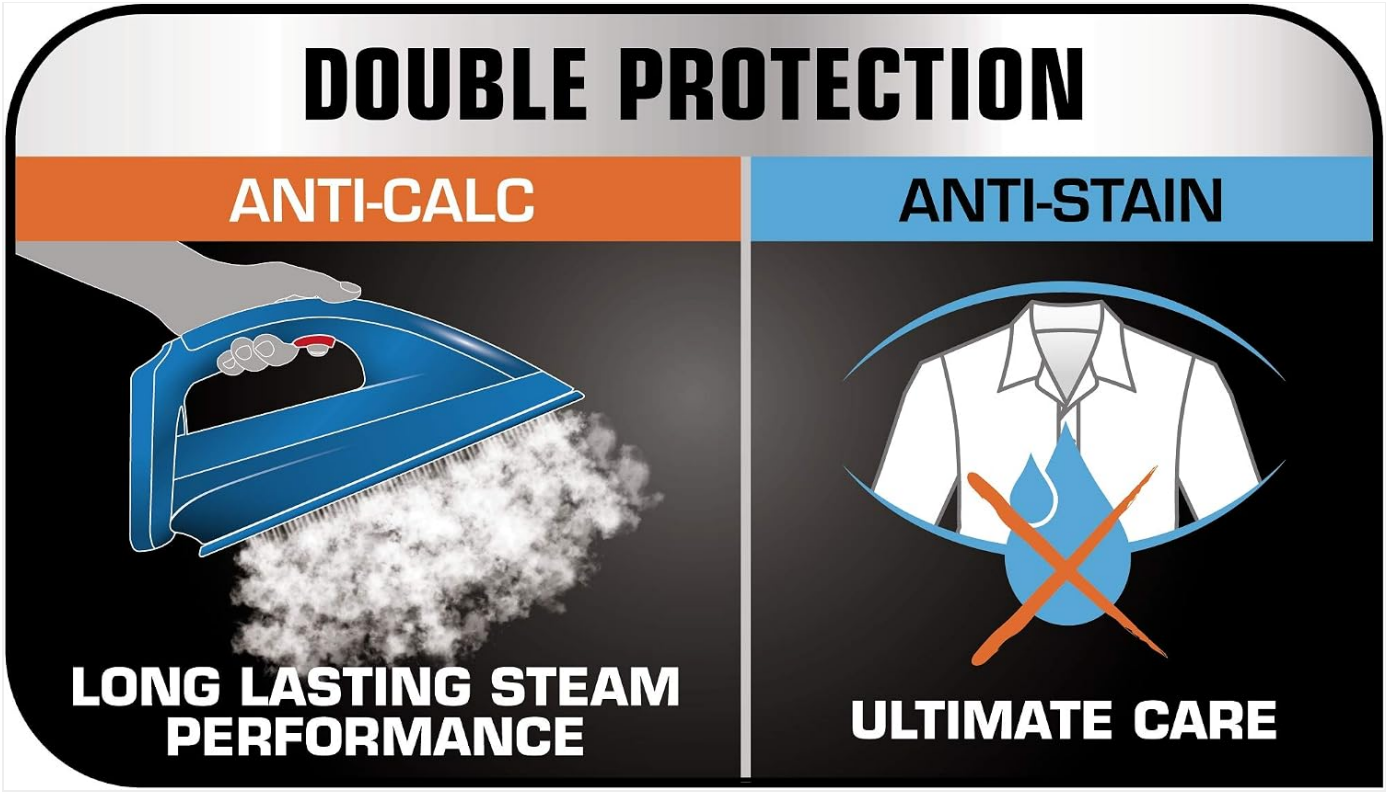


Figure 3: Diagram illustrating the double protection features: Anti-Calc for long-lasting steam performance and Anti-Stain for ultimate garment care.

Setup

Unpacking

1. Carefully remove the iron and all accessories from the packaging.
2. Remove any protective films or stickers from the soleplate and the appliance.
3. Ensure all components are present and undamaged.

Filling the Water Tank

1. Remove the water tank from the base unit by pulling it upwards.
2. Open the filling cap and fill the tank with clean tap water up to the 'MAX' level indicator.
3. Close the filling cap securely and reinsert the water tank into the base unit until it clicks into place.

Initial Use

1. Place the steam generator on a stable, flat, and heat-resistant surface.
2. Unwind the power cord completely and plug it into a grounded electrical outlet.
3. Press the On/Off button to switch on the appliance. The indicator light will illuminate.
4. Allow the iron to heat up. This typically takes approximately 2 minutes. The steam ready indicator light will stop flashing and remain solid when ready.
5. For the first use, or if the iron has not been used for a long time, press the steam trigger several times away from garments to prime the steam system and remove any condensation.

Operating Instructions

Selecting Fabric Settings

1. Once the iron is heated, select the appropriate fabric setting on the control panel. The available settings are Synthetics, Silk, Wool, Cotton, and Linen.
2. The iron will automatically adjust the soleplate temperature and steam output for the selected fabric type.
3. Always check the garment's care label for recommended ironing instructions.

Ironing Techniques

- **Standard Ironing:** Place the garment on the ironing board. Press the steam trigger on the iron handle to release steam as you glide the iron over the fabric.
- **Steam Boost:** For stubborn creases, press the steam boost button (if available on your model) or press the steam trigger rapidly multiple times to activate a powerful burst of steam.
- **Vertical Steaming:** The iron can be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron a few centimeters away from the fabric and press the steam trigger.
- **Dry Ironing:** If you wish to iron without steam, simply do not press the steam trigger.

When finished ironing, press the On/Off button to turn off the appliance and unplug it from the mains socket. Allow the iron to cool down completely before storing.

Maintenance

Descaling (Removable Scale Collector)

Your Tefal Pro Express Care iron is equipped with a Removable Scale Collector to simplify descaling and maintain optimal steam performance. The 'Calc' indicator light on the control panel will illuminate when the collector needs cleaning.

1. Ensure the appliance is unplugged and has cooled down completely (at least 2 hours after use).
2. Locate the Scale Collector on the side of the base unit.
3. Unscrew and remove the collector.
4. Rinse the collector thoroughly under running water to remove any scale particles.
5. Screw the clean collector back into its housing until it is secure.

6. Press the 'Reset' button (if available) or follow the manual's specific instructions to reset the 'Calc' indicator.

Cleaning the Soleplate

- Allow the soleplate to cool completely.
- Wipe the soleplate with a damp cloth or a non-abrasive sponge.
- For stubborn marks, use a specialized soleplate cleaning stick, following its instructions. Do not use abrasive pads or metallic objects.

Storage

- Ensure the iron is unplugged and completely cool.
- Empty any remaining water from the tank.
- Secure the iron to its base using the lock system.
- Store the power cord and steam hose neatly.
- Store the appliance in a dry, safe place, out of reach of children.

Troubleshooting

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty; appliance not heated up; steam trigger not pressed.	Fill water tank; wait for steam ready indicator; press steam trigger.
Water drips from the soleplate.	Iron not hot enough; steam used too frequently; Spiral Protect system needs to activate.	Wait for iron to reach full temperature; allow brief pauses between steam bursts.
Brown marks appear on fabric.	Soleplate is dirty; scale build-up; incorrect water used.	Clean soleplate; clean Scale Collector; use only tap water.
Iron does not heat up.	Not plugged in; power switch off; circuit breaker tripped.	Check power connection; ensure On/Off button is pressed; check household circuit breaker.

Technical Specifications

Specification	Detail
Brand	Tefal
Model Number	GV9071G0
Colour	Blue
Product Dimensions	48.6 x 28.8 x 36.6 cm
Item Weight	4.73 kg

Specification	Detail
Material	Plastic
Auto Shutoff	No
Special Features	Limescale prevention, Intelligent technology, High pressure, Quick glide, Removable limescale collector, Safety, Removable water tank, Easy cord

Warranty and Support

Your Tefal Pro Express Care Steam Generator Iron comes with a 2-year guarantee from the date of purchase, covering manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

For technical assistance, repairs, or to inquire about spare parts, please contact Tefal customer support. Contact information can typically be found on the official Tefal website or on your product packaging.