Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JustFine VSX-56TXI, AXD7534, VSX-520-K, VSX-917V, VSX-1029-K

Instruction Manual for JustFine Replacement Remote Control

Compatible with Pioneer VSX-56TXI, AXD7534, VSX-520-K, VSX-917V, VSX-1029-K Home Theater AV A/V Audio/Video Receiver Systems

1. Introduction

This manual provides essential information for the proper use and maintenance of your JustFine replacement remote control. This high-quality remote is designed to be compatible with various Pioneer Home Theater AV Receiver Systems, including models VSX-56TXI, AXD7534, VSX-520-K, VSX-917V, and VSX-1029-K. It comes pre-programmed and requires no additional setup for immediate use, simply insert batteries.

2. Product Overview



Figure 2.1: Front View of Remote Control

This image displays the front of the remote control, showing the array of buttons for various functions such as power, input selection, volume control, channel navigation, and specific controls for BD, CD-R, DVR, TV, Tuner, and Portable devices. It also features a central navigation pad with 'ENTER' and 'RETURN' buttons, along with audio parameter and setup controls.

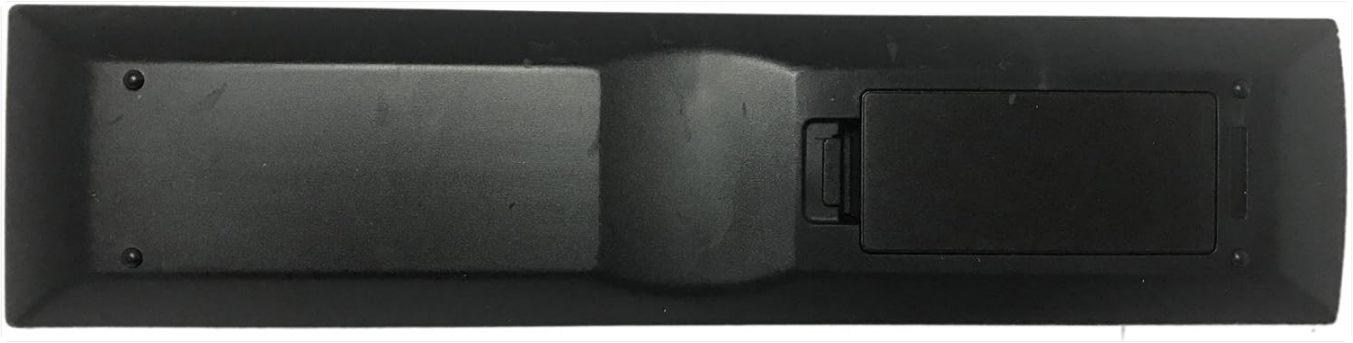


Figure 2.2: Back View of Remote Control

This image shows the back of the remote control, highlighting the battery compartment. The compartment is designed for easy access to insert or replace batteries, which are necessary for the remote's operation.

3. Setup

3.1 Battery Installation

The remote control requires batteries for operation. Batteries are not included with the remote. Please follow these steps to install them:

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.2).
2. Slide open the battery compartment cover.
3. Insert the appropriate batteries (typically AAA, though not specified, common for remotes) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for use as it is pre-programmed.

4. Operating Instructions

This replacement remote control is pre-programmed and requires no additional programming. It is designed to function immediately with compatible Pioneer Home Theater AV Receiver Systems.

4.1 Basic Operation

- **Power On/Off:** Press the **POWER** button to turn your Pioneer receiver on or off.
- **Input Selection:** Use the **INPUT SELECT** or dedicated input buttons (e.g., BD, CD-R, DVR, TV, Tuner, Portable) to switch between different audio/video sources connected to your receiver.
- **Volume Control:** Adjust the audio level using the **VOLUME +** and **VOLUME -** buttons.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to unmute.
- **Navigation:** Use the directional arrow buttons and the **ENTER** button for menu navigation within your receiver's interface.
- **Function Buttons:** Utilize specific buttons like **AUDIO PARAMETER**, **SETUP**, **PRESET**, **TUNE**, **DISPLAY**, and others as per your receiver's functionalities.

Ensure there is a clear line of sight between the remote control and the infrared sensor on your Pioneer receiver for optimal performance.

5. Maintenance

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in liquids.

6. Troubleshooting

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Ensure there is a clear line of sight between the remote's infrared emitter and the receiver's sensor. Obstructions can block the signal.
  - Make sure you are within the effective range of the remote control.
- **Specific Buttons Not Working:**
  - Ensure the remote is pointed directly at the receiver.
  - Check for any physical damage or debris under the button.
- **Intermittent Operation:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

If the issue persists after following these steps, please contact customer support as detailed in the "Warranty and Support" section.

7. Specifications

Feature	Detail
Brand	JustFine
Compatible Devices	Pioneer Home Theater AV Receiver Systems (VSX-56TXI, AXD7534, VSX-520-K, VSX-917V, VSX-1029-K)
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic, Pre-programmed
Max Number of Supported Devices	1 (specific Pioneer receiver models)
Product Dimensions	4.53 x 1.57 x 1.38 inches
Item Weight	2.72 ounces
ASIN	B071D1H4VM

Feature	Detail
Date First Available	November 26, 2016

8. Warranty and Support

Your JustFine replacement remote control is backed by a commitment to quality and customer satisfaction.

- **Quality Warranty:** This product is sold with a 30-day quality warranty.
- **Money-Back Guarantee:** Enjoy peace of mind with a money-back guarantee and hassle-free return policy.

8.1 Customer Support

Should you encounter any problems or have questions regarding your remote control, please do not hesitate to contact us. For support, kindly email the seller directly through the platform where you purchased the product. Please provide your order details and a clear description of the issue to facilitate a quick resolution.

© 2023 JustFine. All rights reserved. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B071D1H4VM

More documents and user manuals: **https://manuals.plus/**