Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Victrola VJB-125

Victrola VJB-125 Retro Desktop Jukebox Instruction Manual

Model: VJB-125
Brand: Victrola

Introduction

This instruction manual provides detailed information on the setup, operation, and maintenance of your Victrola VJB-125 Retro Desktop Jukebox. Please read this manual thoroughly before using the product to ensure proper function and to maximize your enjoyment of its features.

Important Safety Information

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons. Keep these instructions for future reference.

- Do not expose this unit to rain or moisture.
- Do not block any ventilation openings.
- Ensure the power cord is not pinched or walked on.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

What's in the Box

Upon unpacking, ensure all items listed below are present and in good condition:

- Victrola VJB-125 Retro Desktop Jukebox Unit
- Power Adapter
- Instruction Manual (this document)

Product Overview and Features

The Victrola VJB-125 is a compact desktop jukebox designed to bring a retro aesthetic with modern audio capabilities. Its key features include:

- **CD Player:** Integrated CD player for standard audio CDs.
- **FM Radio:** Built-in FM tuner with station presets.
- **Bluetooth Connectivity:** Wirelessly stream audio from Bluetooth-enabled devices up to 33 feet away.
- **Aux-in Jack:** 3.5mm auxiliary input for connecting non-Bluetooth audio devices.
- **Color Changing LED Lights:** Retro-style LED light tubing with multiple color options and modes.
- **Compact Design:** At 15 inches tall, it fits easily on tabletops or countertops.



Figure 1: Front view of the Victrola VJB-125 Jukebox, showcasing its retro design with illuminated blue and red light tubes and central display.

Setup

1. Unpacking

Carefully remove the jukebox from its packaging. Retain the packaging materials for future transport or storage.

2. Placement

Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

3. Power Connection

Connect the provided power adapter to the DC IN jack on the back of the unit, then plug the adapter into a standard wall outlet (AC 100-240V, 50/60Hz). The unit will enter standby mode.

Operating Instructions

Power On/Off

Press and hold the **FUNCTION** button for a few seconds to turn the unit ON or OFF. A short press of the **FUNCTION** button will cycle through the different modes (CD, FM, Bluetooth, AUX).

CD Player Operation

1. Press the **FUNCTION** button until "CD" mode is selected.
2. Gently press the "PUSH TO OPEN" panel on the front of the unit to reveal the CD tray.
3. Place an audio CD onto the tray with the label side facing up.
4. Close the panel. The CD will begin to play automatically.
5. Use the **PLAY/PAUSE**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons to control playback.
6. Adjust the volume using the **VOLUME** knob.

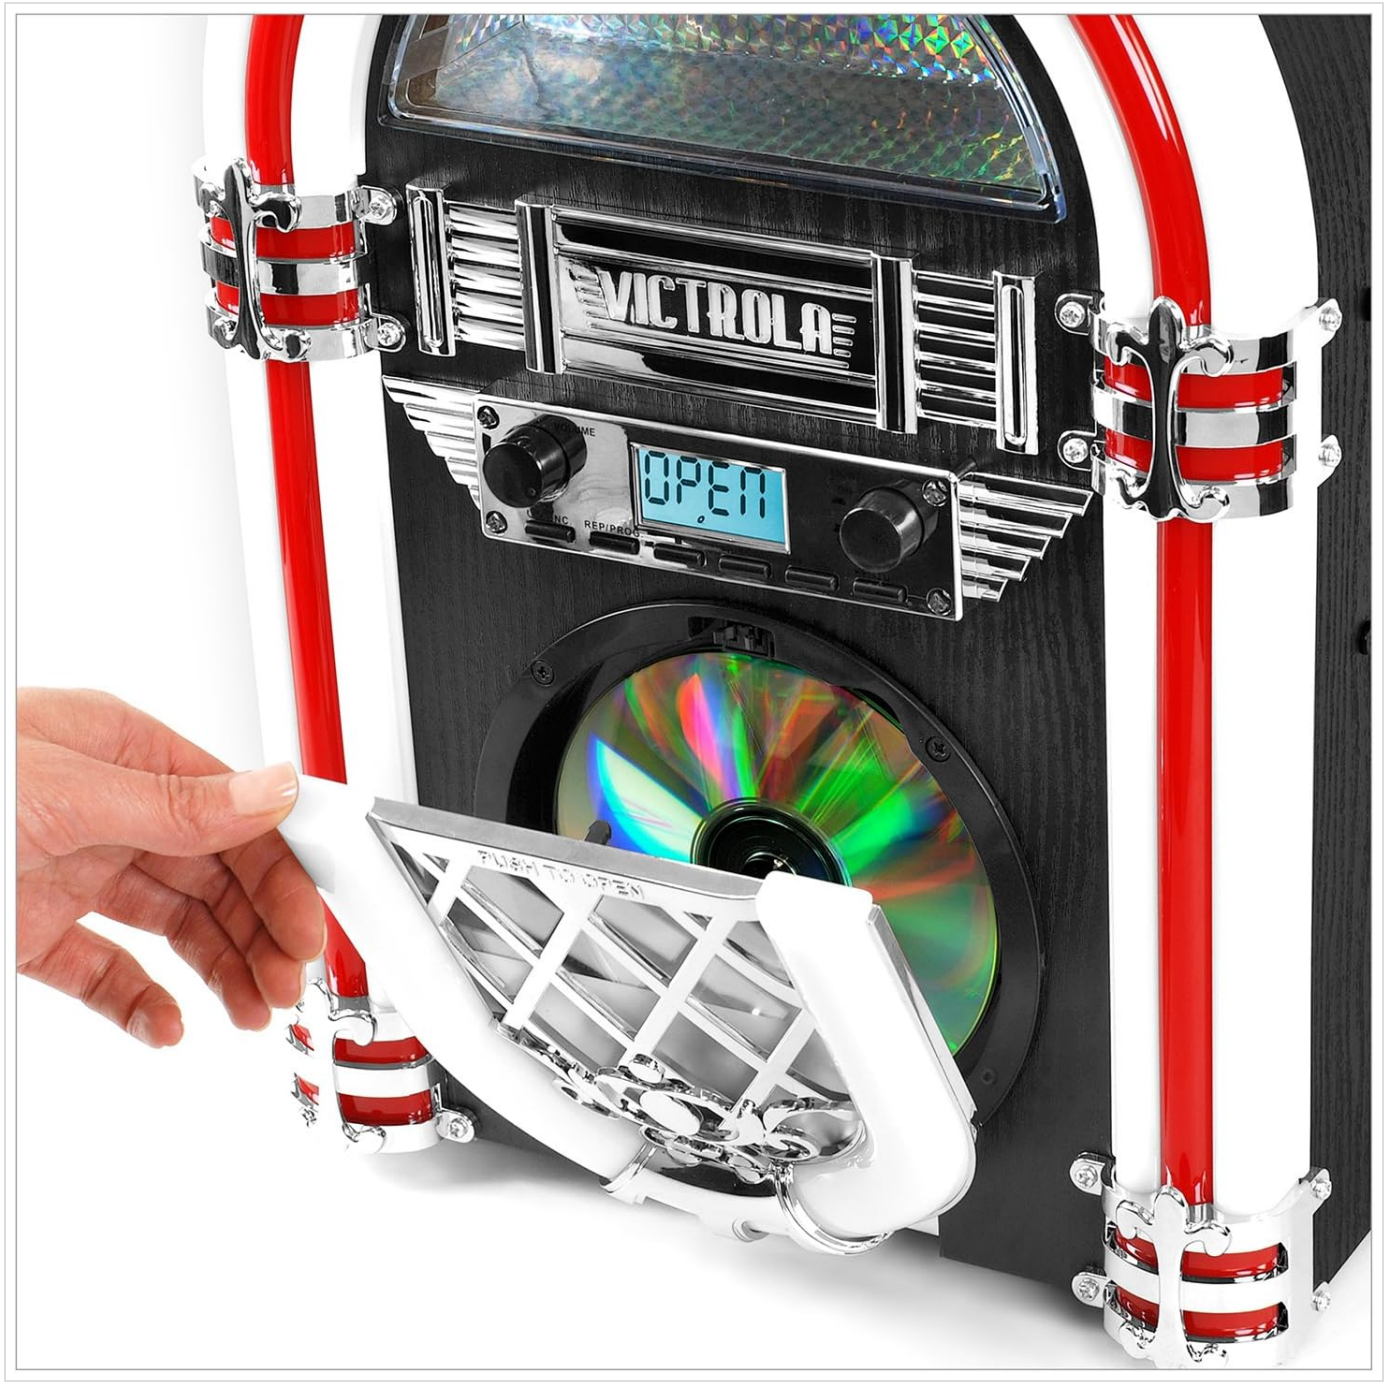


Figure 2: A hand demonstrating how to open the "PUSH TO OPEN" panel to access the integrated CD player.

FM Radio Operation

1. Press the **FUNCTION** button until "FM" mode is selected.
2. To automatically scan and save available stations, press and hold the **SCAN** button. The unit will scan and store up to 20 presets.
3. To manually tune, use the **TUNE +/-** buttons.
4. To recall saved presets, use the **PRESET +/-** buttons.
5. Adjust the volume using the **VOLUME** knob.

Bluetooth Pairing and Playback

1. Press the **FUNCTION** button until "BT" (Bluetooth) mode is selected. The display will show "BT" and flash, indicating it's in pairing mode.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet).
3. Search for "Victrola Jukebox" in your device's Bluetooth settings and select it to pair.

4. Once paired, the "BT" indicator will stop flashing, and you can begin playing music from your device.
5. Control playback (play/pause, skip) and volume from your connected device or the jukebox's controls.



Figure 3: The Victrola VJB-125 Jukebox displaying "BT" on its screen, indicating Bluetooth mode, with a smartphone nearby showing a successful Bluetooth connection.

Aux-in Usage

1. Connect a 3.5mm audio cable (not included) from the AUX OUT jack of your external audio device to the AUX IN jack on the back of the jukebox.
2. Press the **FUNCTION** button until "AUX" mode is selected.
3. Play audio from your connected device. The sound will be output through the jukebox's speakers.
4. Adjust the volume using the **VOLUME** knob on the jukebox or the volume control on your external device.

LED Light Control

The jukebox features color-changing LED lights. Use the **LIGHT** button to cycle through different light modes:

- **Cycle Mode:** Lights automatically transition through various colors.
- **Single Color Mode:** Select a static color.
- **Lights Off:** Turn off the LED lights.



Figure 4: The Victrola VJB-125 Jukebox illuminated with vibrant LED lights, creating a retro ambiance in a dimly lit setting.

Maintenance and Care

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches.
- **Ventilation:** Ensure ventilation openings are clear of dust and debris.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet is not active.	Ensure power adapter is securely plugged into the unit and a working wall outlet.

Problem	Possible Cause	Solution
No sound	Volume is too low or incorrect mode selected.	Increase volume. Ensure the correct mode (CD, FM, BT, AUX) is selected for your audio source.
CD not playing	CD inserted incorrectly or disc is dirty/damaged.	Ensure CD is inserted label-side up. Clean the CD or try a different disc.
Bluetooth not connecting	Jukebox not in pairing mode or device too far.	Ensure jukebox is in "BT" mode and flashing. Move device closer. Forget "Victrola Jukebox" on your device and re-pair.
FM radio static	Poor signal reception.	Adjust the unit's position or location for better reception.

Specifications

Feature	Detail
Model Number	VJB-125
Brand	Victrola
Connectivity Technology	Bluetooth, AUX-in
Wireless Communication	Bluetooth
Bluetooth Range	Up to 33 feet (10 meters)
Audio Output Mode	Stereo
Power Source	Corded Electric
Product Dimensions (L x W x H)	11 x 6.6 x 15 inches (27.9 x 16.8 x 38.1 cm)
Item Weight	3.9 pounds (1.77 kg)
Included Components	Speaker (Jukebox Unit)
Special Feature	LED Light
Manufacturer	Innovative Technology

Warranty and Support

Victrola products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the official Victrola website or contact their customer service. A digital version of this user manual may also be available on the manufacturer's support page.
For additional support, you may visit the official Victrola store on Amazon:Victrola Store
A PDF version of the user manual is available here:User Manual (PDF)

© 2024 Victrola. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B071KLQVMQ

More documents and user manuals: **https://manuals.plus/**