Whirlpool MCP 345 BL

Whirlpool MCP 345 BL 25-Liter Microwave Oven User Manual

Model: MCP 345 BL | Brand: Whirlpool

1. Introduction

Thank you for choosing the Whirlpool MCP 345 BL microwave oven. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before using the microwave oven and retain them for future reference.

Your Whirlpool MCP 345 BL is designed for domestic use and offers various cooking functions, including microwave, grill, and crisp, along with a 25-liter capacity and 800 Watts of power.

2. Safety Instructions

General Safety:

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door, hinges, or seals.
- Only qualified service personnel should adjust or repair this appliance.

Electrical Safety:

- Ensure the power outlet is properly grounded.
- Do not use extension cords or adapters.
- Unplug the appliance before cleaning or maintenance.

Microwave-Specific Safety:

- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Never use metal containers or dishes with metallic trim in the microwave mode.
- Always use microwave-safe cookware.
- Food heated in the microwave can generate steam; use caution when opening containers.

3. Product Overview

The Whirlpool MCP 345 BL microwave oven features a sleek design with a user-friendly control panel and a spacious 25-liter interior.



Figure 3.1: Front view of the Whirlpool MCP 345 BL microwave oven, showing the door, control panel, and display.

Key Components:

- **Control Panel:** Features buttons for various functions (Micro, Grill, Dual Crisp, Bread Defrost, Chef Menu, Auto Clean, Jet Start, Stop, OK) and a digital display.
- **Oven Cavity:** The interior cooking space, made of stainless steel.
- **Turntable:** A glass tray that rotates to ensure even cooking.
- **Door:** Equipped with a safety lock system.

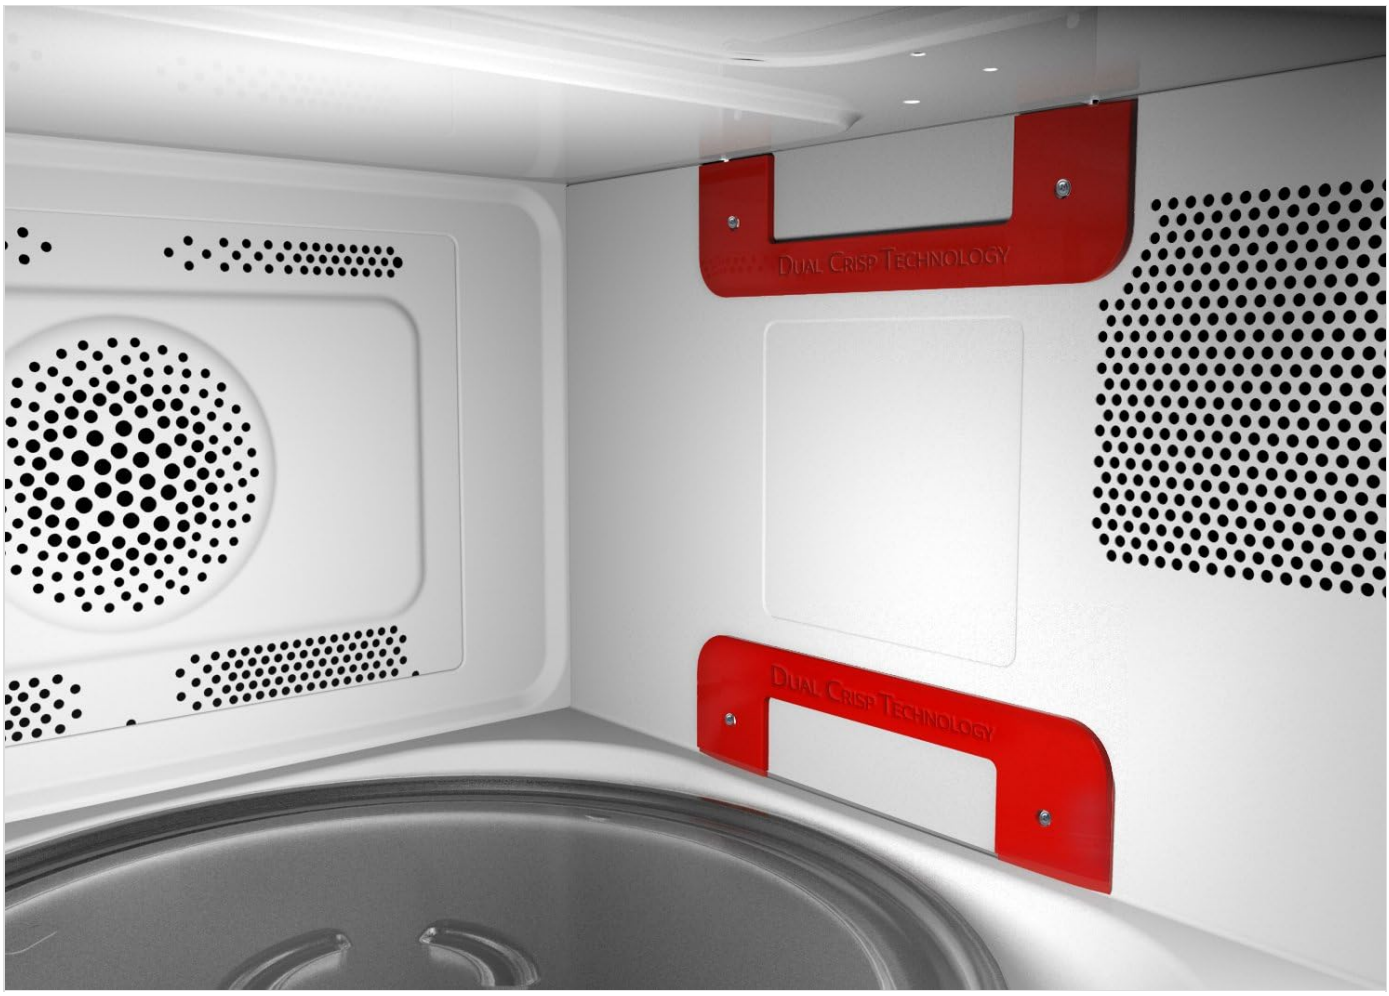


Figure 3.2: Interior view of the Whirlpool MCP 345 BL microwave oven, showing the stainless steel cavity and the turntable support.

4. Setup

Unpacking:

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Remove any protective film from the surfaces.

Placement:

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation by leaving at least 10 cm of space at the back, 20 cm at the top, and 5 cm on the sides.
- Keep the oven away from heat sources and strong magnetic fields.

Electrical Connection:

- Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the oven.

5. Operating Instructions

This section details the various cooking functions and how to operate your microwave oven.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Press the 'Micro' button to select microwave power level (e.g., 800W).
4. Use the dial or +/- buttons to set the desired cooking time.
5. Press 'OK' or 'Jet Start' to begin cooking.

Special Functions

Jet Start: Press the 'Jet Start' button for quick full-power microwave cooking. Each press adds 30 seconds of cooking time.

Dual Crisp: This function combines microwave and grill power with a special crisp plate to achieve crispy results, ideal for pizzas or pastries.

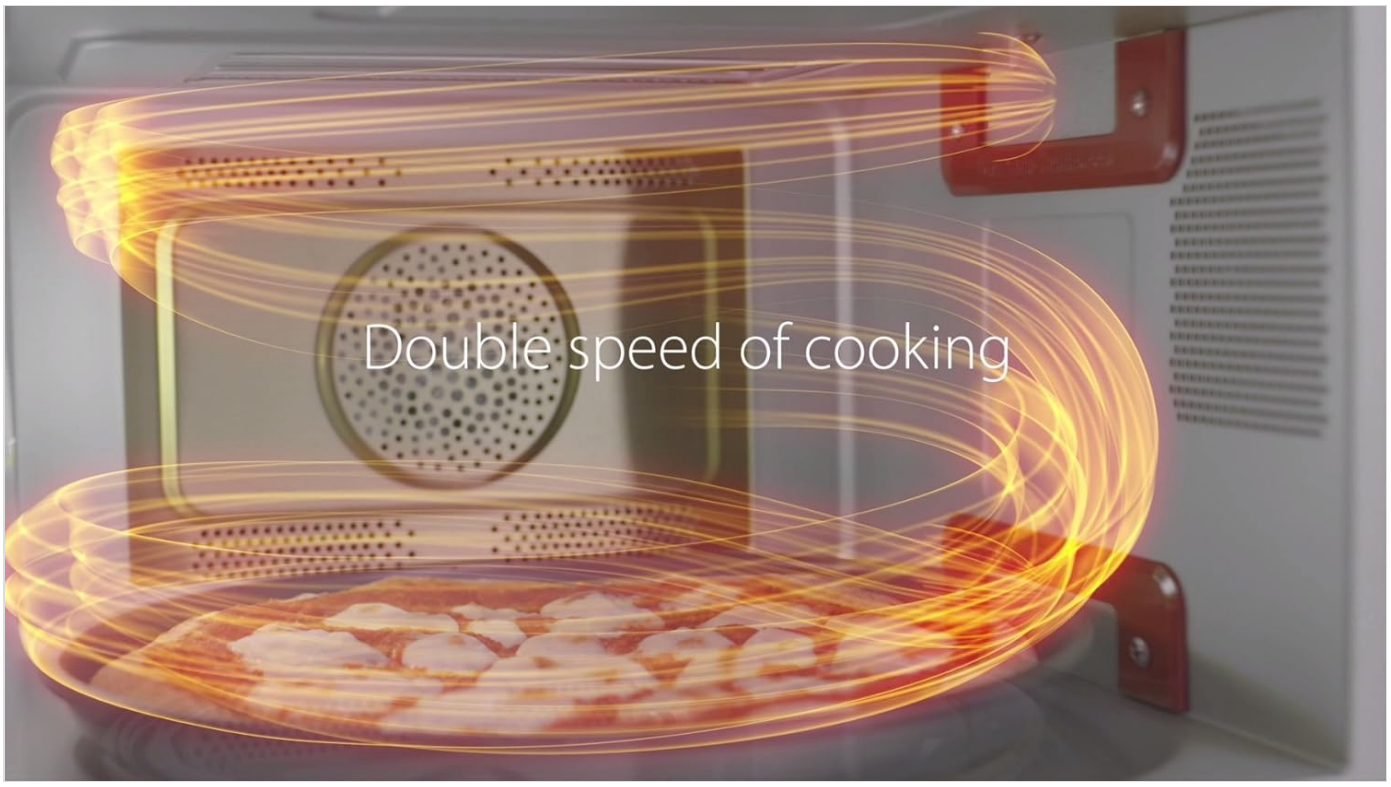


Figure 5.1: Illustration of the microwave's cooking technology, highlighting its ability to cook food at double speed.



Figure 5.2: Visual representation of how the microwave ensures food is cooked evenly, including from the bottom, for optimal results.



Figure 5.3: A crispy pizza slice demonstrating the exceptional crispness achieved with the microwave's cooking functions.



Figure 5.4: This image illustrates the speed of cooking, indicating that a pizza can be prepared in just 12 minutes, twice as fast as conventional methods.

Grill: Use the 'Grill' function for browning and toasting. Place food on the high rack provided. Ensure the door is closed during operation.

Bread Defrost: This specialized function is designed for defrosting bread, ensuring it is thawed evenly without cooking.

Chef Menu: The oven includes a 'Chef Menu' with 22 pre-programmed recipes. Select the desired recipe and follow the on-screen prompts.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

Interior Cleaning (Hydrolyse "Auto Clean"):

- The 'Auto Clean' function uses hydrolysis to loosen food residues. Place a bowl of water inside the oven and activate the 'Auto Clean' function as per the display instructions.
- After the cycle, wipe the interior with a soft cloth.

Turntable Care:

- The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in a dishwasher.
- Ensure they are completely dry before placing them back in the oven.

7. Troubleshooting

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug in power cord; Close door securely; Check fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food during cooking; Adjust power level and cooking time.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive noise during operation	Turntable not correctly placed; Foreign object in cavity.	Ensure turntable is seated correctly; Remove any foreign objects.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Feature	Specification
Brand	Whirlpool
Model Number	MCP 345 SL
Capacity	25 Liters
Power (Microwave)	800 Watts
Product Dimensions (L x W x H)	39 x 52 x 30.1 cm
Weight	15.09 kg
Installation Type	Freestanding
Interior Material	Stainless Steel
Special Features	Hydrolyse "Auto Clean", Jet Start, Chef Menu (22 recipes)
Included Components	High rack, Crisp plate + handle

9. Warranty and Support

Your Whirlpool MCP 345 BL microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or to schedule a service appointment, please visit the official Whirlpool website or contact their customer support directly. Keep your purchase receipt and model number handy for faster service.

© 2023 Whirlpool Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question