Bosch DWK065G60

Bosch DWK065G60 Decorative Hood User Manual

Model: DWK065G60

1. Introduction

This manual provides essential information for the safe and efficient use of your Bosch DWK065G60 decorative wall-mounted cooker hood. Please read these instructions carefully before installation, operation, or maintenance to ensure proper functioning and to prevent damage or injury. Keep this manual for future reference.

2. Safety Information

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not flambé under the cooker hood.
- Never leave frying food unattended, as overheated oil can ignite.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should be supervised to ensure that they do not play with the appliance.
- Adequate ventilation must be provided when the range hood is used at the same time as appliances burning gas or other fuels.

3. Product Overview

The Bosch DWK065G60 is a stylish wall-mounted decorative hood designed to efficiently remove cooking odors and steam from your kitchen. It features intuitive touch controls and energy-efficient LED lighting.



Figure 3.1: Front view of the Bosch DWK065G60 decorative hood.

Key Features:

- **Wall-Mounted Design:** Space-saving and aesthetically pleasing.
- **TouchControl:** Easy and precise operation of fan speeds and lighting.
- **LED Lighting:** Bright and energy-efficient illumination for your cooking area.
- **Dual Ventilation:** Supports both air extraction (ducting outside) and air recirculation (filtering and returning air).



Figure 3.2: TouchControl feature for easy operation.



Figure 3.3: Energy-efficient LED lighting.

4. Setup and Installation

The Bosch DWK065G60 is designed for wall-mounted installation. Proper installation is crucial for the hood's performance and safety. It can be configured for either air extraction or air recirculation.

Installation Dimensions:

Refer to the diagrams below for detailed measurements required for installation. Ensure sufficient clearance and proper ducting for optimal performance.

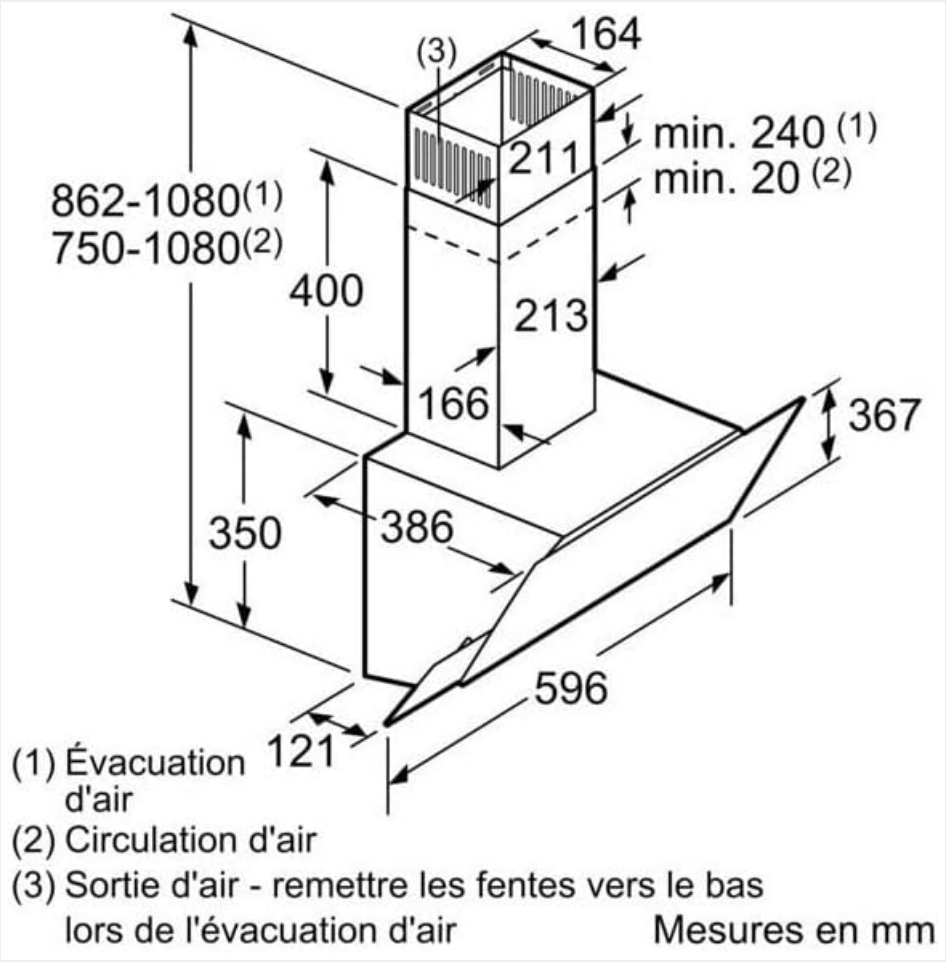


Figure 4.1: Installation dimensions for air extraction mode. (1) Air extraction, (2) Air recirculation, (3) Air outlet - turn slots downwards for air extraction.

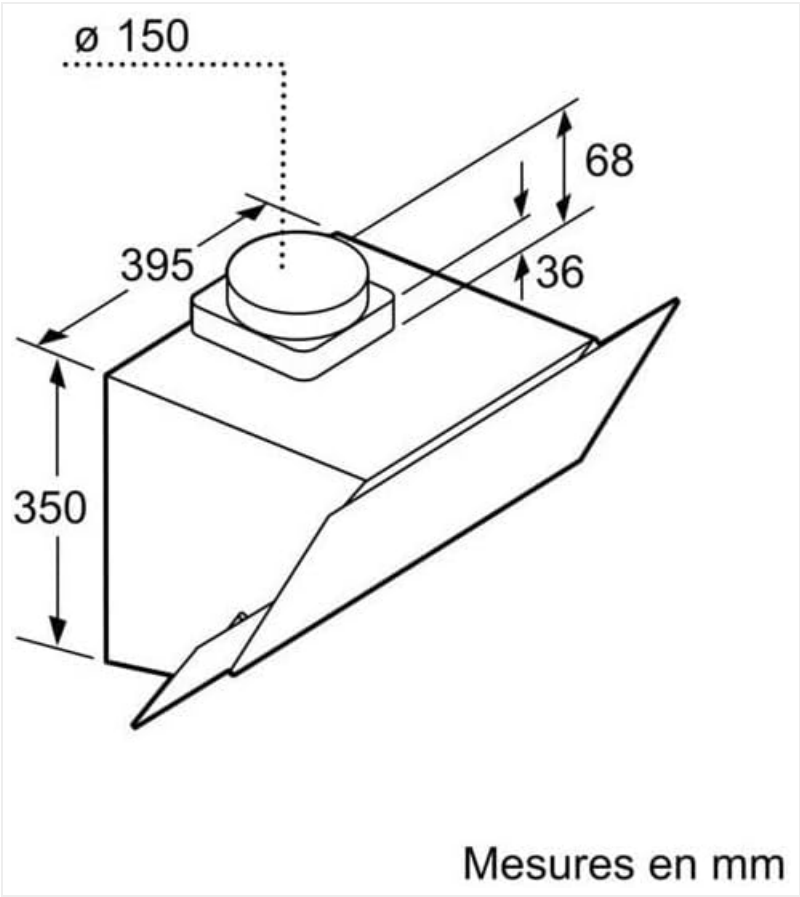


Figure 4.2: Installation dimensions for air recirculation mode. All measurements are in mm.

For air recirculation mode, charcoal filters (not included) must be installed to purify the air before it is returned to the

kitchen. Consult a qualified installer for specific requirements and best practices.

5. Operating Instructions

The hood is operated via the TouchControl panel located on the front of the appliance.

Fan Operation:

- **Power On/Off:** Press the power symbol on the TouchControl panel to switch the hood on or off.
- **Speed Selection:** Select from multiple fan speed settings (e.g., 1, 2, 3) by pressing the corresponding number on the TouchControl panel. Higher speeds are suitable for intense cooking, while lower speeds are for lighter tasks.
- **Intensive Setting:** Some models may feature an intensive setting for maximum extraction power. This typically operates for a set period before returning to a lower speed.

Lighting Operation:

- **Light On/Off:** Press the light symbol on the TouchControl panel to turn the LED cooking area lights on or off.



Figure 5.1: Underside view showing LED lights and the TouchControl panel.

6. Maintenance and Cleaning

Regular cleaning and maintenance ensure the longevity and optimal performance of your cooker hood.

Cleaning the Grease Filters:

The metal grease filters should be cleaned regularly (approximately every 3-4 weeks, or more frequently depending on usage) to prevent grease buildup and maintain extraction efficiency.

1. Switch off the appliance and disconnect it from the power supply.
2. Open the filter panel or release the catches to remove the metal grease filters.
3. Clean the filters by hand in hot soapy water or in a dishwasher. Ensure they are completely dry before re-installing.
4. Re-install the clean filters, ensuring they are securely latched.



Figure 6.1: Example of a metal grease filter.

Cleaning the Hood Surfaces:

Clean the stainless steel and glass surfaces with a soft cloth and a mild, non-abrasive cleaning agent. Avoid using harsh chemicals or abrasive pads that could scratch the finish.

Replacing Charcoal Filters (for Recirculation Mode):

If your hood is set up for recirculation, the activated charcoal filters (not washable) must be replaced periodically, typically every 3-6 months depending on usage. Refer to the specific instructions provided with your charcoal filters for replacement procedures.

7. Troubleshooting

If you encounter issues with your hood, consult the following table before contacting service.

Problem	Possible Cause	Solution
Hood does not switch on.	No power supply.	Check if the power cord is properly plugged in and the circuit breaker has not tripped.
Poor extraction performance.	Grease filters are dirty.	Clean the metal grease filters (see Section 6).
	Charcoal filters are saturated (recirculation mode).	Replace the charcoal filters.
	Ducting is obstructed or too long/narrow.	Check ducting for obstructions or consult an installer.
Lights not working.	LED lights faulty.	Contact customer service for replacement.
Excessive noise.	Improper installation or loose components.	Ensure all mounting screws are tight and components are secure.

8. Specifications

Technical data for the Bosch DWK065G60 decorative hood.

Feature	Specification

Feature	Specification
Model Number	DWK065G60
Power	216 Watts
Ventilation Type	Extraction and Recirculation
Hood Design	Wall-mounted
Material	Stainless Steel
Noise Level	67 Decibels
Controls	TouchControl
Voltage	240V
Weight	15 Kilograms
Light Source	LED
Energy Efficiency Class	C (Range A+++ to D)
International Article Code	04242005048564
ASIN	B072NHL7N6



Figure 8.1: Energy efficiency class C.

9. Warranty and Customer Support

For warranty information, service requests, or to purchase spare parts and accessories, please contact Bosch customer service or visit the official Bosch website. Ensure you have your model number (DWK065G60) and purchase details available when contacting support.

You can find more information and contact details on the official Bosch website: www.bosch-home.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question