Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Fotopro UFO2 set

Fotopro UFO2 Flexible Tripod User Manual

Model: UFO2 set

1. Introduction

This manual provides detailed instructions for the safe and effective use of your Fotopro UFO2 Flexible Tripod. Please read this manual thoroughly before operating the product and retain it for future reference.

The Fotopro UFO2 Flexible Tripod is designed for versatility, offering stable support for smartphones, cameras, and action cameras in various environments. Its flexible legs allow for secure attachment to diverse surfaces, while the included remote control enhances usability for remote photography and video recording.

2. Package Contents

Verify that all items listed below are included in your package:

- Fotopro Flexible Tripod
- Phone Mount
- GoPro Adapter
- Bluetooth Remote Control

3. Product Features

- **Durable and Flexible Legs:** Constructed with high-density rubber-coated legs and a multi-strand aluminum core for stability and arbitrary bending.
- **360° Swivel Head:** Allows for versatile shooting angles, supporting both horizontal and vertical orientations.
- **High Compatibility:** Equipped with a 1/4" screw, compatible with DSLR cameras, action cameras, smartphones (with included mount), and other devices up to 1.8 lbs (0.8 kg).
- **Lightweight and Portable:** Weighs approximately 10 oz (283g) and is 11 inches (27.5 cm) tall, making it suitable for travel.
- **Waterproof Design:** The robust legs are designed to withstand various environmental conditions.
- **Bluetooth Remote Control:** Enables remote photo capture and video recording start/stop for compatible smartphones.

4. Setup Guide

4.1 Attaching the Phone Mount or GoPro Adapter

1. Locate the 1/4" universal screw on the tripod's ball head.
2. Screw the phone mount or GoPro adapter onto the 1/4" screw until secure. Ensure it is tightened sufficiently to prevent rotation during use.



Image: The Fotopro UFO2 Flexible Tripod with a phone mount and a GoPro adapter shown separately, illustrating how they attach to the tripod's universal screw.

4.2 Mounting Your Device

- **For Smartphones:** Extend the spring-loaded clamp of the phone mount and carefully insert your smartphone. Ensure the phone is centered and securely held.
- **For Cameras (DSLR/Mirrorless):** Directly screw your camera onto the 1/4" universal screw on the tripod's ball head. Ensure it is firmly attached.
- **For Action Cameras (GoPro):** Attach your action camera to the GoPro adapter using its standard mounting system.



Image: The Fotopro UFO2 Flexible Tripod shown supporting a DSLR camera, a smartphone, and a GoPro, demonstrating its multi-device compatibility.

4.3 Pairing the Bluetooth Remote Control

1. Ensure the Bluetooth remote control has a charged battery.
2. Turn on the remote control (usually by pressing and holding a button until an indicator light flashes).
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select the remote control (e.g., "Fotopro Remote" or similar) from the list to pair.
5. Once paired, open your phone's camera application. The remote can now be used to trigger the shutter or start/stop video recording.

5. Operating Instructions

5.1 Positioning the Tripod

- **Standard Stand:** Position the legs to form a stable base on a flat surface.
- **Flexible Mounting:** Bend the tripod legs to wrap around objects like poles, branches, or railings. Ensure all three

legs are securely wrapped to prevent the tripod from falling.

- **Handheld/Selfie Stick:** Keep the legs straight and hold the tripod as a grip for handheld shots or selfies.

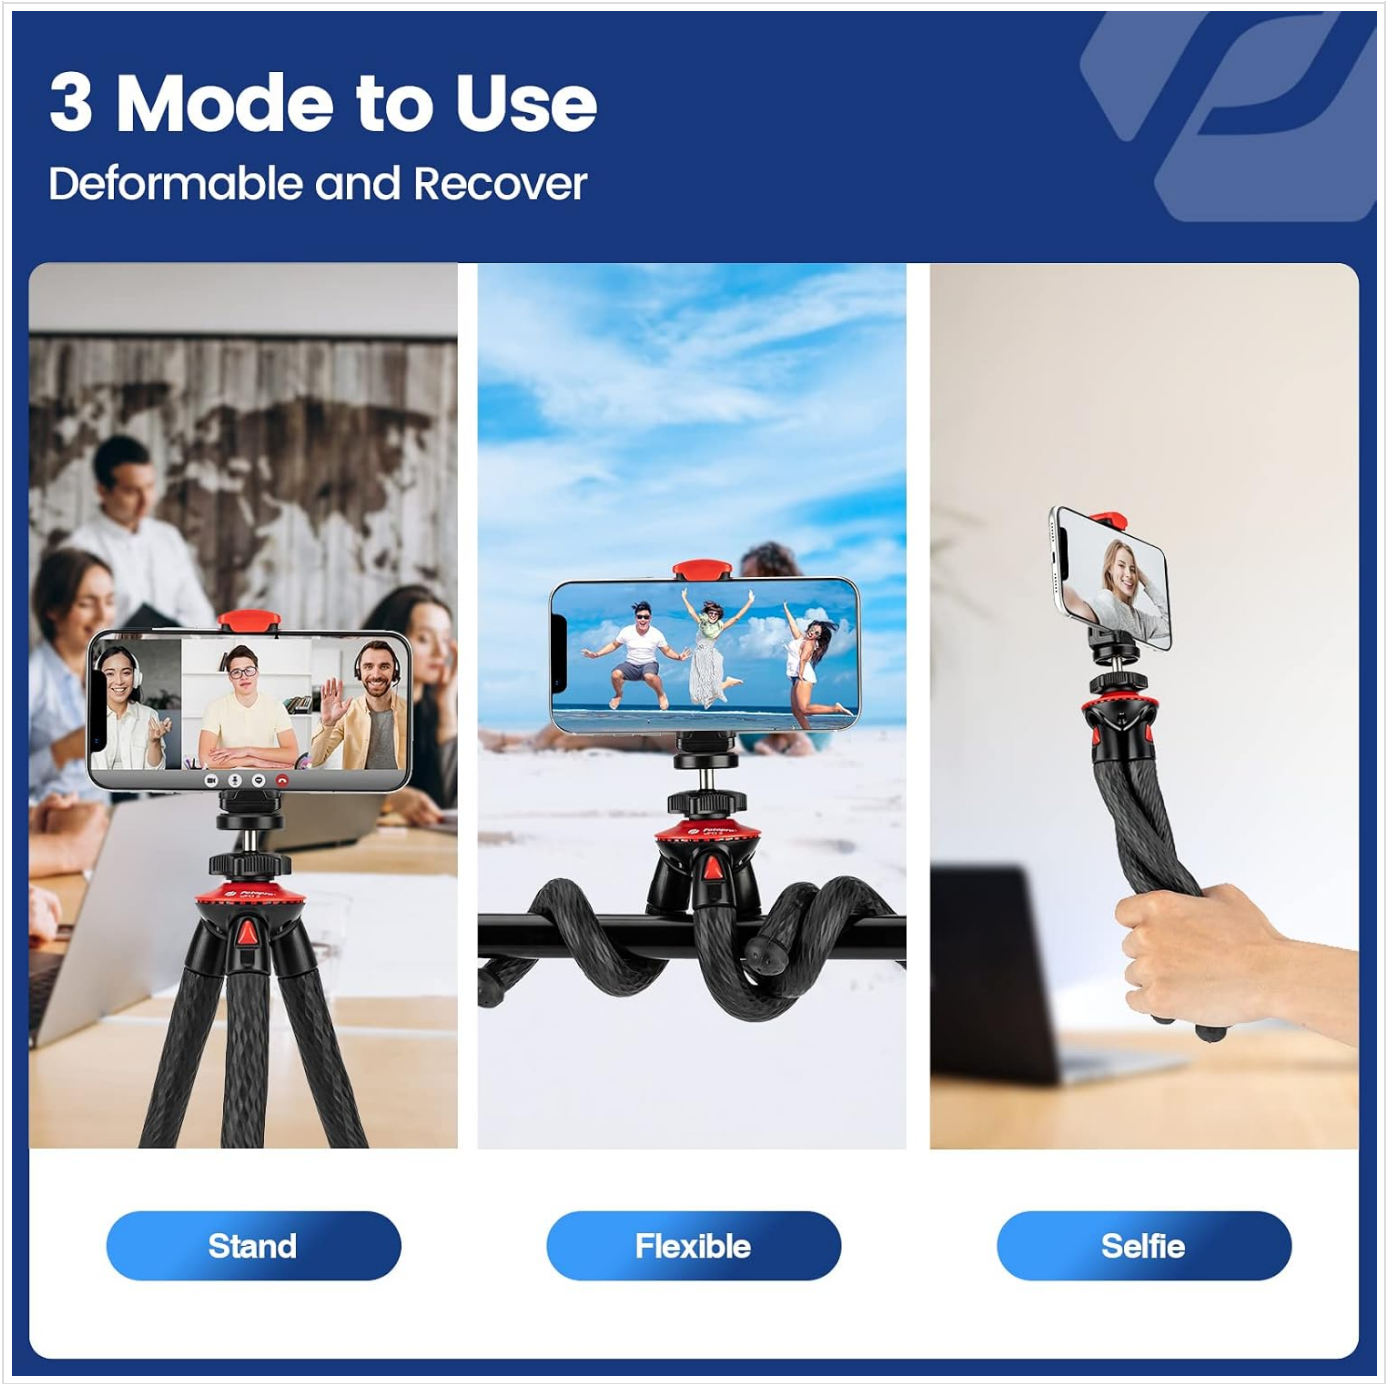


Image: The Fotopro UFO2 Flexible Tripod demonstrating its three primary modes of use: as a stable stand, wrapped around an object, and held as a selfie stick.

5.2 Adjusting the Ball Head

The tripod features a 360° swivel ball head. Loosen the locking knob on the side of the ball head to adjust the angle of your device. Once the desired angle is achieved, tighten the knob firmly to secure the position.



Image: A close-up of the Fotopro UFO2 Flexible Tripod's ball head, highlighting the 1/4" universal screw, 360° rotation capability, and the Bluetooth remote controller.

5.3 Using the Bluetooth Remote Control

After pairing (refer to Section 4.3), open your smartphone's camera app. Press the button on the remote control to take a photo or to start/stop video recording. Some phones may require switching between photo and video modes within the camera app for the remote to function correctly for video.

6. Maintenance

- **Cleaning:** Wipe the tripod with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically check all connections and screws for tightness. Ensure the flexible legs are free from damage.
- **Water Exposure:** While waterproof, it is recommended to dry the tripod thoroughly after exposure to water to

prolong its lifespan.

7. Troubleshooting

Problem	Possible Cause	Solution
Tripod is unstable.	Legs not properly positioned or tightened. Device too heavy.	Ensure legs are spread wide and evenly. Verify device weight is within the 1.8 lbs limit. Re-adjust leg positions for better balance.
Bluetooth remote not connecting.	Remote battery low. Not in pairing mode. Bluetooth off on phone.	Replace remote battery. Ensure remote is in pairing mode (flashing light). Turn on phone's Bluetooth and re-attempt pairing.
Device slips from mount.	Mount not tightened. Device not properly seated.	Ensure phone mount or camera screw is securely tightened. Verify phone is centered and fully seated in the spring clamp.

8. Specifications

Model Number	UFO2 set
Product Dimensions	3 x 3 x 11 inches (7.6 x 7.6 x 27.9 cm)
Item Weight	10 ounces (283 grams)
Maximum Load Capacity	1.8 Pounds (0.8 kg)
Maximum Height	11 Inches (27.9 cm)
Minimum Height	12 Centimeters (4.7 inches)
Material	Aluminum, Rubber
Tripod Head Type	Ball Head
Compatible Devices	Camera, DSLR Camera, Action Camera, Tablet, Webcam, Mini Projector
Special Features	Adjustable, Portable, Rotatable
Battery (Remote)	1 Lithium Metal battery (included)



Image: Detailed dimensions of the Fotopro UFO2 Flexible Tripod and its phone mount, showing measurements in millimeters and inches.

9. Warranty and Support

For warranty information, technical support, or service inquiries, please contact Fotopro customer service directly. Refer to the product packaging or the official Fotopro website for the most current contact details.

Manufacturer: Fotopro

Date First Available: June 29, 2017

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B073GW4ZWM

More documents and user manuals: **https://manuals.plus/**