Kichler 34720

Kichler Edenbrook Model 34720 Brushed Nickel Pendant Light Instruction Manual

Introduction

Welcome to your new Kichler Edenbrook Pendant Light. This manual provides essential information for the safe installation, operation, and maintenance of your lighting fixture. Please read these instructions thoroughly before beginning installation or use, and retain them for future reference.



Figure 1: Kichler Edenbrook Brushed Nickel Pendant Light.

Important Safety Instructions

To reduce the risk of fire, electric shock, or personal injury, always follow these basic safety precautions:

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only the specified wattage and bulb type. Exceeding the maximum wattage may cause overheating and damage to the fixture.
- Do not install this fixture in wet locations. It is designed for indoor use only.

- Handle glass components with care to prevent breakage and injury.
- Ensure the fixture is securely mounted to a structurally sound part of the ceiling.

Package Contents

Carefully unpack your fixture and inspect all components for damage. Keep all packaging materials until you are certain all parts are present and in good condition.

- Pendant Light Fixture (Brushed Nickel frame with Etched Glass drum shade)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Instruction Manual

Note: Light bulbs are **NOT INCLUDED** with this fixture. You will need to purchase three E26 (Medium) base bulbs, up to 60W each.

Specifications

Feature	Detail
Brand	Kichler
Model Number	34720
Color	Brushed Nickel
Material	Alloy Steel, Glass
Style	Modern
Light Fixture Form	Pendant
Product Dimensions	17"L x 17"W x 11.5"H
Max Hanging Height	123"
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Installation Type	Ceiling Mounting
Special Feature	Dimmable
Light Source Type	Incandescent (compatible)
Shade Material	Glass
Number of Light Sources	3
Voltage	120 Volts
Wattage	60 watts (per bulb, max)
Bulb Base	E26 (Medium)

Feature	Detail
Item Weight	7.17 Pounds
UPC	737995347208



Figure 2: Kichler Edenbrook 3 Light Pendant dimensions and bulb type.

Installation Instructions

Professional installation is recommended for this electrical fixture. If you are not comfortable with electrical wiring, please consult a qualified electrician.

1. **Turn Off Power:** Before starting any electrical work, ensure the power supply to the fixture location is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting:** Attach the mounting plate to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Adjust Hanging Height:** Determine the desired hanging height for your pendant light. The fixture includes a rod for suspension. Adjust the length as needed.
4. **Connect Wiring:** Carefully connect the fixture's electrical wires to the corresponding household wires. Typically, connect the black wire from the fixture to the black (hot) wire from the ceiling, the white wire from the fixture to the white (neutral) wire from the ceiling, and the ground wire to the bare copper or green ground wire. Secure connections with wire nuts.
5. **Mount Fixture:** Carefully lift the fixture and attach it to the mounting plate, securing it with the provided screws or nuts.
6. **Install Bulbs:** Screw three E26 (Medium) base bulbs (max 60W each, not included) into the sockets.
7. **Attach Shade:** Secure the etched glass drum shade to the fixture according to the manufacturer's specific design.
8. **Restore Power:** Once installation is complete and all components are secure, restore power at the circuit breaker.

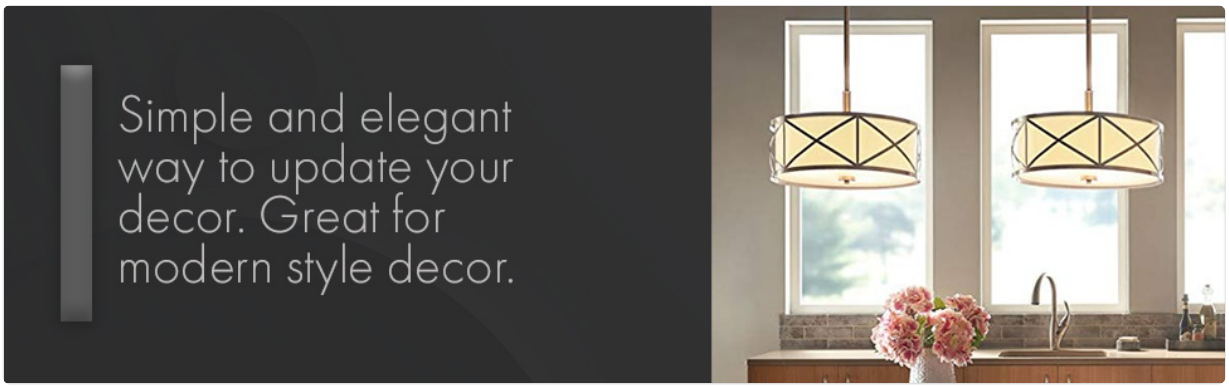


Figure 3: Example installation of Kichler Edenbrook pendant lights in a room setting.

Operating Your Pendant Light

This Kichler Edenbrook pendant light is designed for simple operation.

- **Turning On/Off:** Operate the light using a standard wall switch connected to the fixture's circuit.
- **Dimming Functionality:** This fixture is dimmable. To utilize the dimming feature, ensure you are using dimmable E26 bulbs and have a compatible dimmer switch installed on your wall. Follow the dimmer switch manufacturer's instructions for proper use.

Maintenance

Regular maintenance will help preserve the appearance and functionality of your pendant light.

- **Cleaning:** Always turn off the power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish. For the glass shade, a mild glass cleaner applied to a cloth (not directly to the fixture) can be used.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled before attempting to replace them. Unscrew old bulbs and replace with new E26 (Medium) base bulbs, not exceeding 60W per bulb.



Figure 4: Close-up of the etched glass shade, highlighting the texture and finish for cleaning reference.

Troubleshooting

If your pendant light is not functioning correctly, refer to the following common issues and solutions:

- **Light does not turn on:**

- Check if the power is on at the circuit breaker.
- Ensure bulbs are securely screwed into sockets and are not burnt out.
- Verify electrical connections are secure and correct.

- **Light flickers:**
  - Ensure bulbs are fully tightened.
  - If using a dimmer, ensure bulbs are dimmable and compatible with the dimmer switch.
  - Check for loose wiring connections.

- **Bulbs burn out quickly:**
  - Ensure you are not exceeding the maximum wattage (60W per bulb).
  - Verify the voltage supply is stable.

If these steps do not resolve the issue, contact Kichler customer support or a qualified electrician.

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Kichler website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Kichler customer service directly.

© 2025 Kichler. All rights reserved. This manual is for informational purposes only.