Redragon G808

Redragon G808 Wireless Gamepad User Manual

Model: G808

1. Introduction

The Redragon G808 Harrow is a versatile wireless gamepad designed for an enhanced gaming experience on both PC and PlayStation 3. This manual provides comprehensive instructions for its setup, operation, and maintenance.



Image 1.1: Front view of the Redragon G808 Wireless Gamepad, showcasing its black finish, D-pad, analog sticks, action buttons, and central Redragon logo.

2. Product Features

- **Wireless Connectivity:** Utilizes a 2.4 GHz wireless connection for freedom of movement.
- **Dual Vibration Motors:** Equipped with two force feedback motors for an immersive gaming experience.
- **Ergonomic Design:** Constructed from durable ABS plastic, shaped for comfortable use during extended gaming sessions.
- **Comprehensive Controls:** Features an eight-way D-pad, two analog sticks, eight conventional buttons, two bumpers (L1/R1), and two sensitive triggers (LT/RT).
- **Long Battery Life:** Internal Li-Ion battery provides up to 8 hours of continuous use.
- **Multi-Platform Support:** Compatible with Windows PC (Dinput and Xinput modes) and PlayStation 3.

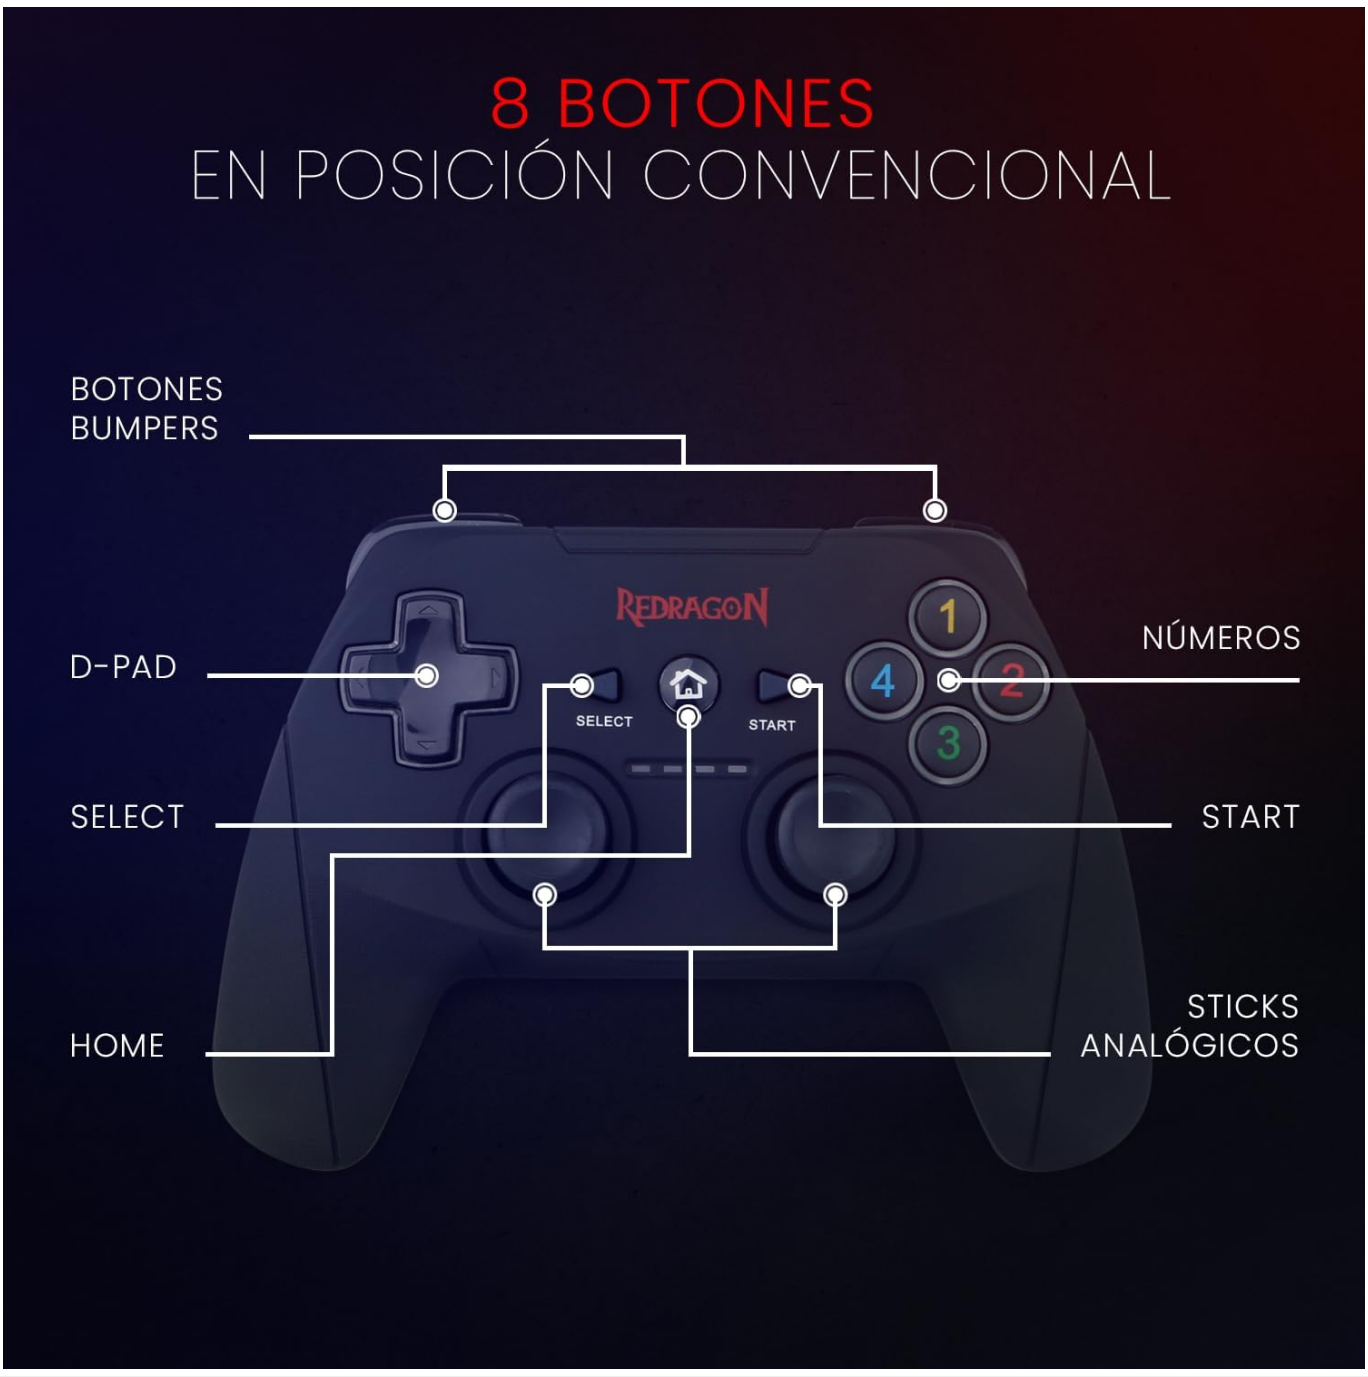


Image 2.1: Diagram illustrating the conventional button layout of the Redragon G808, including D-pad, analog sticks, numbered action buttons, Select, Start, Home, and bumper buttons.



Image 2.2: A user holding the Redragon G808 Gamepad, highlighting its ergonomic construction and comfortable grip.

3. Setup Instructions

3.1 Initial Charging

Before first use, ensure the gamepad is fully charged. Connect the gamepad to a USB power source using the provided charging cable. The LED indicator will show charging status.

3.2 PC Connection (Windows)

1. Insert the included USB 2.0 dongle into an available USB port on your PC.
2. Turn on the Redragon G808 gamepad.
3. The PC will automatically detect and install the necessary drivers.
4. The gamepad supports both Xinput (natively recognized as a Microsoft controller) and Dinput (recognized as a generic gaming device) modes. The LED status on the gamepad indicates the active mode.

3.3 PlayStation 3 (PS3) Connection

1. Ensure your PS3 console is turned on.
2. Connect the gamepad to a USB port on your PS3 using a USB cable (not necessarily for charging, but for initial recognition).
3. Turn on the gamepad. The PS3 will recognize it as a conventional joystick.
4. Once recognized, you can disconnect the USB cable and use the gamepad wirelessly. The LED status will indicate the assigned player position on the PS3.



Image 3.1: Close-up of the Redragon G808 Gamepad highlighting its wireless connectivity via a 2.4 GHz connection and the USB 2.0 dongle interface.



Image 3.2: The Redragon G808 Gamepad positioned in front of a laptop and a PlayStation 3 console, illustrating its compatibility with both platforms.

4. Operating Instructions

4.1 Power On/Off

- To power on, press the central "Home" button.
- To power off, press and hold the "Home" button for a few seconds until the gamepad shuts down.

4.2 LED Status Indicators

- **On PC:** LEDs indicate whether the gamepad is operating in Xinput or Dinput mode.
- **On PS3:** LEDs indicate the assigned player position (e.g., Player 1, Player 2).

4.3 Vibration Function

The dual vibration motors provide force feedback during gameplay, enhancing immersion. This feature is automatically

activated when supported by the game.

5. Specifications

Feature	Detail
Connection Type	Wireless 2.4 GHz
Supported Platforms	PC (Dinput and Xinput), PlayStation 3
Interface	USB 2.0 Dongle
Buttons	8 conventional buttons + 2 Analog Sticks
Bumpers (L1/R1)	2 button type
Triggers (LT/RT)	2, sensitive
D-Pad	8-way
Vibration	2 vibration motors for Force Feedback
Power Supply	Internal Li-Ion battery
Battery Life	Up to 8 hours continuous use
Dimensions	15 x 10 x 6 cm
Weight	330 gr
Material	ABS Plastic

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the gamepad. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the gamepad regularly, even if not in use for extended periods.
- **Avoid Drops:** Protect the gamepad from physical shocks and drops, which can damage internal components.

7. Troubleshooting

- **Gamepad not connecting:**
  - Ensure the USB dongle is securely plugged into the PC.
  - For PS3, ensure the initial wired connection is made and the console recognizes the gamepad before attempting wireless use.
  - Verify the gamepad is charged and powered on.
  - Try a different USB port on your PC/PS3.
- **Buttons or sticks unresponsive:**
  - Restart the gamepad and reconnect it.
  - Ensure the gamepad is in the correct mode (Xinput/Dinput for PC) for your game.

- Check game settings for controller configuration.

- **Vibration not working:**
  - Confirm that the game you are playing supports force feedback vibration.
  - Check in-game settings to ensure vibration is enabled.

- **Short battery life:**
  - Ensure the gamepad is fully charged before use.
  - Battery performance may degrade over time with extensive use.

8. Warranty and Support

For warranty information, technical support, or further assistance, please refer to the official Redragon website or contact their customer service department. Keep your purchase receipt for warranty claims.
Redragon Official Website: www.redragonzone.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question