Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AVI-8 AV-4011-0O

Instruction Manual

AVI-8 Hawker Hurricane Classic Chronograph Pilot Watch

Model: AV-4011-0O

Introduction

The AVI-8 Hawker Hurricane Classic Chronograph is a timepiece designed to honor the spirit of aviation. This watch features a classic case shape, detailed dials, and a genuine leather strap, blending elegant design with accurate performance. It is equipped with a Japanese TMI 3-eye chronograph quartz movement, offering precise timekeeping and chronograph functions.





Figure 1: Front view of the AVI-8 Hawker Hurricane Classic Chronograph Pilot Watch in Admiral Blue. This image showcases the watch's dial, hands, sub-dials, and leather strap.

Components Overview

Familiarize yourself with the main components of your AVI-8 Hawker Hurricane watch:

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Sub-dials:** Typically for chronograph minutes, seconds, and 24-hour display.
- **Date Window:** Displays the current date.
- **Bezel:** Fixed bezel with tachymeter scale.
- **Strap:** Genuine leather strap for secure wearing.

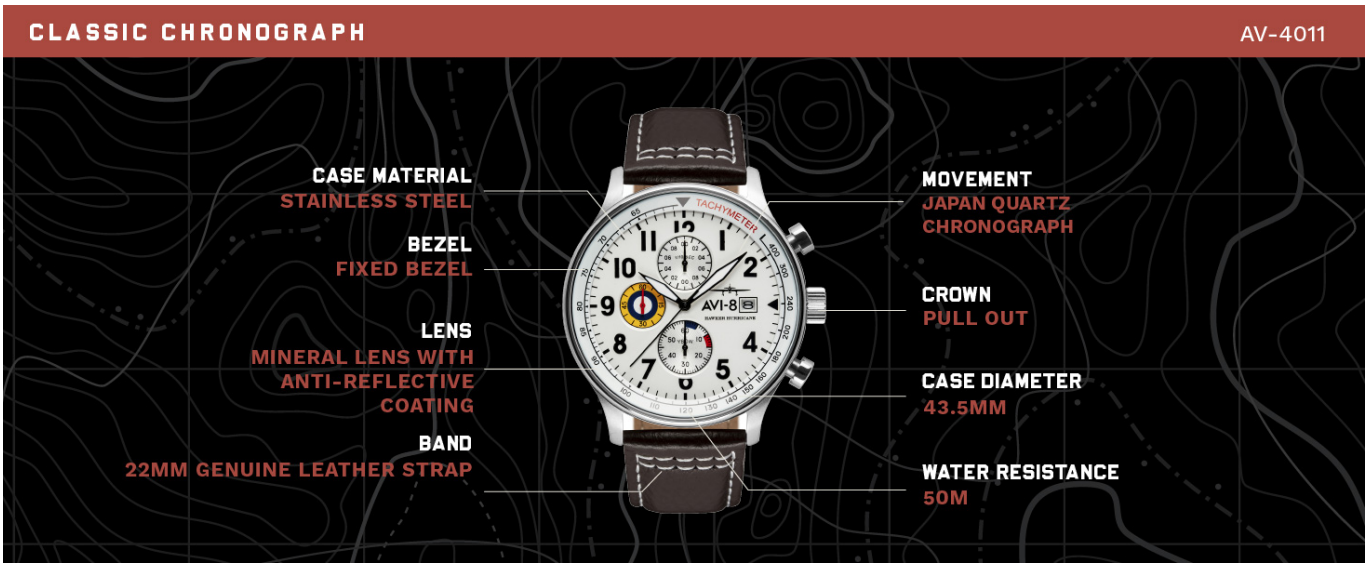


Figure 2: Detailed diagram illustrating the key components and specifications of the Classic Chronograph AV-4011 watch, including case material, lens type, and water resistance.

Setup

Setting the Time:

1. Pull the crown out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands. Ensure the AM/PM is correctly set by observing the 24-hour sub-dial (if present) or by advancing the time past 12 o'clock to see if the date changes.
3. Push the crown back to the normal position.

Setting the Date:

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the date.
3. Once the correct date is displayed, push the crown back to the normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the date change mechanism. If you need to set the date during this period, first set the time outside this window, adjust the date, then reset the time.

Operating the Chronograph

Your AVI-8 watch features a chronograph function for measuring elapsed time.

Standard Time Measurement:

1. Press pusher **A** (top pusher) to start the chronograph. The chronograph second hand and minute sub-dial will begin to move.
2. Press pusher **A** again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. Press pusher **B** (bottom pusher) to reset the chronograph. All chronograph hands will return to their zero positions.

Split Time Measurement:

1. Press pusher **A** to start the chronograph.
2. Press pusher **B** to measure a split time. The chronograph hands will stop, allowing you to read the elapsed time, while the internal timing continues.
3. Press pusher **B** again to release the split time. The chronograph hands will instantly advance to catch up with the

ongoing elapsed time.

4. Repeat step 2 and 3 for multiple split times.
5. Press pusher **A** to stop the chronograph.
6. Press pusher **B** to reset the chronograph.



Figure 3: The AVI-8 Hawker Hurricane watch displayed on a textured surface, highlighting its design and the intricate details of the dial and strap.

Maintenance and Care

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the leather strap, avoid excessive moisture.
- **Water Resistance:** This watch has a water resistance rating of 5 ATM (50 meters). This means it is suitable for short periods of recreational swimming, but not for diving or prolonged water immersion. Avoid operating the crown or pushers when the watch is wet.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as

this can affect the movement and battery life.

- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, strap, or seals.
- **Magnetic Fields:** Strong magnetic fields can affect the accuracy of quartz watches. Keep the watch away from strong magnets.
- **Battery Replacement:** When the battery runs low, the second hand may start moving in two-second intervals. Replace the battery promptly at an authorized service center to prevent leakage and damage to the movement.



Figure 4: The AVI-8 Hawker Hurricane watch being worn on a wrist, demonstrating its size and fit.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery at an authorized service center.
Date changes at noon instead of midnight.	AM/PM setting is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Impact or magnetic interference.	Perform chronograph hand position adjustment (refer to specific movement manual if available, or consult service center).
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Immediately take the watch to an authorized service center for inspection and repair.

Specifications

Model: AV-4011-0O

Movement: Japanese TMI 3-eye Chronograph Quartz Movement

Case Material: Stainless Steel

Case Diameter: 43mm

Lens: Mineral Lens with Anti-Reflective Coating

Strap: 22mm Genuine Leather Strap

Water Resistance: 5 ATM (50 meters)

Crown: Pull Out

Product Dimensions: 2.76 x 1.57 x 1.97 inches

Item Weight: 3.17 ounces

Battery: 1 Unknown battery required (included)

Country of Origin: China

Warranty and Support

Your AVI-8 Hawker Hurricane Classic Chronograph watch comes with a**2-Year International Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Damage caused by unauthorized repair or modification.
- Battery, strap, or crystal damage.
- Water damage if the watch was not used according to its water resistance rating.

For warranty claims or technical support, please contact AVI-8 customer service or visit their official website. Keep your proof of purchase for warranty validation.



Figure 5: The AVI-8 watch presented in its original packaging box, designed for protection and display.

© 2025 AVI-8. All rights reserved.
For more information, visit the AVI-8 Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B075T239CD

More documents and user manuals: **https://manuals.plus/**