Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Vogel's WALL 3350

Vogel's WALL 3350 Swivelling TV Wall Mount User Manual

Model: WALL 3350 | Brand: Vogel's

1. Introduction

The Vogel's WALL 3350 is a robust swivelling TV wall mount designed for televisions ranging from 40 to 65 inches (101-165 cm) and weighing up to 45 kg (100 lbs). This mount features double support arms, ensuring stable and strong load capacity for extra-large and heavy TVs. It offers a maximum rotation angle of 120 degrees and a maximum tilt angle of 15 degrees, providing flexible viewing options. The integrated screen protection system prevents your TV from touching the wall.
This manual provides essential information for the safe and correct installation, operation, and maintenance of your WALL 3350 TV wall mount. Please read all instructions carefully before beginning installation.

2. Safety Information

- Ensure the wall structure can safely support the combined weight of the mount and your television. Consult a professional if unsure.
- Do not exceed the maximum weight capacity of 45 kg (100 lbs).
- Always use the provided mounting hardware suitable for your wall type. If different hardware is needed, ensure it is of appropriate strength and quality.
- Follow all drilling and mounting instructions precisely to avoid damage to the wall or injury.
- Keep children and pets away from the installation area.
- Periodically check all connections and fasteners to ensure they remain secure.
- This product is intended for indoor use only.

3. Package Contents

Verify that all components are present before starting installation. Refer to the product packaging for a detailed list of

included parts. Typically, the package includes:

- Wall plate assembly
- TV attachment brackets
- Various screws, washers, and spacers for TV and wall attachment
- Drilling template
- Installation manual

4. Setup and Installation

The Vogel's WALL 3350 mount is designed for straightforward installation. For precise guidance, consider using the Vogel's TV Mount Guide app (available for Android & iOS), which assists with accurate mounting height and drill point indication.

4.1 Preparation

- Gather necessary tools: drill, spirit level, pencil, measuring tape, screwdriver.
- Determine the optimal viewing height and position for your TV.
- Locate wall studs or ensure the wall material is suitable for mounting.

4.2 Attaching TV Brackets to the Television

1. Carefully place your TV face down on a soft, clean surface.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the correct screws, washers, and spacers from the provided hardware that fit your TV's VESA pattern.
4. Attach the TV brackets securely to the back of the television. Do not overtighten.

4.3 Mounting the Wall Plate

1. Using the drilling template and a spirit level, mark the drill holes on the wall at your desired TV height.
2. Drill the pilot holes according to the marked positions and insert wall anchors if required by your wall type.
3. Securely fasten the wall plate assembly to the wall using the appropriate screws. Ensure it is level and firmly attached.

4.4 Hanging the Television

1. With assistance, carefully lift the television and hook the TV brackets onto the wall plate.
2. Engage any safety locks or mechanisms to secure the TV to the mount.
3. Perform a gentle tug test to ensure the TV is securely seated on the mount.



Image: The Vogel's WALL 3350 mount allows for flexible positioning of your television.



Image: Side profile of the WALL 3350 mount, showcasing its compact design when retracted.

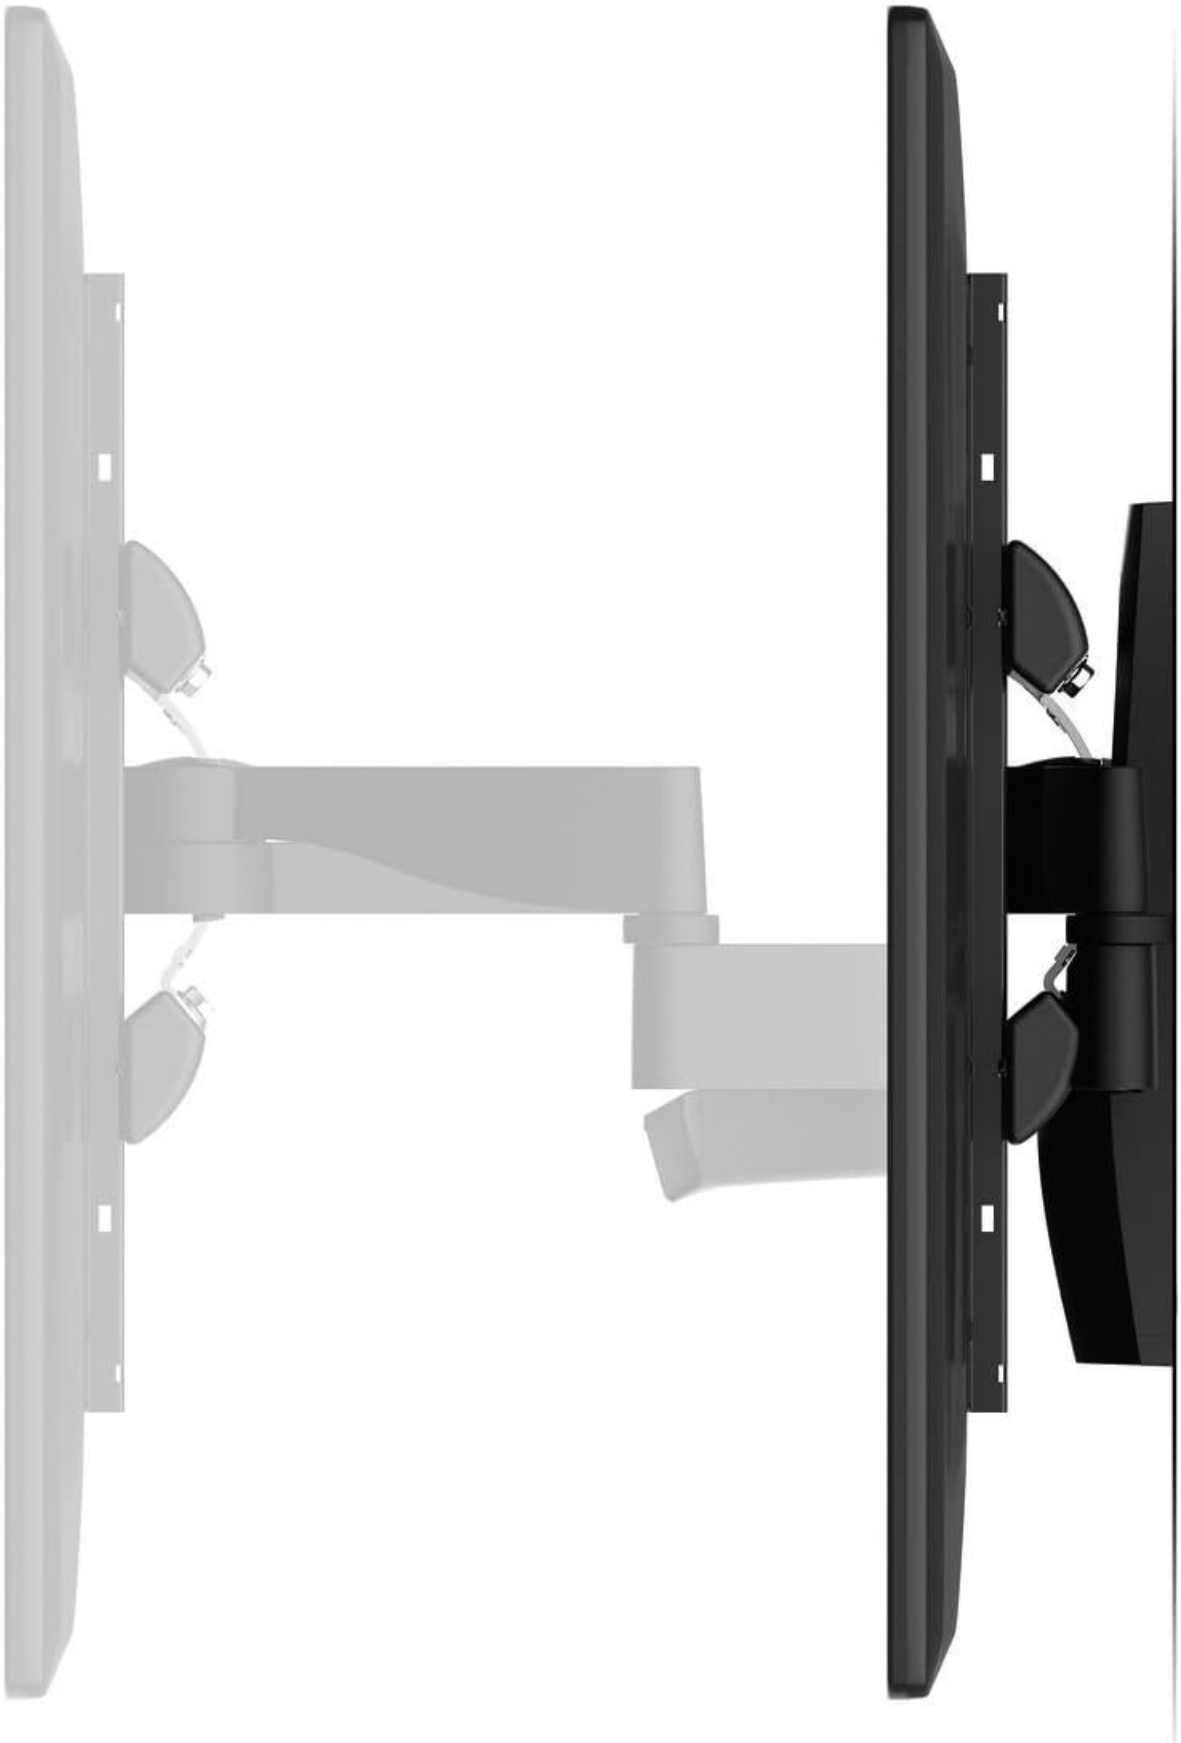


Image: The WALL 3350 mount fully extended from the wall, providing maximum viewing flexibility.



Image: The WALL 3350 mount demonstrating its tilt capability for optimal viewing angles.

4.5 Installation Video Guide

Your browser does not support the video tag.

Video: Official Vogel's guide on how to install a TV mount using the TV Mount Guide app. This video demonstrates the process of marking, drilling, and mounting the TV bracket.

5. Operating the TV Mount

The WALL 3350 mount offers smooth and flexible adjustments for an optimal viewing experience.

5.1 Swivelling

Gently push or pull the television to swivel it left or right. The mount allows for a maximum swivel of 120 degrees (60 degrees left and 60 degrees right, depending on TV size and wall distance).

5.2 Tilting

To adjust the vertical viewing angle, gently tilt the television up or down. The mount supports a maximum downward tilt of 15 degrees. This feature helps reduce glare and optimize viewing from different heights.

5.3 Extending and Retracting

The double support arms allow the TV to be extended up to 60 cm (23.6 inches) from the wall or retracted close to the wall for a neat appearance. Grasp the sides of the TV and gently pull it forward or push it back.



Image: Integrated cable management system helps organize and conceal cables for a tidy setup.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the mount. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Regularly inspect all screws and connections to ensure they are tight and secure. Over time, vibrations or frequent adjustments can loosen fasteners.
- **Lubrication:** The moving parts of the mount are designed for smooth operation and generally do not require lubrication. If movement becomes stiff, contact customer support.

7. Troubleshooting

- **TV is not level:** Check the wall plate and TV brackets for proper alignment. Adjust as necessary. Some mounts have fine-tuning adjustments.
- **Difficulty swivelling/tilting:** Ensure no cables are obstructing movement. Check if any fasteners are overtightened, restricting motion.
- **Mount feels loose:** Immediately remove the TV and re-tighten all wall and TV attachment screws. If the issue persists, consult a professional installer.
- **Missing parts:** Refer to the package contents list. Contact Vogel's customer support if any parts are missing.

8. Specifications

Feature	Specification
Model Number	WALL 3350
Compatible TV Sizes	40-65 inches (101-165 cm)
Maximum Weight Capacity	45 kg (100 lbs)
Movement Type	Swivel, Tilt, Extend
Maximum Swivel Angle	120 degrees
Maximum Tilt Angle	15 degrees (downward)
Extension from Wall	Up to 60 cm (23.6 inches)
VESA Compatibility	Min 100x100, Max 600x400
Material	Stainless Steel
Product Dimensions	15.39 x 31.38 x 4.25 inches (retracted)
Item Weight	24.9 pounds
Color	Black
Manufacturer	VOGEL'S PRODUCTS B.V
Date First Available	November 3, 2017

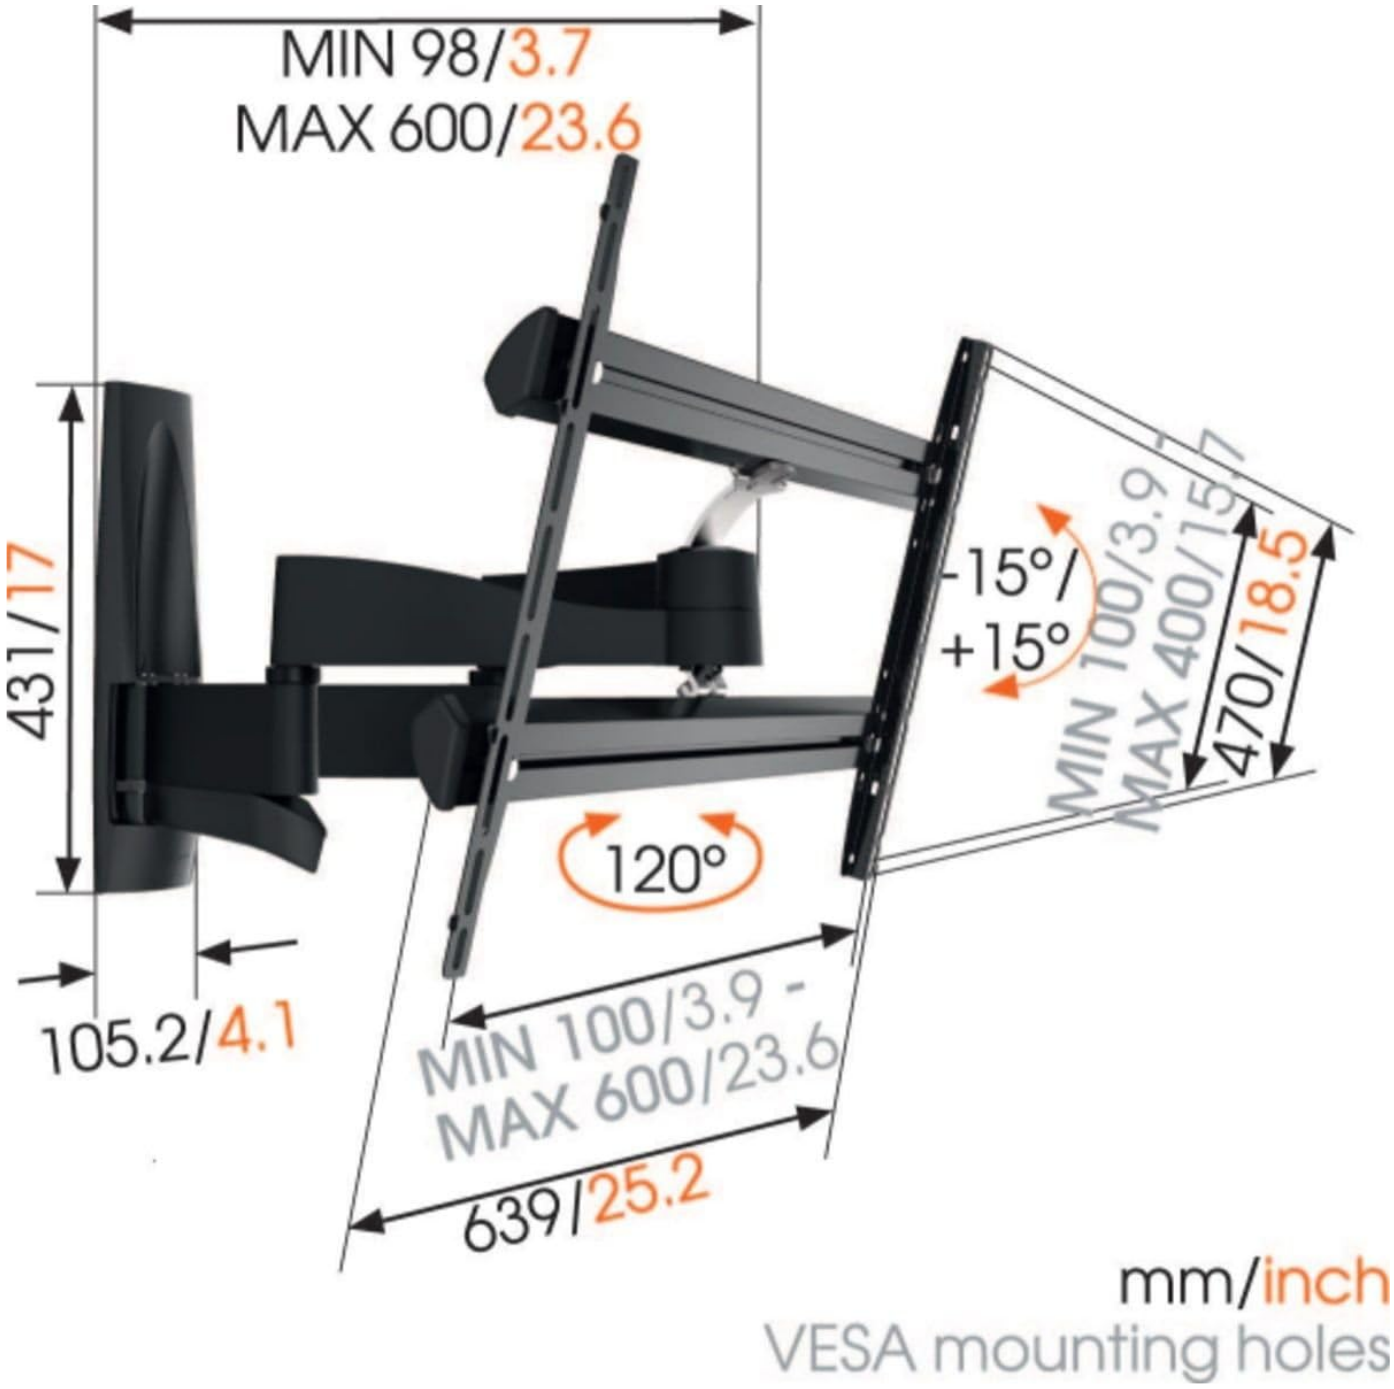


Image: Detailed technical drawing showing the dimensions and VESA mounting hole compatibility of the WALL 3350 mount.

9. Warranty and Support

Vogel's products are designed for quality and durability. This product is covered by the manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

EU Spare Part Availability Duration: 2 Years.

For technical support, missing parts, or warranty claims, please contact Vogel's customer service through their official website or the contact information provided in your product packaging.

© 2026 Vogel's. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B076KG1Y9K

More documents and user manuals: **https://manuals.plus/**