Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kunodi Shower

Kunodi Outdoor Waterproof Bluetooth Speaker User Manual

Model: Shower

Introduction

Thank you for purchasing the Kunodi Outdoor Waterproof Bluetooth Speaker. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

Key Features:

- **True Wireless Stereo (TWS):** Connect two speakers for enhanced 10W stereo sound.
- **IPX6 Waterproof and Dustproof:** Designed to withstand water splashes and dust, suitable for outdoor and wet environments.
- **Portable Design:** Features an aluminum carabiner and a suction cup for versatile mounting and carrying.
- **Built-in Microphone:** Allows for hands-free calling via Bluetooth.
- **Long Playtime:** Up to 12 hours of playback at 60% volume. Battery level visible on connected devices.
- **High Compatibility:** Bluetooth 5.0 for seamless connection, supports TF card and AUX input.

Package Contents:

- Kunodi Outdoor Waterproof Bluetooth Speaker
- Micro USB Charging Cable
- AUX Audio Cable
- Suction Cup
- Carabiner Hook

Setup Instructions

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Micro USB cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging

status and turn off when fully charged. A full charge typically takes approximately 2 hours.

2. Powering On/Off

- **To Power On:** Press and hold the power button for a few seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power Off:** Press and hold the power button again for a few seconds until you hear an audible prompt and the LED indicator turns off.

3. Bluetooth Pairing

Follow these steps to connect your speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash, indicating it's discoverable).
2. On your device (phone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Kunodi Shower" or a similar name from the list of devices.
4. Once connected, you will hear a confirmation sound, and the LED indicator will stop flashing and remain solid.

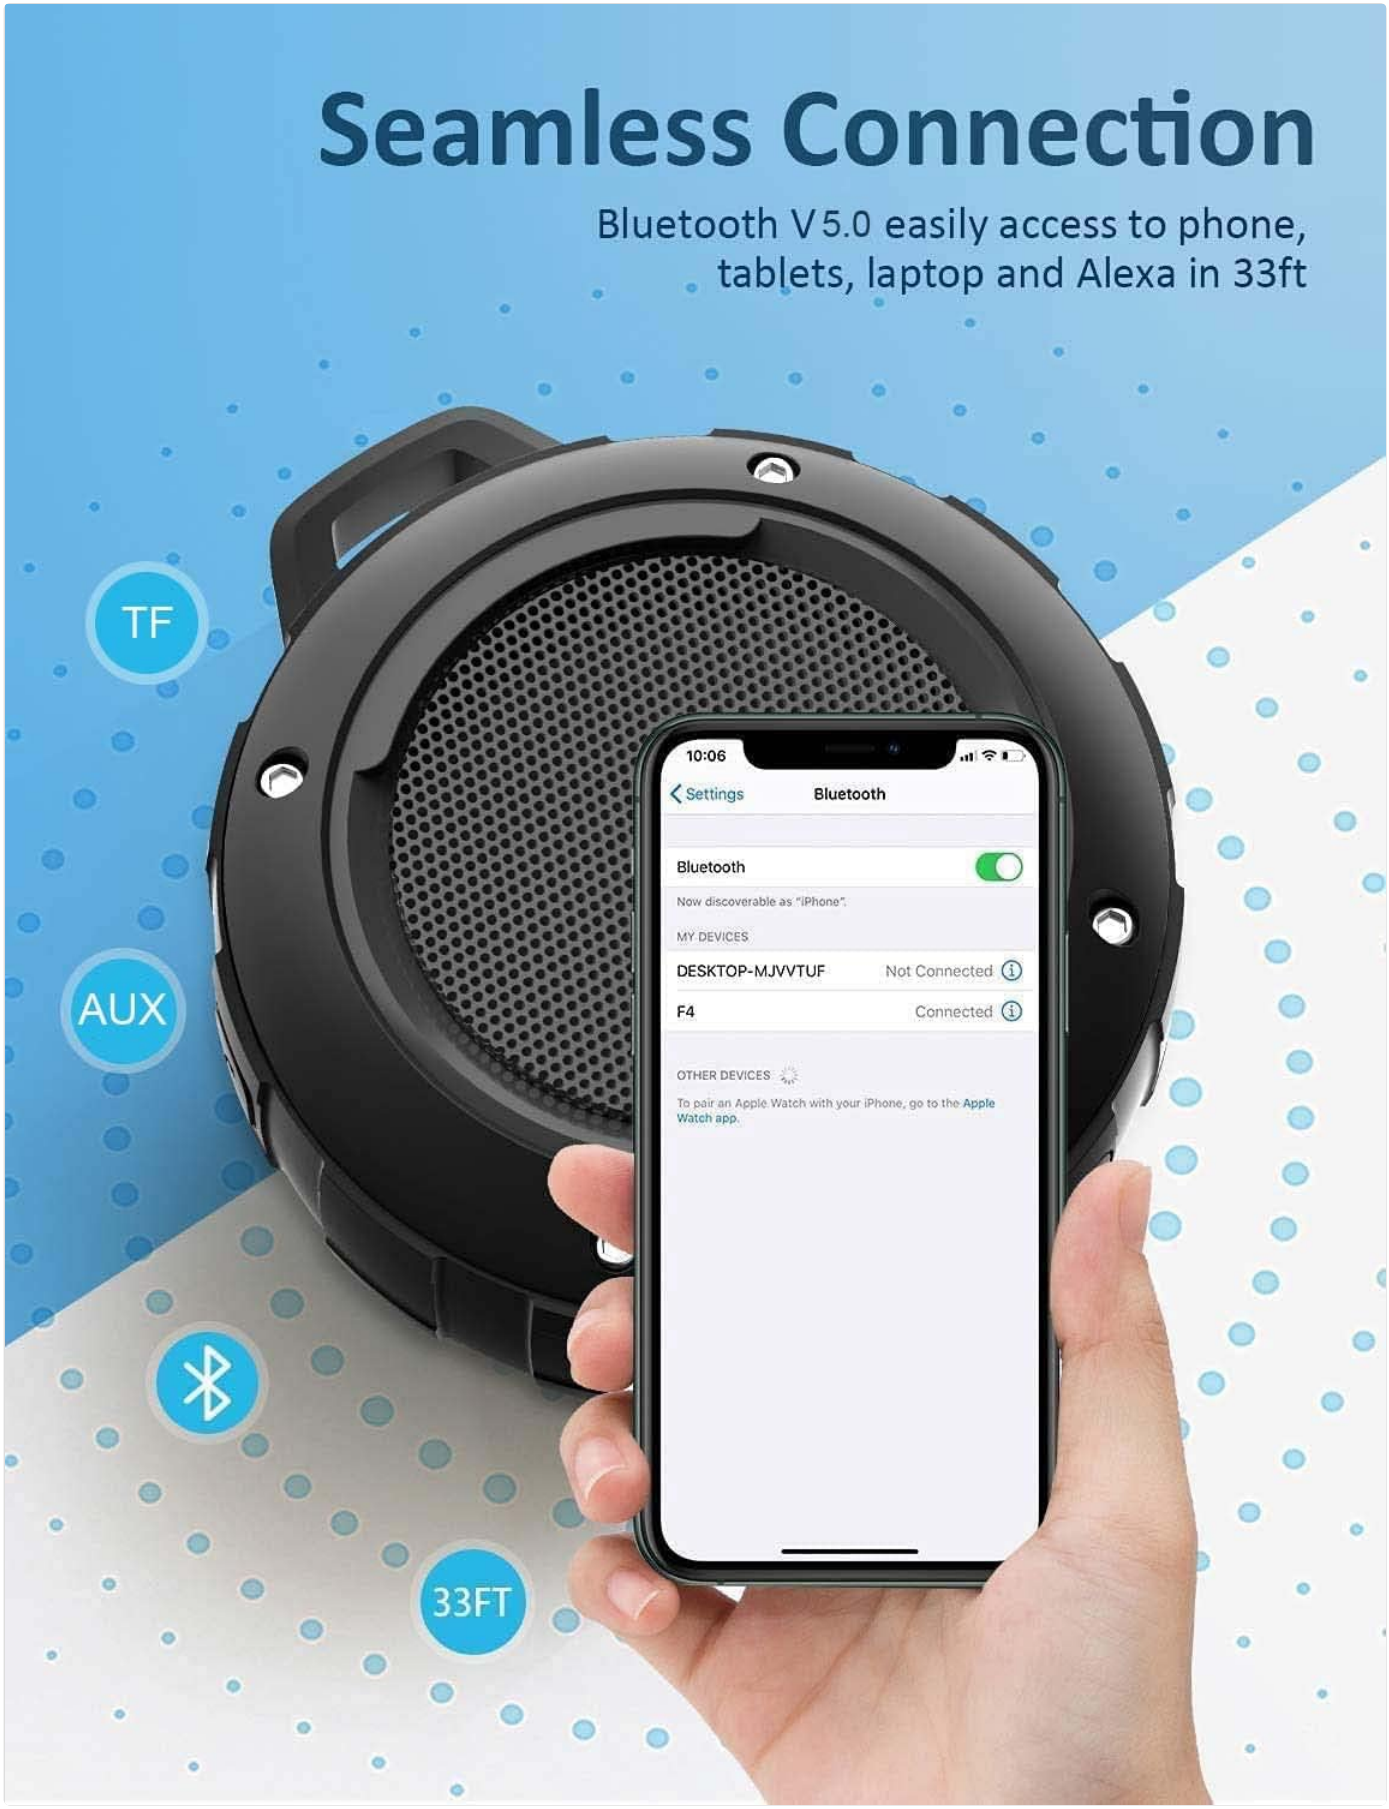


Image: The speaker connected via Bluetooth to a smartphone.

4. True Wireless Stereo (TWS) Pairing

To achieve a wider stereo sound experience, you can pair two Kunodi Shower speakers together:

1. Ensure both speakers are powered on and disconnected from any Bluetooth devices.

2. Press the TWS button (often indicated by a double-speaker icon) on one of the speakers. It will enter TWS pairing mode.
3. The speakers will automatically search for and connect to each other. You will hear a confirmation tone once paired.
4. Once TWS paired, connect your device to one of the speakers via Bluetooth as described in step 3. Both speakers will now play audio in stereo.



Image: Two speakers used in TWS mode by hikers.

Operating Instructions

1. Button Functions

Button	Function (Short Press)	Function (Long Press)
Power Button	Play/Pause	Power On/Off
Volume +	Next Track	Increase Volume
Volume -	Previous Track	Decrease Volume
Call Button	Answer/End Call	Reject Call
TWS Button	Toggle TWS mode	Disconnect TWS

2. Using TF Card and AUX Input

- **TF Card:** Insert a TF (MicroSD) card with MP3 audio files into the designated slot. The speaker will automatically switch to TF card mode and begin playback.
- **AUX Input:** Connect one end of the provided AUX cable to the speaker's AUX port and the other end to the audio output of your device. The speaker will automatically switch to AUX mode.

3. Making/Receiving Calls

When connected via Bluetooth to your smartphone, you can use the speaker for hands-free calls:

- **Answer Call:** Short press the Call button.
- **End Call:** Short press the Call button during a call.
- **Reject Call:** Long press the Call button when an incoming call rings.

4. Waterproof Usage Guidelines

The speaker is IPX6 waterproof, meaning it can resist high-pressure, heavy sprays of water. It is suitable for use in showers, by the pool, or on the beach. However, it is not designed for submersion. Ensure the charging port cover is securely closed before exposing the speaker to water.



Image: Speaker attached to a shower wall with a suction cup.

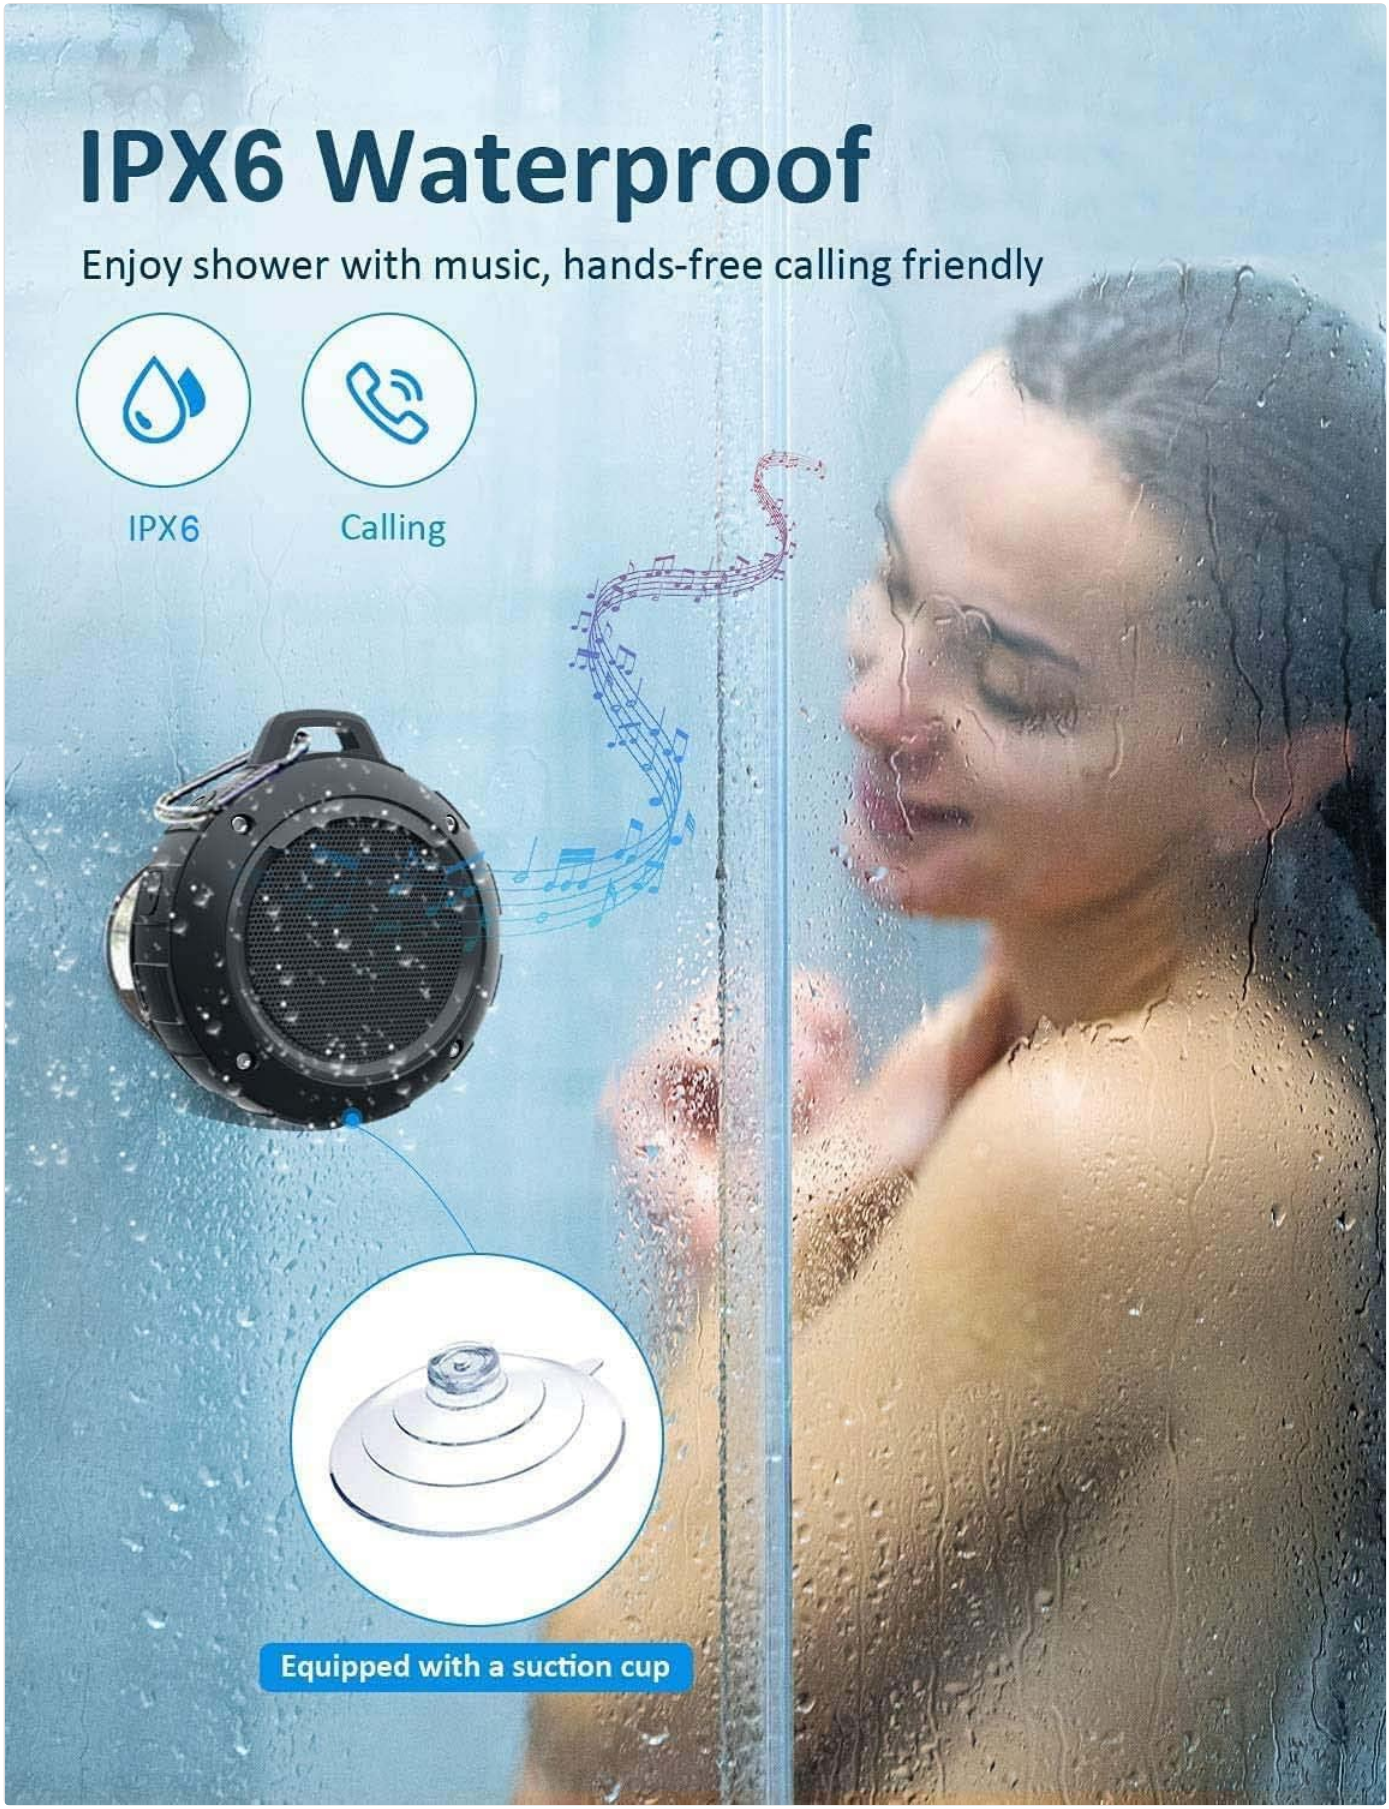


Image: Speaker attached to a bicycle using its carabiner clip.

Maintenance

1. Cleaning

To clean your speaker, wipe it with a soft, damp cloth. Do not use harsh chemicals, cleaning solvents, or strong detergents, as these may damage the speaker's surface or waterproof seals.

2. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in pairing mode. Turn device Bluetooth off/on. Move speaker closer to device (within 20 meters).
No sound.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Check if correct input (Bluetooth, TF, AUX) is selected. Ensure media is playing on your device.
TWS pairing fails.	Speakers already connected to other devices.	Disconnect both speakers from any Bluetooth devices before attempting TWS pairing.
Poor sound quality.	Low battery; interference; source audio quality.	Charge the speaker. Move away from other electronic devices. Check the quality of the audio source.

Specifications

Feature	Detail
Brand	Kunodi
Model Name	Shower
Connectivity Technology	Bluetooth 5.0, Auxiliary, TF Card
Speaker Maximum Output Power	6 watts (10W with TWS)
Audio Output Mode	Stereo
Frequency Response	80 Hz
Water Resistance Level	IPX6 (Waterproof)
Bluetooth Range	Up to 20 meters (396 inches)
Battery Average Life	12 hours (at 60% volume)
Battery Charge Time	2 hours

Feature	Detail
Battery Capacity	800 mAh
Power Source	Battery Powered
Number of Microphones	1
Enclosure Material	Silicone
Item Dimensions (D x W x H)	4"D x 3.6"W x 1.8"H
Item Weight	10 ounces
UPC	661273230589

Warranty Information

This Kunodi product comes with a Limited Warranty. Please refer to the product packaging or contact customer support for specific details regarding the warranty period and coverage. Keep your purchase receipt as proof of purchase for warranty claims.

Support

For further assistance, technical support, or inquiries regarding your Kunodi Outdoor Waterproof Bluetooth Speaker, please contact Kunodi customer service through the retailer where the product was purchased or visit the official Kunodi brand store online.
Online Store: Kunodi Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07797FJKY

More documents and user manuals: **https://manuals.plus/**