Rii 4071448

Rii K18 Plus Wireless Multimedia Keyboard User Manual

Model: 4071448 | Brand: Rii

1. Introduction

The Rii K18 Plus Wireless Keyboard is designed for seamless interaction with a wide range of devices. It combines a full QWERTY keyboard with a large multi-touch trackpad, offering convenience and efficiency. This manual will guide you through the features and functions of your new keyboard.



The Rii K18 Plus keyboard showcasing its three distinct backlight color options: green, blue, and red.

2. Setup

2.1 Package Contents

Upon opening the package, you should find the following items:

- Rii K18 Plus Wireless Keyboard
- USB Receiver (located inside the keyboard)
- Recharge Cable
- USB Extension Cable



The Rii K18 Plus keyboard and its included accessories, including the USB receiver and charging cable.

2.2 USB Receiver Location

The USB receiver is conveniently stored within the keyboard itself. To access it, gently open the back case of the keyboard. You will find both the USB receiver and the recharge cable stored together in a dedicated compartment.

2.3 Initial Connection

To connect the keyboard to your device:

1. Locate and remove the USB receiver from its storage compartment on the back of the keyboard.
2. Insert the USB receiver into an available USB port on your main device (e.g., Android TV Box, PC, Smart TV).
3. Turn on the keyboard using the power switch, typically located on the top edge. The keyboard should automatically connect to the receiver.

Note:

- When using the wireless keyboard with a Fire TV, an OTG cable is required.
- Newer Samsung Smart TVs may not support all standard keyboard and mouse functions.

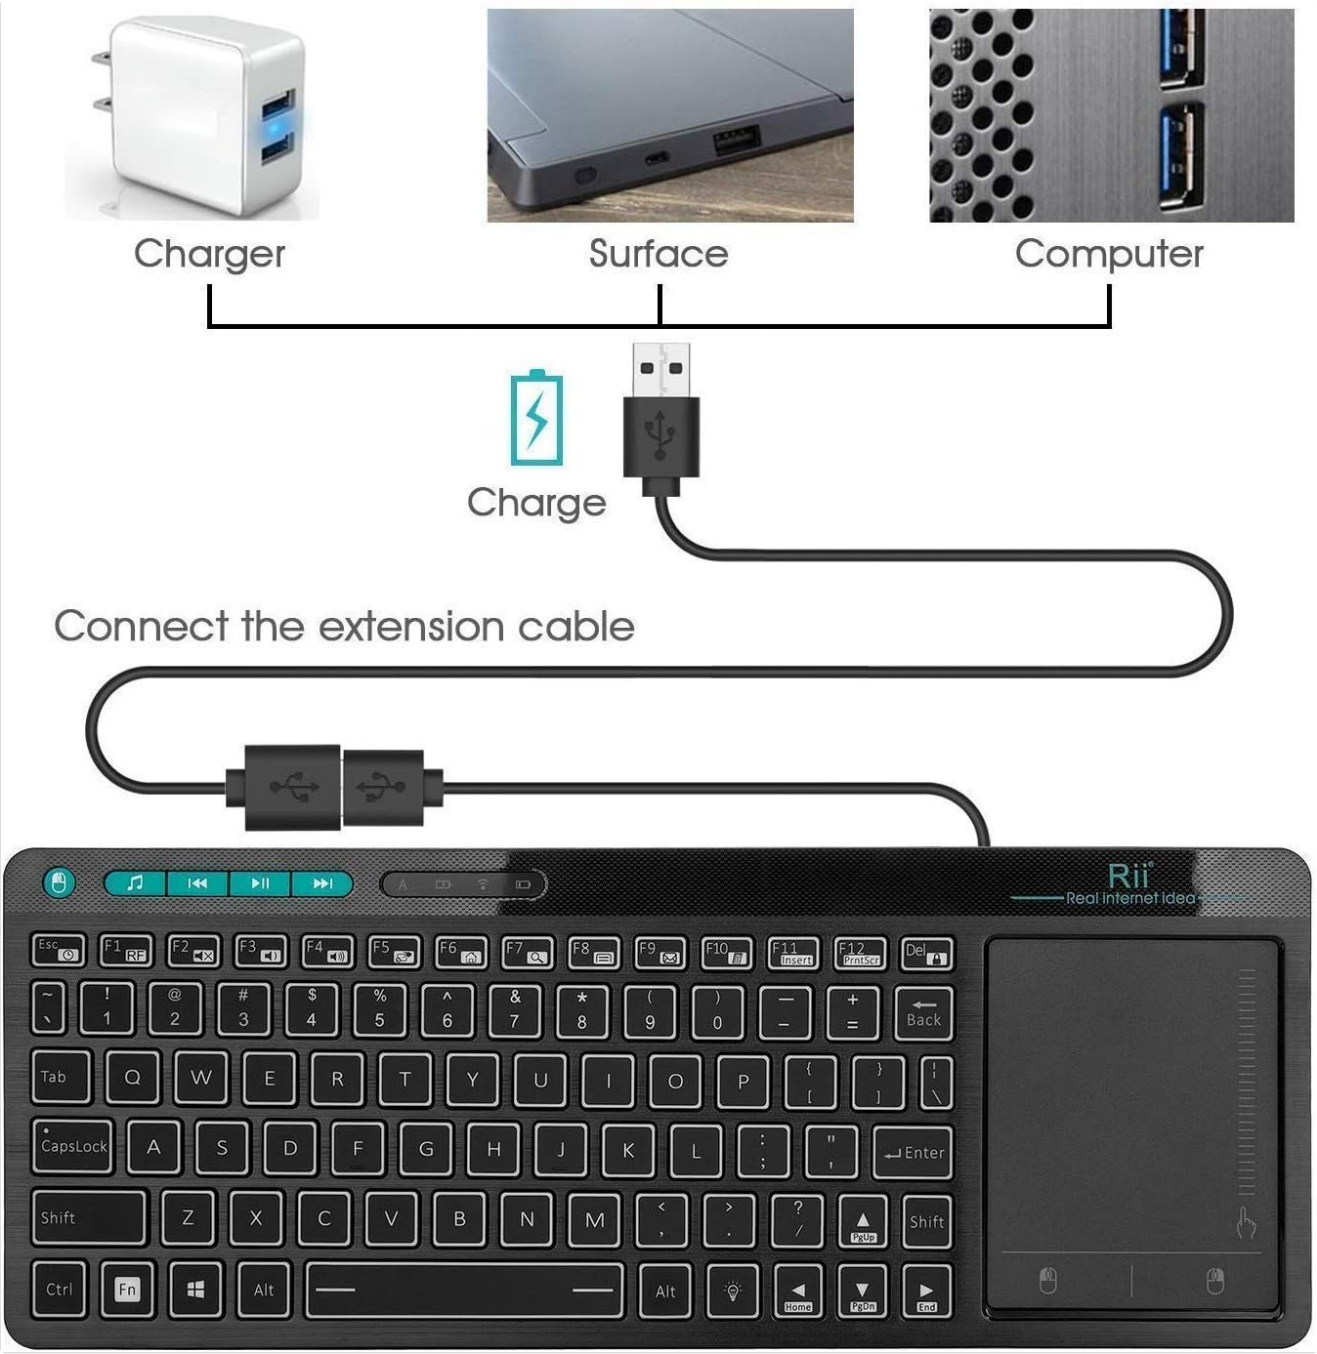


Illustration of connecting the keyboard for charging and to a device, highlighting the use of the extension cable for optimal signal.

3. Operating Instructions

3.1 3-Colors Backlight Control

The Rii K18 Plus features a 3-color backlight system (Red, Green, Blue) for improved visibility in low-light conditions.

- The Bulb button, located on the right bottom side of the keyboard, controls the backlight. Press this button to cycle through the available colors.




Detailed view of the keyboard's backlit keys, illustrating the blue and green color options.

3.2 Trackpad Operation

The large multi-touch trackpad provides intuitive navigation:

- **Single finger click:** Functions as a Left Mouse click.
- **Two fingers click:** Functions as a Right Mouse click.
- **Two fingers slide:** Allows for Zoom in/out functionality.

1. Caps Lock
2. Charge
3. 2.4Ghz RF Wireless Connection
4. Low Power

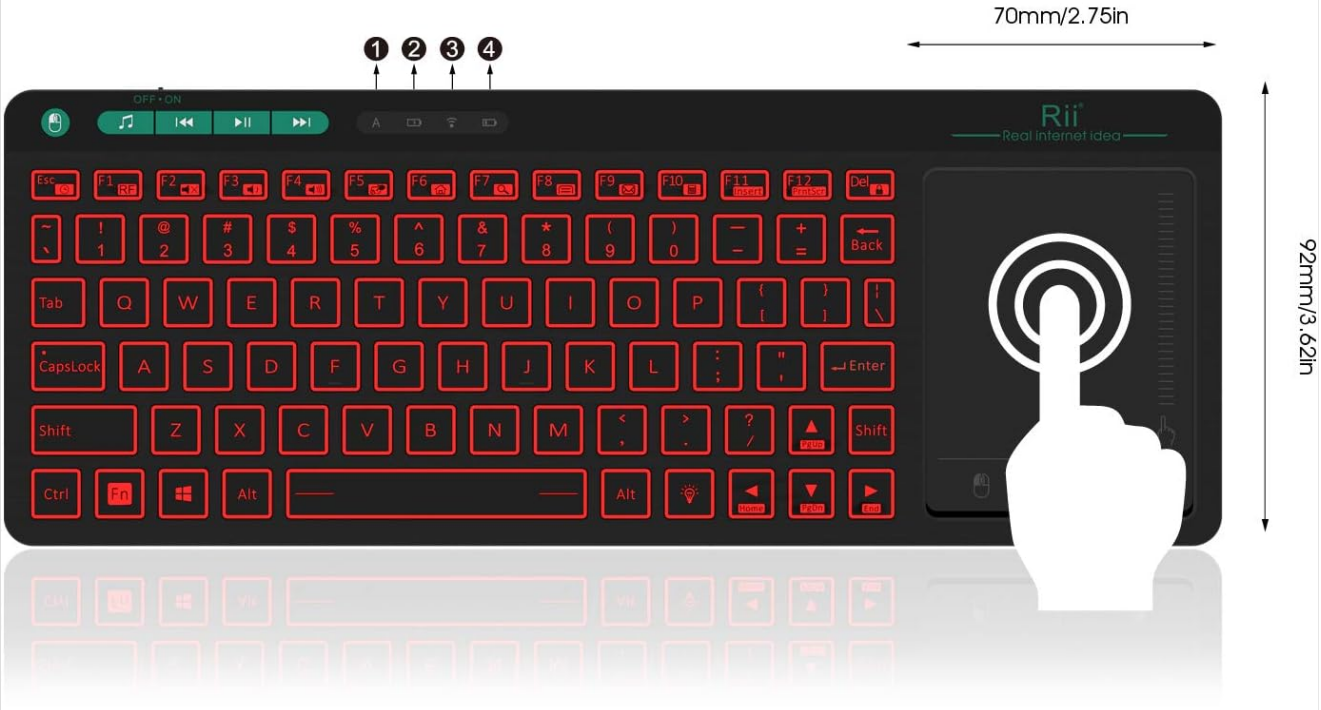

Touchpad Function:

1. Drag (two methods)
   1>Press left top mouse key without releasing,single finger click to drag.
   2>Single finger double click without releasing to drag
2. Left Mouse and Right Mouse
   Single finger click:Left Mouse
   Two fingler click: Right Mouse
3. Move the cursor
   Singer finger movement is to move the cursor.
4. Mouse Wheel
   Two finger movement as the mouse wheel.
5. Press the F5 to disable or enable the touchpad function.
6. Press FN+Space to change Cursor’s move speed(default is increase)

Visual guide to the trackpad's multi-touch gestures for various mouse and zoom operations.

3.3 Multimedia Functions

The keyboard includes green-colored multimedia buttons for quick access to common functions:

MULTIMEDIA WIRELESS KEYBOARD WITH TOUCH PAD

1 Caps Lock
2. Charge
3.2.4Ghz RF Wireless Connection
4. Low Power



Multimedia Quick Start:

From ESC TO F10
Fn+ESC=Switch auto sleep model
Fn+F1=Pairing
Fn+F2=Mute
Fn+F3=Volume –
Fn+F4=Volume +
Fn+F5=Activate/Deactivate cursor
Fn+F6=Home
Fn+F7=Search
Fn+F8=Menu
Fn+F9=Email
Fn+F10=Calculater

Quick reference for multimedia functions, indicating key combinations for various controls.

Function	Key Combination
Switch auto sleep mode	Fn + ESC
Pairing	Fn + F1
Mute	Fn + F2
Volume -	Fn + F3
Volume +	Fn + F4
Activate/Deactivate cursor	Fn + F5
Home	Fn + F6
Search	Fn + F7
Menu	Fn + F8

Function	Key Combination
Email	Fn + F9
Calculator	Fn + F10

3.4 System Compatibility

The Rii K18 Plus Wireless Keyboard is compatible with a variety of operating systems and devices:

- Android TV Box
- Smart TV
- PC (Windows)
- Android devices
- Xbox
- Raspberry Pi
- HTPC
- IPTV
- MacOS (some media functions may not work)



The Rii K18 Plus keyboard positioned in front of a computer monitor, illustrating its practical application.

4. Maintenance

4.1 Rechargeable Battery

The Rii K18 Plus keyboard features a built-in rechargeable battery. A single charge typically lasts about 2 weeks, depending on usage. To charge the keyboard, connect the provided recharge cable to the keyboard and a USB power source.

5. Troubleshooting

5.1 Connection Repair Method

If the indicator LED on the keyboard flashes continuously, it may have lost connection with the USB receiver. Follow these steps to repair the connection:

1. Press the **ESC** button and turn on the keyboard simultaneously.
2. Insert the USB dongle into your main device's USB port. The White LED on the keyboard will flash for 3-5 seconds and then turn off, indicating successful repair.

5.2 Signal Interference

If you experience issues such as repeated characters (e.g., pressing 'a' results in 'aaaaaa') or a very short connection distance, it indicates signal interference. To resolve this:

- Use the USB extension cable included in the package to connect your TV (or main device) and the USB receiver. This can help move the receiver away from sources of interference.

6. Specifications



Physical dimensions of the Rii K18 Plus keyboard.

Feature	Detail
Product Dimensions	12.48"L x 4.86"W x 0.72"H (317.2mm x 123.6mm x 18.3mm)
Item Weight	15.8 ounces
Manufacturer	Riitek
Item Model Number	4071448
Batteries	1 Lithium Ion battery (included)
Connectivity Technology	USB (2.4G Wireless)
Keyboard Description	Multimedia
Special Features	Backlit, Trackpad, Rechargeable
Number of Keys	73
Keyboard Backlighting Color Support	3-Colors (Red, Green, Blue)

7. Warranty and Support

The Rii K18 Plus Wireless Keyboard comes with a 12-month warranty. For any issues encountered during use, please contact the support team for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question