Anderic RRUR01.4

Anderic RRUR01.4 Universal 4-Device Remote Control

INSTRUCTION MANUAL

Introduction

The Anderic RRUR01.4 is a 4-device universal remote control designed for comprehensive control of your home entertainment system. It is preprogrammed for various Roku streaming players and Insignia Roku Enhanced TVs, and can be programmed to operate other devices such as TVs, DVD/Blu-ray players, soundbars, and set-top boxes. Key features include macro functionality, learning capability, and full backlighting for ease of use in low-light conditions.

This remote operates via infrared (IR) signal, requiring a direct line-of-sight to the device being controlled. It does not support Roku Sticks or Dish Hopper 3.

Setup

1. Battery Installation

The remote requires two (2) AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring correct polarity (+ and -).
4. Replace the battery cover. An optional screw is provided for securing the battery cover.

Image: Front and back view of the Anderic RRUR01.4 remote control, illustrating the battery compartment.

2. Initial Programming (Pre-programmed Devices)

The RRUR01.4 is preprogrammed for immediate use with the following devices:

- **Roku Streaming Boxes:** All Roku 1, Roku 2, Roku 3, and Roku 4 units (e.g., Roku LT (2400, 2450, 2700), Roku HD (2500), Roku 2 HD (3000), Roku 2 XD (3050), Roku 2 XS (3100), Roku 1 SE (2710), Roku 2 (2720, 4210), Roku 3 (4200, 4230), Roku Express (3700), Roku Express+ (3710), Roku Premiere (4620), Roku Premiere+ (4630), Roku Ultra (4640)).
- **Enhanced Insignia Roku TVs**

Default programmed codes:

- **TV:** Insignia Roku Enhanced TV
- **DVD:** Samsung Blu-ray
- **STB:** Roku Streaming Box (2730)
- **AUDIO:** Vizio Sound Bar (4240)

Image: The Anderic RRUR01.4 remote control highlighting its compatibility with various Roku streaming players.

3. Programming Other Devices

The remote can be programmed to control 99% of TVs and audio equipment, including Roku Smart TVs (TCL, Hisense, Insignia, LG, Element, Sharp), Vizio, Samsung, and Sony soundbars, and other set-top boxes. Refer to the code list provided with your remote or available from the manufacturer's website for specific programming codes.

Learning Ability: This remote features a learning function, allowing you to transfer codes directly from your original remote control. Consult the full instruction manual for detailed steps on using the learning feature.

Macro Function: The macro function allows you to program a single key to send a series of commands. Note that channel keys (number pad and CH+/-) will not function for Roku/Roku TV units, as Roku does not support these functions.

Colored Keys: The red, blue, green, and yellow colored keys can be programmed to send codes for specific applications (e.g., Amazon, Hulu, Netflix) using the provided code list or the learning method.
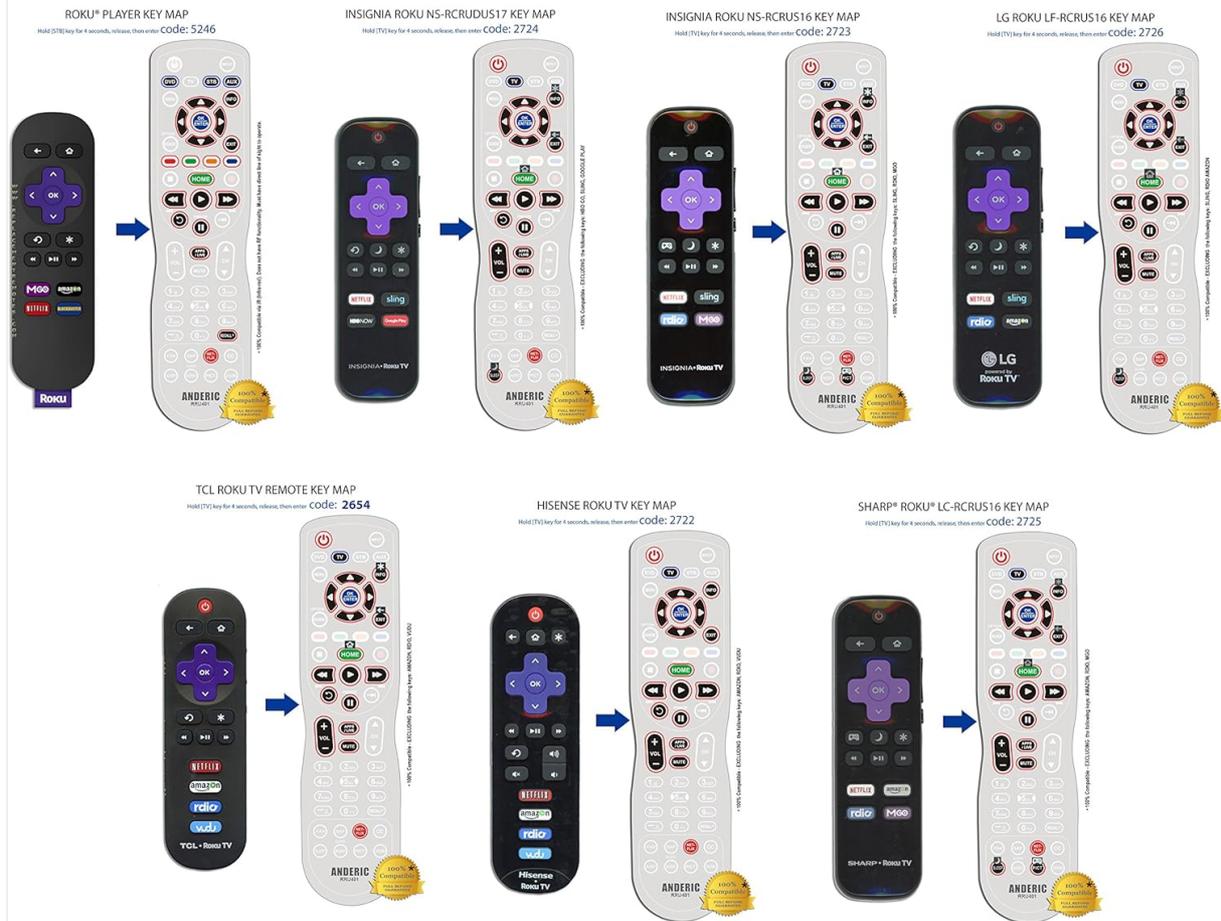
Roku® Player & Roku TVs

KEY MAP AND CODES

Image: A detailed key map illustrating button layouts and programming codes for various Roku Player and Roku TV models.

Operating Instructions

- **Backlighting:** The remote features full backlighting, illuminating all keys for easy visibility in dark environments.
- **Line-of-Sight:** Ensure a clear line-of-sight between the remote and the device you are controlling for proper infrared signal transmission.
- **Dedicated Keys:** Utilize smart keys for HOME, NETFLIX, and APPS for quick access to these functions.
- **Punch-through Ability:** This feature allows certain commands (e.g., volume) to control a specific device regardless of the currently selected mode.
- **Volume Lock to Mode:** Lock the volume control to a specific device (e.g., soundbar) across all modes.
- **Any-Key Lock to Mode:** Lock any key to a specific device mode.

Official Product Video

Video: An overview of the Anderic RRUR01 4-Device remote control, demonstrating its features and compatibility with Roku Streaming Players.

Maintenance

- **Battery Replacement:** Replace AAA batteries when the remote's performance diminishes or when the backlight no longer illuminates.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place away from extreme temperatures.

Image: The Anderic RRUR01.4 remote control displayed with an optional security cable attachment (CBL01), sold separately.

Troubleshooting

- **Remote not responding:**
  - Check if batteries are correctly inserted and have sufficient charge. Replace if necessary.

- Ensure there is a clear line-of-sight between the remote and the device. Remove any obstructions.

- **Device not responding to programmed code:**
  - Try alternative codes for your device from the code list.
  - Utilize the learning function to copy commands directly from your original remote.

- **Channel keys not working for Roku/Roku TV:**
  - This is expected behavior. Roku and Roku TV units do not support channel key functions (number pad and CH+/-) via infrared remote controls.

- **Intermittent response or lag:**
  - Ensure batteries are fresh.
  - Verify line-of-sight and proximity to the device.

Specifications

Model Number	RRUR01.4
Product Dimensions	7.75 x 2 x 1 inches
Item Weight	4.5 ounces
Batteries Required	2 AAA batteries
Max Supported Devices	4
Compatible Devices	DVD/Blu-ray Player, Home Theater, Roku, Streaming Device, Television
Special Features	Backlit, Ergonomic

Warranty and Support

Anderic is a registered trademark of Dan's Electronics Etc., Inc. Anderic and Dan's Electronics Etc., Inc. are not affiliated with any other brands. All rights reserved.

For technical support, programming assistance, or warranty inquiries, please contact the manufacturer directly. Refer to the packaging or manufacturer's website for contact information.