ONN 4341066053

ONN 32-47 Inch Tilting TV Wall Mount Instruction Manual

Model: 4341066053

Introduction

This manual provides comprehensive instructions for the safe and proper installation and operation of your ONN 32-47 Inch Tilting TV Wall Mount. Designed for flat panel TVs weighing up to 80 lbs, this mount allows for a slim profile, positioning your TV just 2 inches from the wall, while offering a tilt range of 5 degrees up and 10 degrees down to optimize viewing angles and reduce glare. Please read all instructions carefully before beginning installation.

Safety Information

Improper installation or use of this product can result in serious injury or damage. Please observe the following safety precautions:

- Ensure the mounting surface can safely support the combined weight of the mount and the TV.
- Do not exceed the maximum weight capacity of 80 lbs (36.3 kg).
- Always use a stud finder to locate wood studs for secure mounting. If mounting to concrete or brick, use appropriate anchors (not included).
- Do not install into drywall alone.
- Verify all connections are secure before releasing the TV.
- Keep children and pets away during installation.
- If you are unsure about any part of the installation process, consult a qualified professional.

Package Contents

Please verify that all components are present before proceeding with installation.

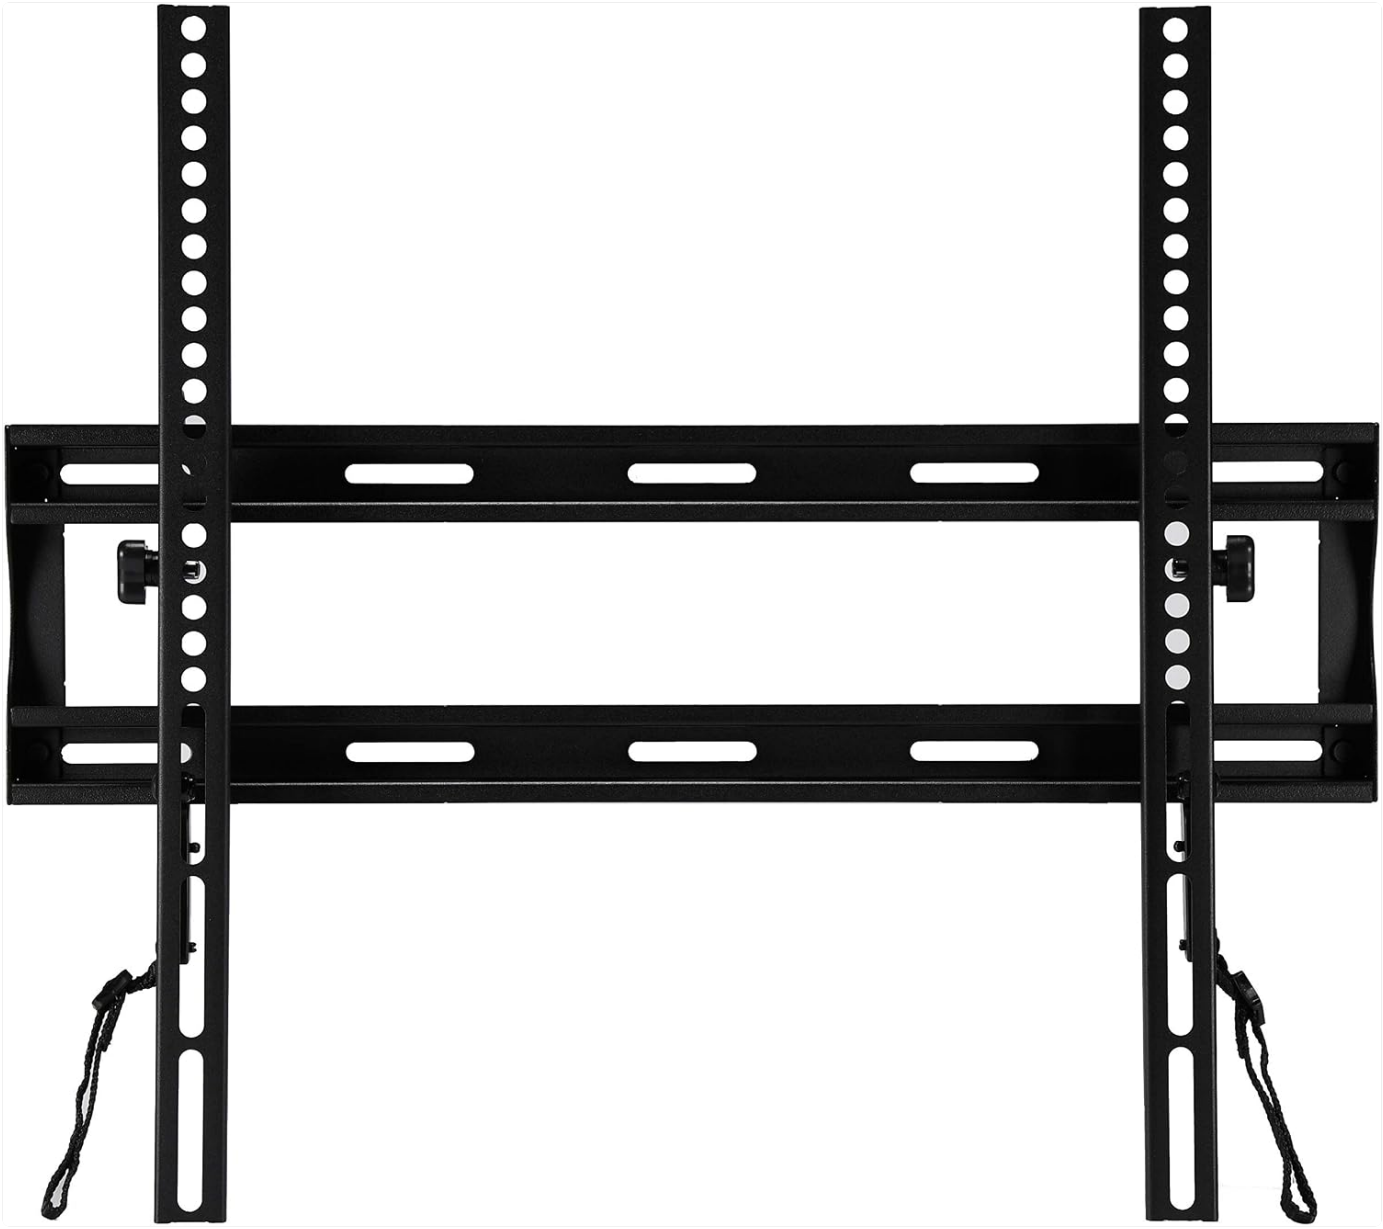


Image: The ONN Tilting TV Wall Mount, showing the main wall plate and two vertical TV brackets with adjustment holes and pull cords.

- Wall Plate Assembly (1)
- TV Brackets (2)
- Hardware Kit (various screws, washers, spacers for TV and wall attachment)
- Instruction Manual (this document)

Note: Specific screw sizes and quantities may vary. Refer to the hardware bag for detailed contents.

Setup and Installation

Follow these steps carefully to install your TV wall mount.

Step 1: Prepare the TV

1. Carefully place your TV face-down on a soft, clean surface to prevent screen damage.
2. Identify the VESA mounting holes on the back of your TV.
3. Attach the two TV brackets to the back of your TV using the appropriate screws, washers, and spacers from the hardware kit. Ensure the brackets are centered and securely fastened. The "Quick Latching" mechanism should be at the bottom.

Step 2: Mark and Drill Wall Holes

1. Determine the desired height for your TV.
2. Use a stud finder to locate two adjacent wood studs. Mark the center of each stud.
3. Hold the wall plate against the wall, aligning its mounting holes with the marked stud centers. Use a level to ensure it is perfectly horizontal.
4. Mark the drill points through the wall plate holes.
5. Drill pilot holes at the marked locations. For wood studs, use a 3/16 inch (4.5 mm) drill bit. For concrete/brick, use a 3/8 inch (10 mm) masonry drill bit and insert concrete anchors (not included).

Step 3: Mount the Wall Plate

1. Attach the wall plate to the wall using the lag bolts and washers provided. Tighten all bolts securely, but do not overtighten.
2. Verify the wall plate is level and firmly attached to the wall.

Step 4: Hang the TV

1. With assistance, carefully lift the TV with the attached brackets.
2. Hook the TV brackets onto the top edge of the wall plate.
3. Gently lower the TV until the brackets engage with the wall plate. The "Quick Latching" mechanism will secure the TV in place. You should hear a click.
4. Pull the release cords (located at the bottom of the TV brackets) to ensure the latching mechanism is engaged and the TV is securely mounted.

Operating the Mount

This mount features a tilting mechanism and lateral shift for optimal viewing.

Tilting Adjustment

The mount allows for a tilt range of 5 degrees up and 10 degrees down. To adjust the tilt, gently push or pull the bottom of the TV to the desired angle. The friction-based mechanism will hold the TV in position.

Lateral Shift

Once mounted, the TV can be shifted laterally (left or right) along the wall plate to achieve optimal centering. Simply slide the TV along the wall plate to the desired position.

Removing the TV

To remove the TV from the wall mount, locate the two pull cords at the bottom of the TV brackets. Pull both cords simultaneously to disengage the "Quick Latching" mechanism, then carefully lift the TV off the wall plate with assistance.

Maintenance

The ONN Tilting TV Wall Mount requires minimal maintenance.

- Periodically check all screws and bolts to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Do not apply lubricants to the tilting mechanism unless specifically instructed by the manufacturer.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
TV is not level	Wall plate not level during installation.	Remove TV, loosen wall plate bolts, adjust level, re-tighten.
TV feels unstable	Screws not fully tightened; incorrect mounting surface; weight capacity exceeded.	Check all fasteners. Ensure mount is in wood studs or appropriate anchors. Verify TV weight is within limits.
Cannot tilt TV	Mechanism too tight or obstructed.	Ensure no cables or objects are obstructing movement.
TV will not latch onto wall plate	TV brackets not properly aligned or latches obstructed.	Ensure TV brackets are correctly positioned on the wall plate. Check for obstructions in the latching mechanism.

Specifications

Brand: ONN

Model Number: 4341066053

Mounting Type: Wall Mount

Movement Type: Tilt

Compatible TV Sizes: 32 - 47 Inches

Maximum Weight Capacity: 80 lbs (36.3 kg)

Tilt Angle: 5° Up / 10° Down

Wall Profile: 2 inches (5.08 cm)

Color: Black

Item Weight: 4.65 pounds (2.11 kg)

Package Dimensions: 20.5 x 5.75 x 2.75 inches (52.07 x 14.61 x 6.99 cm)

UPC: 681131134026

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ONN website. Keep your purchase receipt for warranty claims.

© 2024 ONN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question