Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Pemberly Row PR-1520163

Pemberly Row Modern Wood TV Stand User Manual

Model: PR-1520163 | Brand: Pemberly Row

1. Introduction

Thank you for choosing the Pemberly Row Modern Wood TV Stand. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new TV stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: The Pemberly Row Modern Wood TV Stand in Glossy White, featuring a sleek, low-profile design with central open shelving and two side storage compartments.

This TV stand is designed to accommodate televisions up to 67 inches and weighing up to 100 lbs. It features a clean-cut, low-profile design with two spacious drawers and one adjustable shelf in the media compartment, along with integrated wire management for a tidy setup.

2. Safety Information

To ensure safe use and prevent injury or damage, please adhere to the following safety guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 100 lbs (45 kg) for the top surface. The internal shelves have a lower weight limit; refer to the specifications section for details. Overloading can cause the stand to collapse, resulting in serious injury or damage to property.
- **Proper Placement:** Place the TV stand on a flat, level, and stable surface. Uneven surfaces can lead to instability and tipping.
- **Anti-Tip Devices:** If anti-tip hardware is included, it is strongly recommended to install it to secure the stand to a wall, especially in homes with children or pets.

- **Children and Pets:** Keep children and pets away from the assembly area. Small parts can be a choking hazard. Do not allow children to climb on or play with the TV stand.
- **Assembly:** Follow all assembly instructions precisely. Incorrect assembly can compromise the structural integrity of the stand.
- **Power Tools:** Use hand tools for assembly. If using power tools, set them to a very low torque to avoid overtightening screws and damaging the engineered wood.
- **Ventilation:** Ensure adequate ventilation around electronic devices placed on or within the stand to prevent overheating.

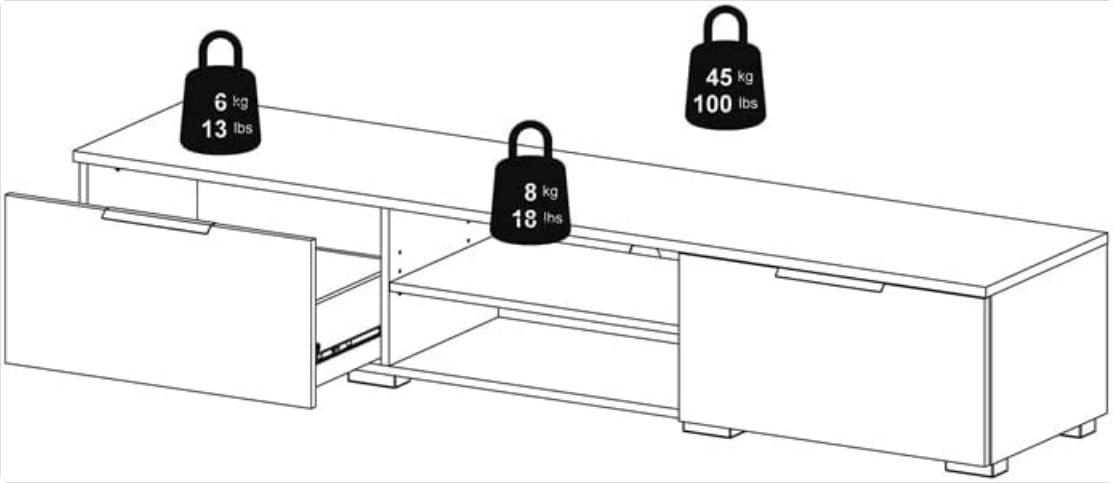


Image 2.1: Diagram illustrating the weight capacities for different sections of the TV stand: 100 lbs (45 kg) for the top surface, 18 lbs (8 kg) for the adjustable shelf, and 13 lbs (6 kg) for each drawer.

3. Setup and Assembly

Assembly of this TV stand requires careful attention to detail. It is recommended that two adults perform the assembly to ensure safety and ease of construction.

3.1. Before You Begin

- **Unpack:** Carefully unpack all components and hardware from the box. Lay them out on a soft, clean surface (e.g., a blanket or cardboard) to prevent scratches.
- **Check Parts:** Verify that all parts listed in the included parts diagram are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support immediately.
- **Tools Required:** You will typically need a Phillips head screwdriver and a hammer.

3.2. Assembly Tips

- **Follow Diagrams:** The assembly instructions primarily rely on visual diagrams. Pay close attention to the orientation of each piece and the direction of screws.
- **Drawer Slides:** When installing the drawer slides, ensure they are correctly aligned and securely fastened. If a drawer does not close smoothly or completely after initial assembly, carefully re-examine the slide installation. Minor adjustments to the screw placement (e.g., using an adjacent pre-drilled hole if available) may be necessary to achieve proper alignment.
- **Do Not Overtighten:** Tighten screws firmly but do not overtighten, as this can strip the threads or crack the engineered wood.
- **Leveling:** Once assembled, ensure the stand is level. Adjust any integrated leveling feet if present.



Image 3.1: The TV stand with its two side drawers fully extended, revealing the internal storage space and the smooth-gliding drawer mechanisms.

4. Operating Instructions

Once assembled, your Pemberly Row TV Stand is ready for use.

4.1. Placing Your Television

- Carefully lift your television and center it on the top surface of the stand.
- Ensure the television's base is fully supported by the stand and does not overhang the edges.
- Confirm the television's weight does not exceed the stand's maximum capacity of 100 lbs (45 kg).



Image 4.1: The TV stand integrated into a living room setting, supporting a large flat-screen television and a soundbar, with media devices placed on the central shelves.

4.2. Utilizing Storage and Wire Management

- **Drawers:** Use the two side drawers for concealed storage of remotes, media, or other accessories. Do not overload drawers; refer to the weight capacity in the specifications.
- **Adjustable Shelf:** The central media compartment features an adjustable shelf. You can reposition it to accommodate various media devices such as cable boxes, gaming consoles, or sound systems.
- **Wire Management:** Route all cables and wires through the designated wire management opening at the back of the central compartment. This helps keep cables organized and out of sight, contributing to a clean aesthetic and preventing tripping hazards.

5. Maintenance and Care

Proper care will extend the life and maintain the appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner specifically designed for furniture. Avoid harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage or staining.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Keep the stand away from direct sunlight, heat sources, and excessive moisture to prevent warping, fading, or cracking.
- **Periodic Checks:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Moving the Stand:** When moving the TV stand, always lift it. Do not drag it, as this can damage the legs or the floor. Remove all items from the stand before moving.

6. Troubleshooting

If you encounter issues with your TV stand, refer to the following common problems and solutions:

- **Stand is Wobbly:**
  - Ensure the stand is on a flat, level surface.
  - Check that all assembly screws are securely tightened.
  - Adjust any leveling feet if present on the bottom of the stand.
- **Drawers Do Not Close Smoothly or Completely:**
  - Verify that the drawer slides on both the drawer and the stand frame are correctly installed and aligned. Ensure they are not bent or obstructed.
  - Check that all screws securing the drawer slides are fully tightened. Sometimes, a slight adjustment to the screw position on the slide (e.g., using an alternative pre-drilled hole if available) can resolve alignment issues.
  - Ensure no items inside the drawer are obstructing its closure.
- **Missing or Damaged Parts:**
  - Do not attempt to assemble the product with missing or damaged parts.
  - Contact Pemberly Row customer support immediately for replacement parts.
- **Surface Scratches or Dents:**
  - For minor scratches, furniture repair kits or markers designed for engineered wood can be used.
  - Prevent future damage by using protective pads under items placed on the surface.

If you experience issues not covered here, please contact Pemberly Row customer support for assistance.

7. Specifications

Feature	Detail
Model Number	PR-1520163
Brand	Pemberly Row
Material	Engineered Wood
Finish	Glossy White
Product Dimensions (L x W x H)	67.99 x 15.71 x 13.03 inches (172.7 x 39.9 x 33.1 cm)
Item Weight	67 pounds (30.4 kg)
Number of Drawers	2
Adjustable Shelves	1 (in central compartment)
Max. TV Size Accommodation	Up to 67 inches
Max. Top Surface Weight Capacity	100 lbs (45 kg)
Max. Shelf Weight Capacity	18 lbs (8 kg)
Max. Drawer Weight Capacity (each)	13 lbs (6 kg)
Special Features	Wire Management, Low-Profile Design

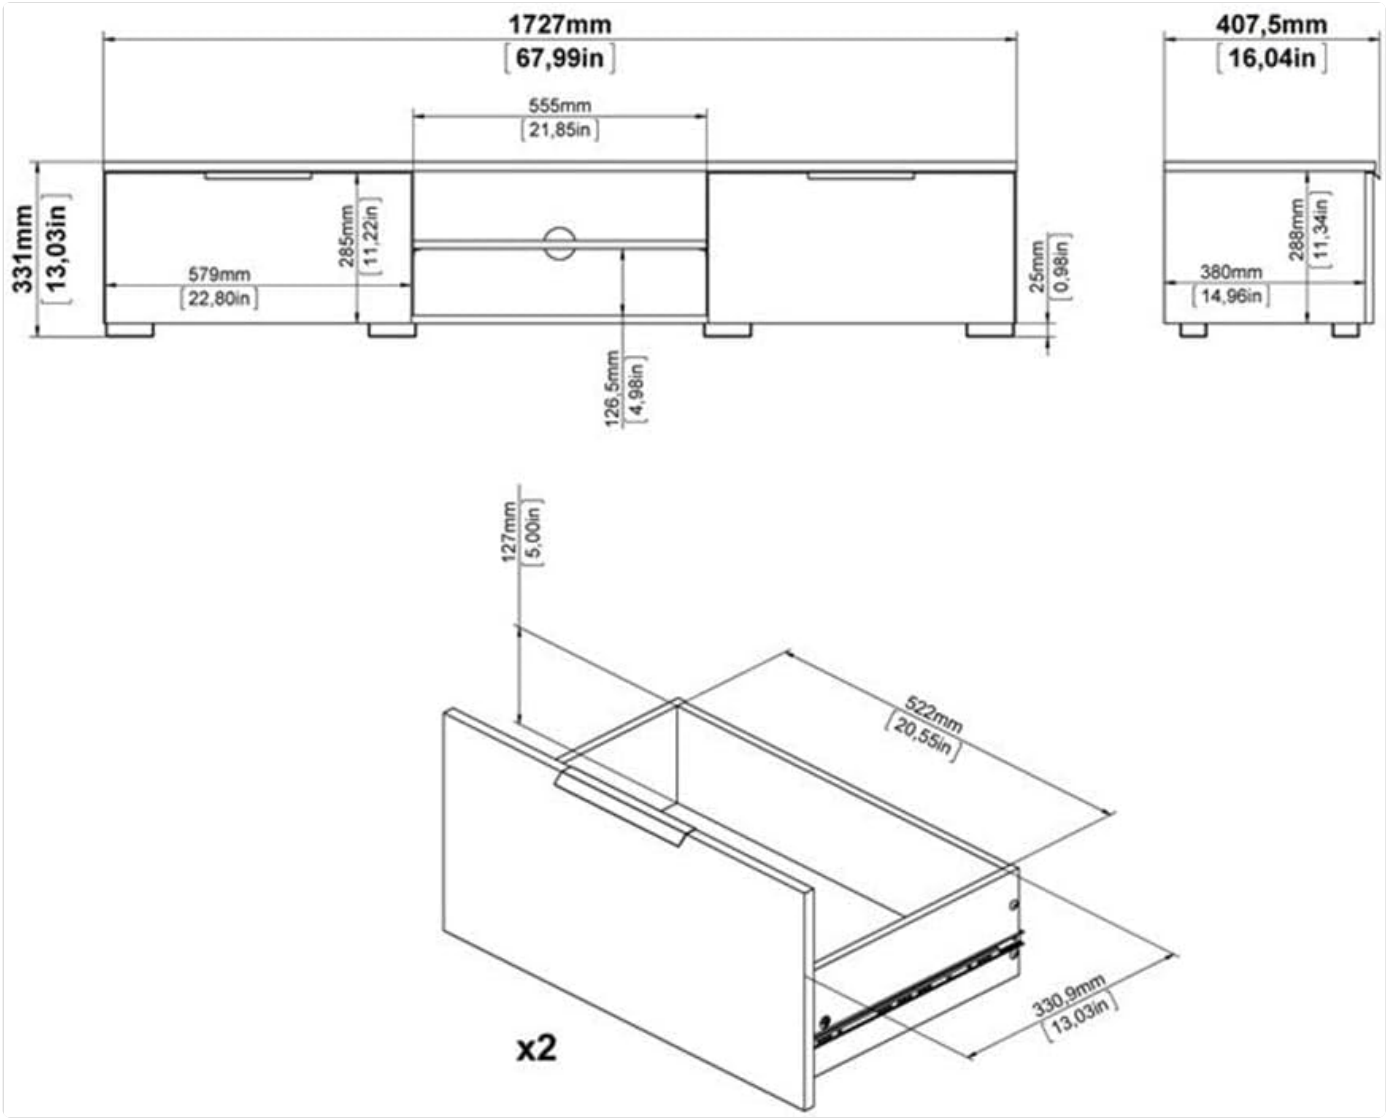


Image 7.1: Detailed dimensional drawing of the TV stand, showing overall length, height, depth, and internal compartment measurements in both millimeters and inches.

8. Warranty and Support

Pemberly Row is committed to providing quality products. While specific warranty details may vary, most products are covered by a manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims.

8.1. Customer Support

For assistance with assembly, missing parts, product defects, or any other inquiries, please contact Pemberly Row customer support. Have your model number (PR-1520163) and purchase information ready when you call or email.

- **Returns:** This product typically offers a 30-day easy return policy from the date of purchase. Refer to your retailer's return policy for specific terms and conditions.

© 2024 Pemberly Row. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B078SFV6SL

More documents and user manuals: **https://manuals.plus/**