Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Monster S300

Monster SuperStar S300 Portable Bluetooth Wireless Speaker

Model: S300 (129742-00)

Introduction

Thank you for choosing the Monster SuperStar S300 Portable Bluetooth Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. The SuperStar S300 is designed to deliver high-definition audio with deep bass, featuring a durable, waterproof (IPX7) design and long battery life, making it suitable for various environments.

Safety Information

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Ensure the charging port cover is securely closed when the speaker is exposed to water to maintain its IPX7 waterproof rating.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Use only the provided charging cable or a certified equivalent.
- Keep the speaker away from medical devices and strong magnetic fields.

Package Contents

Verify that all items are present in your package:

- Monster SuperStar S300 Speaker
- USB Charging Cable
- Carry Strap
- Quick Start Guide (not included in this manual)



MONSTER®

SUPERSTAR™
THE SMARTER MUSIC SPEAKER

S300
VOICE CONTROL READY
CONTRÔLE PAR LA VOIX

MONSTER TALK™
POWERED BY

VOICE CONTROL READY
CONTRÔLE PAR LA VOIX
MELODY
PERSONAL MUSIC ASSISTANT
ASSISTANT DE MUSIQUE PERSONNEL

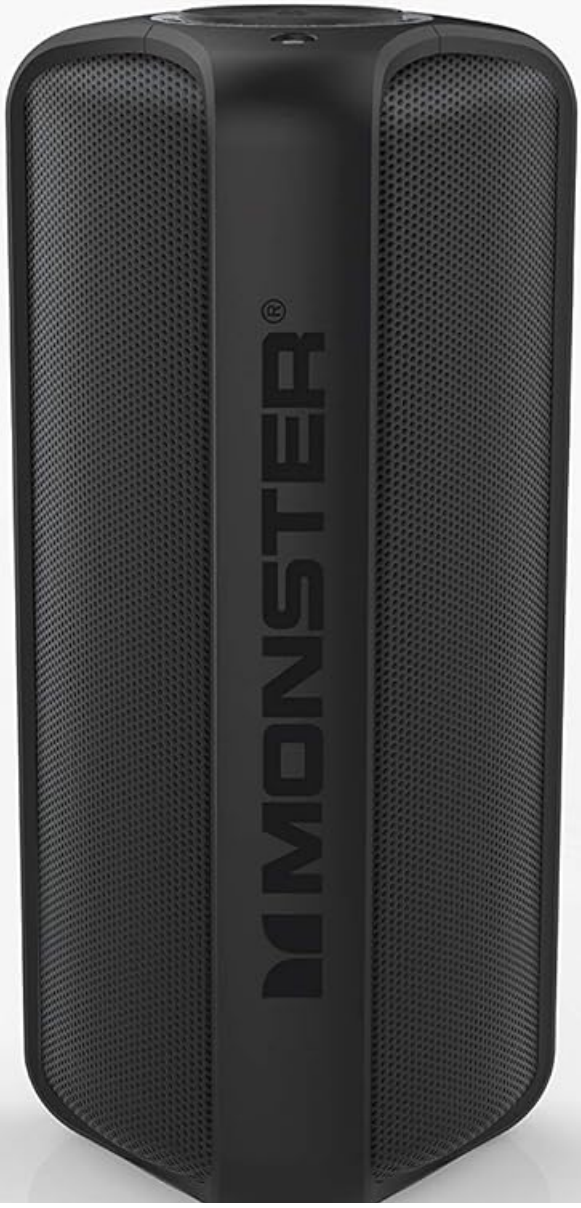




Image: The Monster SuperStar S300 speaker shown within its retail packaging, indicating the product and its branding.

Product Overview

Familiarize yourself with the various parts and controls of your SuperStar S300 speaker.



Image: An angled view of the Monster SuperStar S300 speaker, highlighting its triangular shape, front speaker grille, and the circular control panel on the side.

Control Panel



Image: A detailed view of the speaker's circular control panel, showing the power button, volume up/down buttons, and the NFC pairing area with LED indicators.

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Up/Down Buttons:** Adjust the playback volume.
- **Multi-Function Button:** (Often the central button) Controls playback (play/pause), call management, and voice assistant activation.
- **NFC Area:** For quick pairing with NFC-enabled devices.
- **LED Indicators:** Show battery status and Bluetooth connection status.

Rear Ports



Image: The rear side of the speaker, revealing the covered ports for charging and auxiliary input, designed to protect against water ingress.

- **USB Charging Port:** For charging the speaker's internal battery.
- **3.5mm AUX Input:** For wired audio connection to devices without Bluetooth.

Setup

Charging the Speaker

1. Open the protective cover on the rear of the speaker to access the charging port.
2. Connect the small end of the USB charging cable to the speaker's USB port.
3. Connect the large end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The LED indicators will show charging status. A full charge provides approximately 15 hours of playtime.
5. Once fully charged, disconnect the cable and securely close the protective cover to maintain waterproof integrity.

Powering On/Off

- To power on, press and hold the Power button on the control panel until you hear an audible prompt and the LED indicators light up.
- To power off, press and hold the Power button again until you hear an audible prompt and the LED indicators turn off.

Bluetooth Pairing

The SuperStar S300 offers quick and convenient pairing with Bluetooth-enabled devices.

Standard Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (LED indicators will flash, and you may hear a 'pairing' prompt). If not, briefly press the Multi-Function button to enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Monster S300" from the list of found devices.
4. Once connected, the speaker will provide an audible confirmation, and the LED indicators will show a solid light.

NFC Pairing (for NFC-enabled devices)

1. Ensure NFC is enabled on your smartphone or device.
2. Gently tap your NFC-enabled device to the NFC area on the speaker's control panel.
3. Confirm the pairing request on your device if prompted.
4. The speaker will provide an audible confirmation once connected.

Connecting via AUX Input

For devices without Bluetooth, use the 3.5mm AUX input.

1. Open the protective cover on the rear of the speaker.
2. Connect a 3.5mm audio cable (not included) from your audio source to the AUX input port on the speaker.
3. The speaker will automatically switch to AUX mode.
4. Adjust volume from both your audio source and the speaker.
5. Remember to close the protective cover when not in use to maintain waterproof integrity.

Pairing Two Speakers for Stereo Sound

The SuperStar S300 supports pairing two units for a true stereo audio experience.

1. Ensure both SuperStar S300 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Multi-Function button until you hear a specific tone indicating stereo pairing mode.
3. The primary speaker will automatically search for the second speaker.
4. Once connected, you will hear an audible confirmation, and the LED indicators on both speakers will change to indicate a successful stereo pair.
5. Now, connect your Bluetooth device to the primary speaker as per the 'Standard Bluetooth Pairing' instructions. Audio will play in stereo across both speakers.

Operating

Music Playback

- **Play/Pause:** Press the Multi-Function button once.
- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons on the speaker.
- **Skip Track:** Double-press the Multi-Function button for next track. Triple-press for previous track.

Speakerphone Functionality

The SuperStar S300 features a superior speakerphone with echo cancellation.

- **Answer Call:** Press the Multi-Function button once when a call comes in.
- **End Call:** Press the Multi-Function button once during a call.
- **Reject Call:** Press and hold the Multi-Function button for 2 seconds when a call comes in.

Voice Control (MonsterTalk powered by Melody)

The speaker is enabled with MonsterTalk for voice control.

- To activate your device's voice assistant (e.g., Siri, Google Assistant), press and hold the Multi-Function button until you hear a prompt.
- Speak your command clearly into the speaker's microphone.

Maintenance

Cleaning

- Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For stubborn dirt, a mild soap solution can be used, ensuring no liquid enters the ports.
- Always ensure the speaker is completely dry before charging.

Waterproof Care (IPX7)

- The IPX7 rating means the speaker can be submerged in water up to 1 meter for up to 30 minutes.
- Always ensure the charging and AUX port covers are firmly sealed before exposing the speaker to water.
- After exposure to chlorinated or saltwater, rinse the speaker with fresh water and allow it to air dry completely before charging.

Battery Care

- To prolong battery life, avoid fully discharging the speaker frequently.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Charge the speaker at least once every three months to prevent battery degradation.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device.	Ensure speaker is in pairing mode (flashing LED). Disconnect from other devices. Turn Bluetooth off/on on your device.
No sound or low volume.	Volume too low on speaker or connected device; incorrect input mode.	Increase volume on both speaker and connected device. Ensure correct input mode (Bluetooth/AUX).
Sound distortion.	Volume too high; low battery.	Reduce volume. Charge the speaker.
Cannot connect two speakers for stereo.	Speakers are already connected to a device or not in stereo pairing mode.	Ensure both speakers are disconnected from other devices. Follow stereo pairing instructions carefully.

Specifications

Model Name	SuperStar S300
Model Number	129742-00
Speaker Type	Portable Bluetooth Speaker
Connectivity	Bluetooth, 3.5mm Audio (AUX)
Waterproof Rating	IPX7 (Submersible up to 1 meter for 30 minutes)
Battery Life	Up to 15 hours
Speaker Configuration	4 Speaker Configuration (2 Full-Range Drivers, 2 Passive Bass Radiators)
Audio Output Mode	Stereo (when paired with a second S300)
Item Weight	0.7 Kilograms
Product Dimensions	13.34 x 12.07 x 27.94 cm
Manufacturer	Monster Canada

Warranty and Support

Monster products are designed and manufactured to the highest quality standards. For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Monster website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Monster customer support through their official channels. Please have your model number (S300 or 129742-00) and purchase date ready.

© 2024 Monster. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B078T3XLVX

More documents and user manuals: **https://manuals.plus/**