Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tribit XSound Go

Tribit XSound Go Portable Bluetooth Speaker User Manual

Model: XSound Go (EB-P3400)

1. Introduction

Thank you for choosing the Tribit XSound Go Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

2. What's in the Box

- Tribit XSound Go Portable Bluetooth Speaker
- USB-C Charging Cable
- Attached Lanyard/Strap
- User Manual

3. Product Overview

Familiarize yourself with the speaker's components and controls.

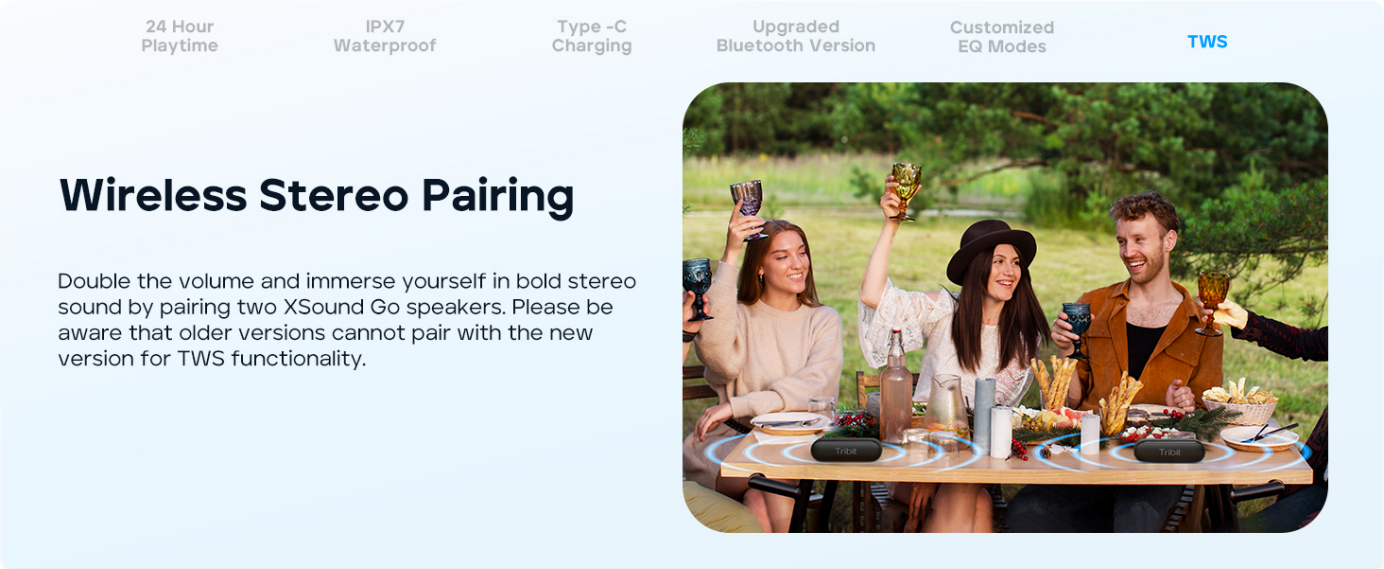


Image 3.1: Front and back view of the Tribit XSound Go speaker, showing the speaker grille on the front and the control panel and port cover on the back.

Controls and Ports

1. **Power Button:** Press and hold to turn on/off.
2. **Bluetooth Button:** Press to enter pairing mode.
3. **Play/Pause Button:** Play or pause music. Answer/end calls.
4. **Volume Down (-):** Decrease volume.
5. **Volume Up (+):** Increase volume.
6. **USB-C Charging Port:** For charging the speaker.
7. **AUX Input:** For wired audio connection.

4. Setup

4.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C cable and a 5V power adapter (not included).

- Open the protective flap on the back of the speaker.
- Insert the USB-C cable into the charging port.
- Connect the other end of the cable to a USB power source.
- The LED indicator will show charging status. A full charge takes approximately 4 hours.
- Close the protective flap securely after charging to maintain water resistance.

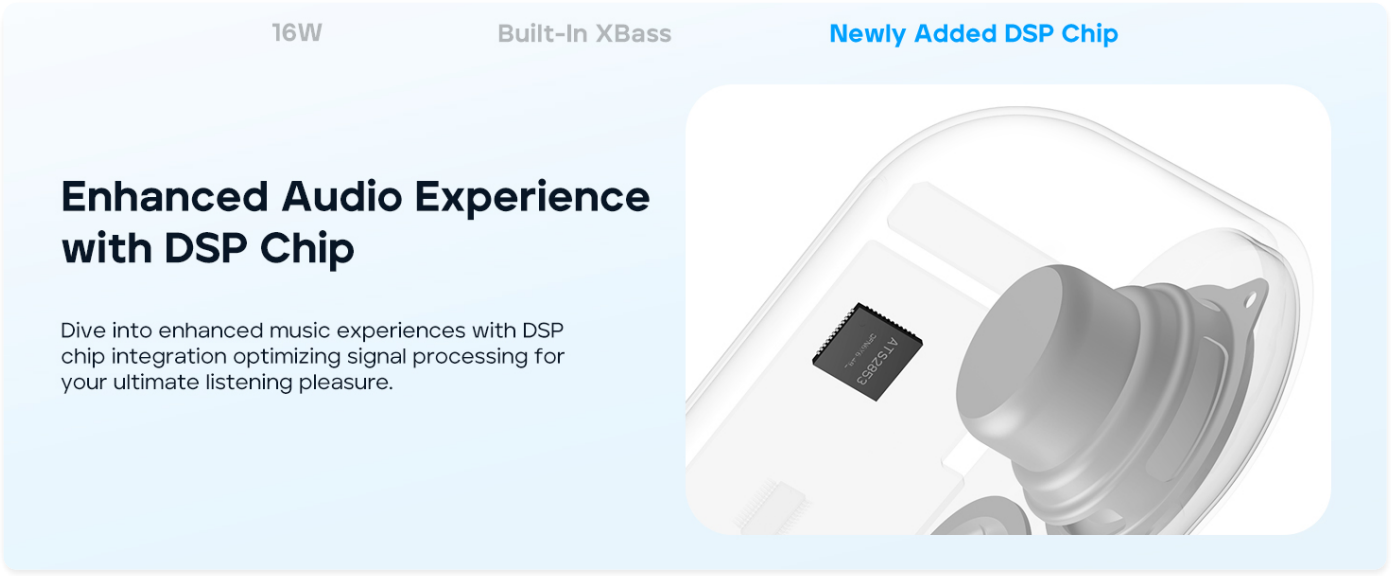


Image 4.1: The Tribit XSound Go speaker being charged via its USB-C port, with the charging cable connected.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button for 2 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button for 2 seconds. You will hear an audible prompt.

4.3 Bluetooth Pairing

Connect your speaker to a Bluetooth-enabled device.

1. Turn on the speaker. The Bluetooth indicator will flash blue, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Tribit XSound Go" from the list.
4. Once connected, the Bluetooth indicator will turn solid blue, and you will hear a confirmation sound.

4.4 True Wireless Stereo (TWS) Pairing

Pair two Tribit XSound Go speakers for a stereo sound experience.**Note:** Older versions of XSound Go may not be compatible with newer versions for TWS pairing.

1. Ensure both XSound Go speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Bluetooth button for 3 seconds. You will hear a prompt.
3. The two speakers will automatically connect to each other. Once connected, the primary speaker's Bluetooth indicator will flash blue, and the secondary speaker's indicator will be solid blue.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 4.3.

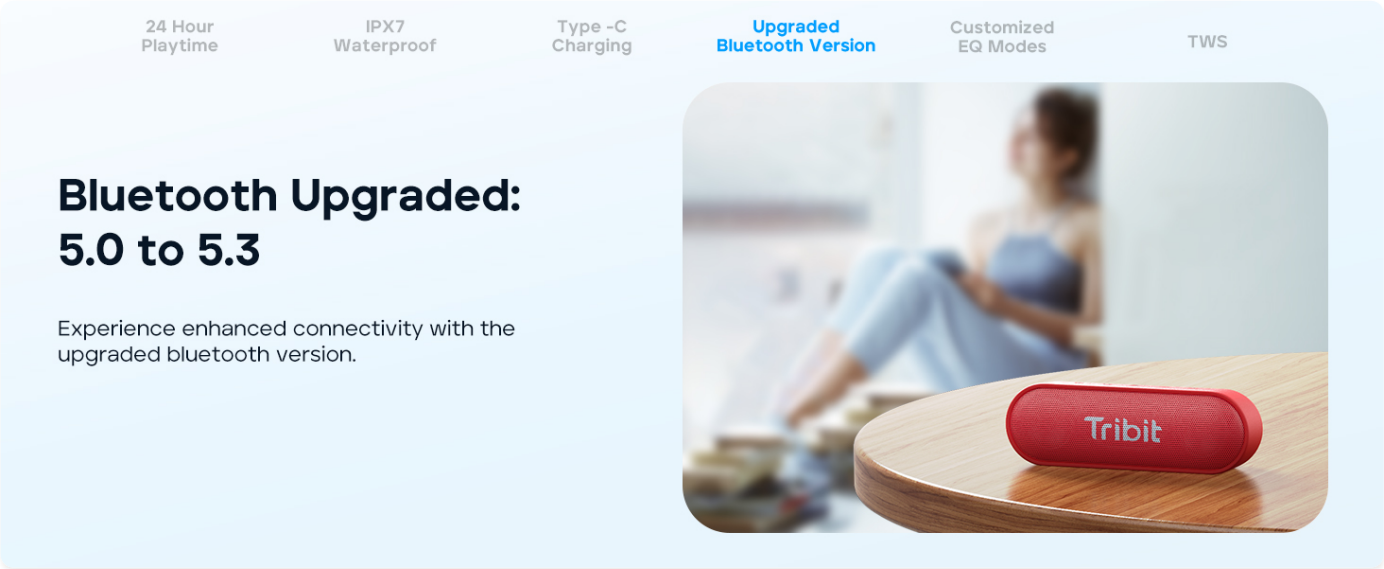


Image 4.2: Two Tribit XSound Go speakers set up for True Wireless Stereo (TWS) pairing, enhancing the audio experience.

5. Operating Instructions

5.1 Music Playback

Action	Button Press
Play/Pause	Press Play/Pause button once
Volume Up	Press '+' button
Volume Down	Press '-' button
Next Track	Press '+' button for 2 seconds
Previous Track	Press '-' button for 2 seconds

5.2 Call Management

Action	Button Press
Answer/End Call	Press Play/Pause button once
Reject Call	Press Play/Pause button for 2 seconds

5.3 Voice Assistant

Press and hold the Play/Pause button for 2 seconds to activate your device's voice assistant (Siri, Google Assistant, etc.).

5.4 Custom EQ Modes (via Tribit App)

Enhance your listening experience by customizing the equalizer settings through the Tribit App. Download the Tribit App from your device's app store.

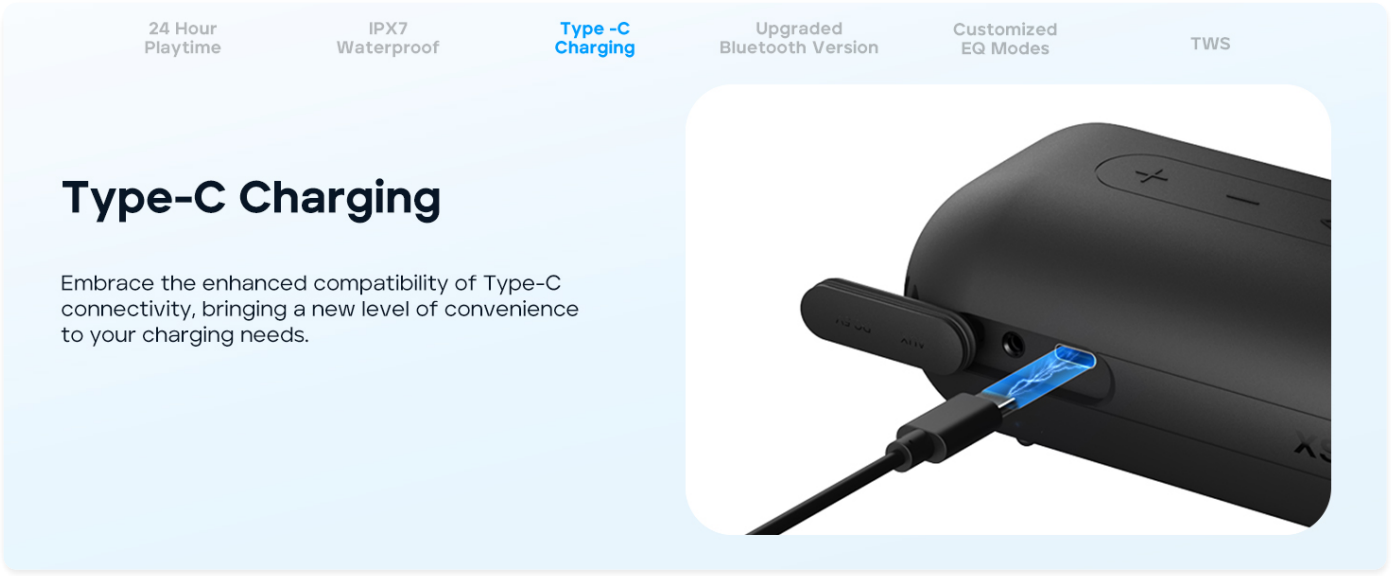


Image 5.1: A user interacting with the Tribit App on a smartphone to customize the equalizer settings for the XSound Go speaker.

6. Maintenance

6.1 Waterproofing (IPX7)

The Tribit XSound Go is IPX7 waterproof, meaning it can be submerged in water up to 1 meter (3.3 feet) for 30 minutes. To ensure water resistance:

- Ensure the rubber flap covering the charging port and AUX input is fully and securely closed before exposing the speaker to water.
- Do not expose the speaker to salt water or other chemicals. If it comes into contact, rinse with fresh water and dry thoroughly.
- Do not charge the speaker if it is wet.



Image 6.1: The Tribit XSound Go speaker partially submerged in water, demonstrating its IPX7 waterproof capability.

6.2 Cleaning and Storage

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- If storing for an extended period, charge the battery to about 50% every few months to prolong battery life.

7. Troubleshooting

Problem	Solution
Speaker won't turn on	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair with device	Ensure speaker is in pairing mode (flashing blue LED). Turn off and on Bluetooth on your device. Move speaker closer to device. Forget "Tribit XSound Go" from your device's Bluetooth list and re-pair.
No sound	Increase volume on both speaker and device. Ensure speaker is connected. Check if AUX cable is properly inserted if using wired connection.
Poor sound quality	Move speaker closer to your device. Remove any obstacles between speaker and device. Try a different audio source.
TWS pairing fails	Ensure both speakers are XSound Go models and are not connected to other devices. Ensure they are close to each other. Note that older and newer versions may not be compatible for TWS.

8. Specifications

Feature	Detail
Model Name	XSound Go
Model Number	EB-P3400
Bluetooth Version	5.3
Output Power	16W (2 x 8W)
Playtime	Up to 24 hours (at 60% volume)
Charging Time	Approx. 4 hours
Battery Capacity	4000 mAh
Water Resistance	IPX7
Bluetooth Range	Up to 30 meters (100 feet)
Dimensions (D x W x H)	2.4"D x 6.7"W x 2.2"H (6.1 x 17.0 x 5.6 cm)
Weight	13.44 ounces (381 grams)
Connectivity	Bluetooth, AUX-in

9. Safety Information

- Do not disassemble, repair, or modify the product.
- Do not expose the product to extreme temperatures or direct sunlight.
- Keep the product away from children and pets.

- Use only certified chargers and cables.
- Do not use the product during a thunderstorm.
- Dispose of the product responsibly according to local regulations.

10. Warranty and Support

Tribit products come with a limited warranty. For detailed warranty information, product support, or to register your product, please visit the official Tribit website or contact their customer service.
Official Tribit Website: www.tribit.com
Customer Service Email: Refer to the Tribit website for the most current contact information.

11. Product Video Overview

Watch an official video for a visual guide to the Tribit XSound Go speaker.

Your browser does not support the video tag.

Video 11.1: An official product video showcasing the features and design of the Tribit XSound Go Bluetooth Speaker.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B078TH3PHL

More documents and user manuals: **https://manuals.plus/**