Charbroil 8336564P06V

Char-Broil 3-4 Burner Large Basic Grill Cover Instruction Manual

Product Overview

The Char-Broil 3-4 Burner Large Basic Grill Cover is designed to provide essential protection for your outdoor grill. Constructed from durable 14mil vinyl fabric, it offers resistance against various weather conditions, helping to prolong the life of your grill. This cover is suitable for 3-4 burner grills, large charcoal grills, and smokers up to 62 inches wide.

Key Features

- Designed to fit 3-4 burner grills, large charcoal grills, and smokers up to 62 inches wide.
- Features 14mil vinyl fabric for robust grill protection.
- Equipped with a draw-string for an adjustable and secure fit.
- Sealed seams enhance water resistance.
- UV protection helps prevent fading from sun exposure.
- Measures 62 inches (W) x 42 inches (H) x 24 inches (D).



Image: The Char-Broil 3-4 Burner Large Basic Grill Cover, shown covering a grill.

Important Safety Information

CAUTION: To reduce fire risk, keep away from open flames. Clean and dry thoroughly to prevent mold growth and water damage.

Setup Instructions

1. **Ensure Grill is Cool:** Before placing the cover, ensure your grill is completely cool to the touch. Placing the cover on a hot grill can cause damage to the cover and pose a fire hazard.
2. **Position the Cover:** Carefully drape the grill cover over your grill, aligning the top of the cover with the top of the grill.
3. **Adjust for Fit:** Pull the cover down evenly on all sides until it fully covers the grill.
4. **Secure with Drawstring:** Locate the drawstring at the bottom edge of the cover. Pull the drawstring tight and secure it using the cord lock to ensure a snug fit. This helps prevent the cover from being blown off by wind.



Image: The grill cover properly installed on a grill, providing full coverage.



Image: A detailed view of the adjustable drawstring, used to secure the cover.

Usage Guidelines

This grill cover is designed for outdoor use to protect your grill from environmental elements such as rain, dust, dirt, and UV rays. Regular use of the cover helps maintain the cleanliness and appearance of your grill, extending its lifespan.

- Always cover your grill when it is not in use and has completely cooled down.
- Ensure the drawstring is tightened to prevent wind from dislodging the cover.
- Periodically check the cover for any signs of wear or damage, especially after severe weather.

Care and Maintenance

Proper care will ensure the longevity of your grill cover and continued protection for your grill.

1. **Cleaning:** Wipe the cover clean with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners, as these can damage the vinyl material.
2. **Drying:** Always ensure the cover is completely dry before storing it or placing it back on the grill. This prevents moisture buildup, which can lead to mold or mildew growth.
3. **Storage:** If storing the cover for an extended period, fold it neatly and keep it in a dry, cool place away from direct sunlight.
4. **Inspection:** Regularly inspect the cover for any tears, cracks, or signs of wear. Timely replacement can prevent damage to your grill.



Image: A diagram illustrating the sealed seam and material layers (PE Liner, 14 Mil Thickness, PP Base Material) of the grill cover.

TROUBLESHOOTING

Issue	Possible Cause	Solution

Issue	Possible Cause	Solution
Cover does not fit properly.	Incorrect size purchased; grill dimensions exceed cover capacity.	Verify your grill's dimensions against the cover's specifications (62" W x 42" H x 24" D). Ensure the drawstring is fully utilized for a snug fit.
Cover blows off in windy conditions.	Drawstring not tightened sufficiently.	Ensure the drawstring is pulled tight and secured with the cord lock at the base of the cover.
Mold or mildew growth on cover.	Cover placed on a wet grill or not dried thoroughly after cleaning.	Clean the cover with a mild soap and water solution. Ensure both the grill and the cover are completely dry before covering the grill.
Tears or cracks in the cover material.	Normal wear and tear; prolonged exposure to harsh elements; physical damage.	While the cover is designed for durability, extreme conditions or prolonged use will eventually lead to wear. Consider replacing the cover if significant damage occurs to maintain optimal protection.

Product Specifications

Specification	Detail
Brand	Charbroil
Model Number	8336564P06V
Material	Vinyl (PE), 14mil thickness
Color	Black
Product Dimensions (W x H x D)	62 inches x 42 inches x 24 inches
Closure Type	Drawstring
Item Weight	1.2 pounds
UPC	047362365644

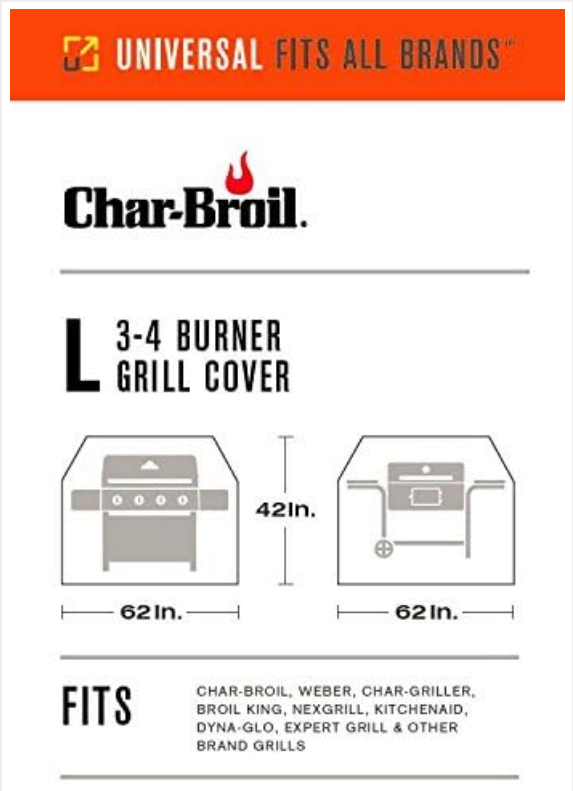


Image: A diagram illustrating the dimensions (62 inches W, 42 inches H) for the large 3-4 burner grill cover.

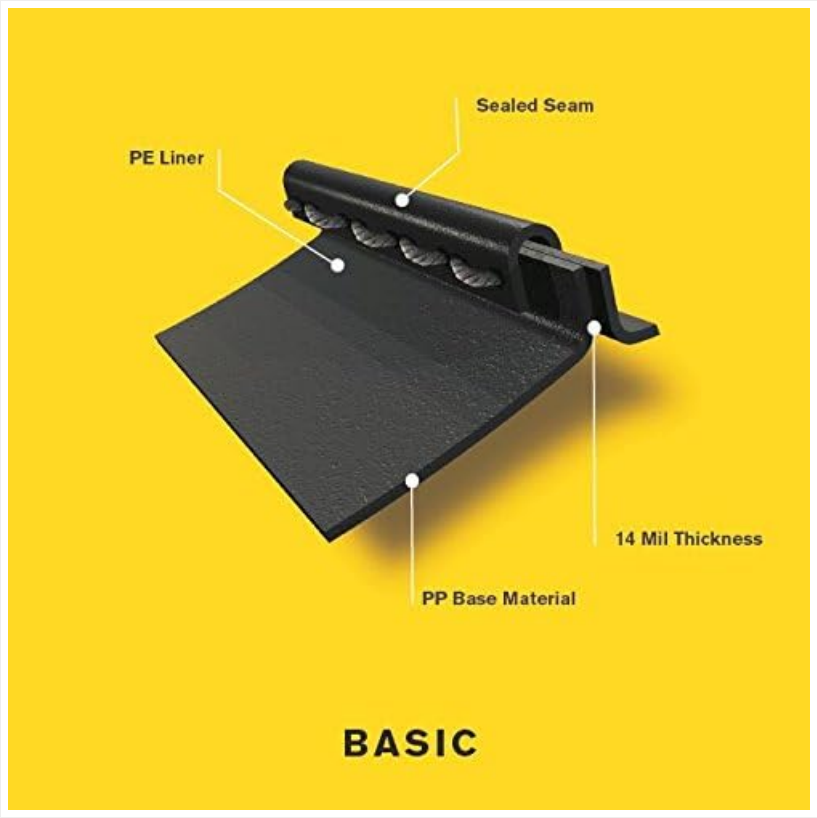


Image: A diagram detailing the construction of the cover, highlighting the PE Liner, Sealed Seam, 14 Mil Thickness, and PP Base Material.

Warranty and Support

For specific warranty information or product support, please refer to the documentation included with your purchase or contact Charbroil customer service directly. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question