ZdalaMit BN59-01267A

ZdalaMit BN59-01267A Replacement Remote Control User Manual

Model: BN59-01267A

1. Introduction

This manual provides instructions for the ZdalaMit BN59-01267A replacement remote control. This remote is designed to function as a direct replacement for various Samsung TV models without the need for programming.

Compatible Samsung TV Models:

- UN32M5300, UN40M5300, UN43M5300, UN49M5300, UN50M5300
- UN32M530, UN32M530D
- UN24M4500A, UN28M4500A, UN32M4500A
- UN28M4500AF, UN32M4500AF, UN32M5300AF, UN49M5300AF
- UN49M530DAF, UN50M5300AF
- UN28M4500AFXZA, UN32M4500AFXZA, UN32M5300AFXZA, UN49M5300AFXZA, UN49M530DAFXZA, UN50M5300AFXZA



Image 1.1: Front view of the ZdalaMit BN59-01267A replacement remote control, showing all buttons and layout.



Image 1.2: Angled view of the ZdalaMit BN59-01267A replacement remote control, highlighting its ergonomic design.

2. Setup

2.1 Battery Installation

The ZdalaMit BN59-01267A remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open the compartment.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.



Image 2.1: View of the remote control with the battery cover removed, showing the two AAA battery slots and polarity markings.

3. Operating Instructions

This replacement remote control is pre-programmed and functions identically to the original Samsung remote. Simply point the remote at your Samsung TV and press the desired button.

3.1 Key Functions Overview

- **Power ( )**: Turns the TV on or off.
- **Source**: Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **Volume (+/-)**: Adjusts the TV volume.
- **Channel (CH ▲/▼)**: Changes TV channels.
- **Mute**: Mutes or unmutes the TV audio.
- **E-MANUAL**: Accesses the TV's electronic manual.
- **Home (⌂)**: Navigates to the TV's Smart Hub or main menu.
- **Sleep**: Sets a sleep timer for the TV.
- **Settings**: Opens the TV's settings menu.
- **Info**: Displays information about the current program or input.
- **Navigation Buttons (▲ ▼ ◄ ►)**: Navigates through menus and options.
- **Enter (Center Button)**: Confirms selections.
- **Return**: Goes back to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Color Buttons (A, B, C, D)**: Functionality varies depending on the TV model and current application.
- **P.SIZE**: Adjusts picture size.
- **CC**: Activates or deactivates Closed Captions.
- **REC, Play, Pause, Stop, Fast Forward, Rewind**: Media playback controls.



Image 3.1: A user operating the remote control, demonstrating its use with a compatible Samsung television.

4. Maintenance

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

5. Troubleshooting

5.1 Remote Not Responding

- **Check Batteries**: Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA alkaline batteries if necessary.
- **Line of Sight**: Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance**: Ensure you are within the effective operating range (approximately 30 feet / 10 meters).
- **TV Sensor**: Verify that the TV's infrared sensor is clean and not covered.

5.2 Limited Operating Range

- **Battery Level**: Weak batteries can reduce the remote's effective range. Replace them.
- **Interference**: Strong light sources or other electronic devices might interfere with the remote's signal. Try operating the remote in a different environment.

6. Specifications

Model Number	BN59-01267A (Item model number: 8541714869)
Brand	ZdalaMit
Product Dimensions	7 x 1.5 x 0.6 inches (17.8 x 3.8 x 1.5 cm)
Item Weight	2 ounces (56.7 grams)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Special Feature	Pre-programmed, no setup required
Max Number of Supported Devices	1 (Television)
Compatible Devices	Samsung Televisions (specific models listed in Introduction)

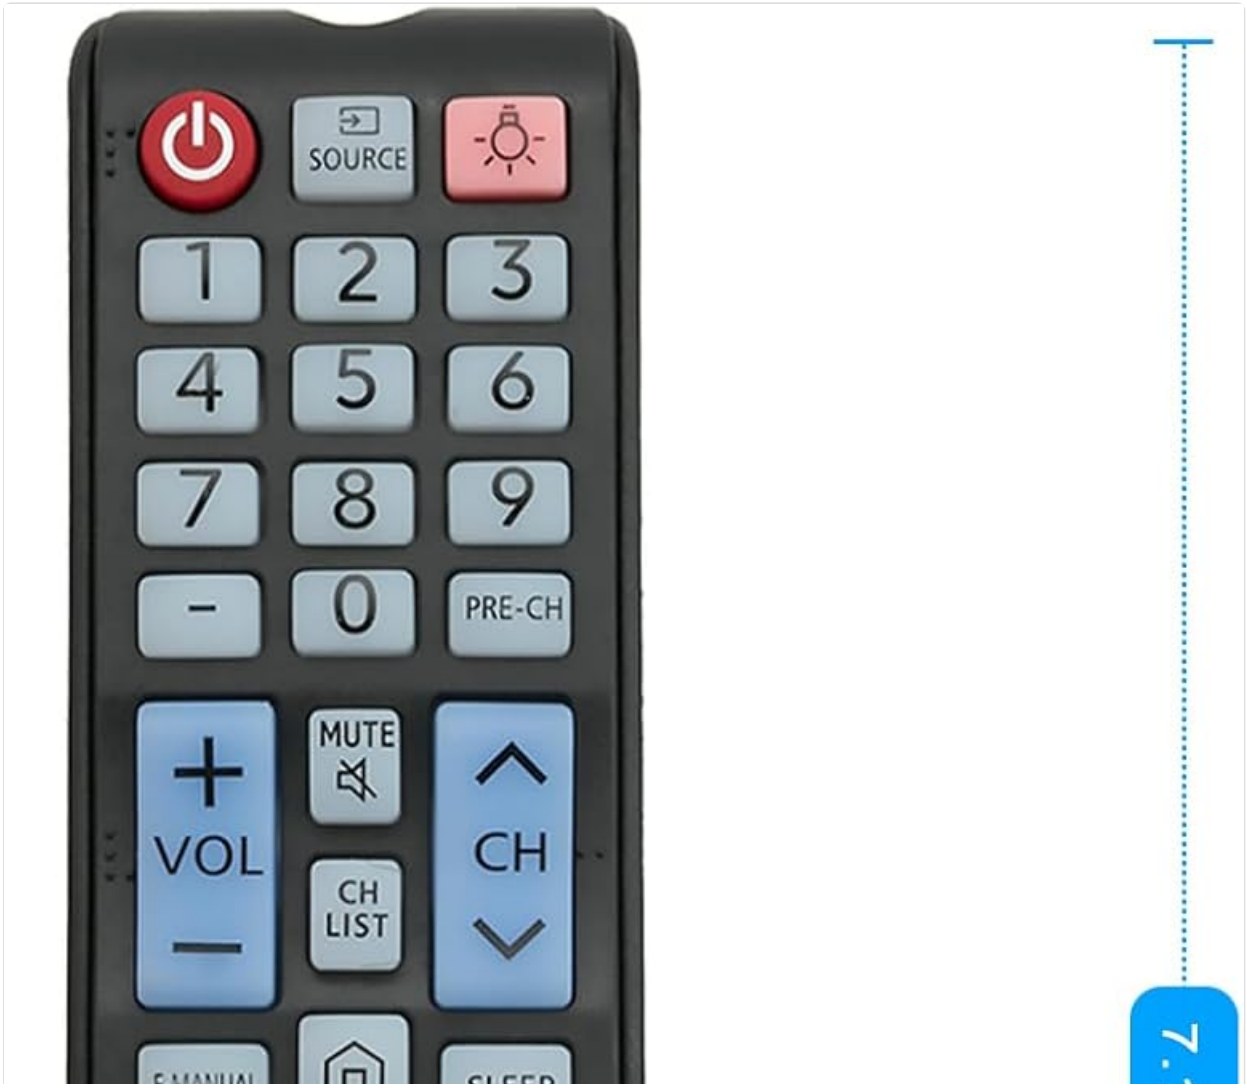




Image 6.1: The remote control displaying its physical dimensions: 7.1 inches in length and 1.75 inches in width.

7. Warranty and Support

For any queries or support regarding your ZdalaMit BN59-01267A replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question