MILTON Clarion 2000

Milton Clarion 2000 Stainless Steel Casserole

User Instruction Manual

1. Introduction

Thank you for choosing the Milton Clarion 2000 Stainless Steel Casserole. This manual provides essential information for the proper setup, operation, and maintenance of your new casserole to ensure its longevity and optimal performance. Please read these instructions carefully before first use and retain them for future reference.

2. Product Overview

The Milton Clarion 2000 Casserole is designed to keep your food hot or cold for extended periods, making it ideal for serving at home or for picnics. It features a durable stainless steel body and a transparent glass lid for easy viewing of contents.



Front view of the Milton Clarion 2000 Stainless Steel Casserole, showcasing its polished steel body and transparent glass lid with a black handle.

Key Features:

- **Double-Walled Stainless Steel:** Provides superior insulation to maintain food temperature.
- **Transparent Glass Lid:** Allows for easy monitoring of food without opening the casserole.
- **Durable Construction:** Made from high-quality 304 grade stainless steel.
- **Easy Grip Handle:** The lid features an ergonomic handle for convenient opening and closing.
- **Capacity:** 1950 ml, suitable for various serving needs.



The casserole displayed in a kitchen environment, emphasizing its double-walled stainless steel construction for heat retention, clear toughened glass lid for visibility, and attractive design.

3. Setup

Unpacking and Initial Cleaning:

1. Carefully remove the casserole and all packaging materials from the box.
2. Wash the casserole body and glass lid thoroughly with mild dish soap and warm water before first use.
3. Rinse thoroughly and dry completely with a soft cloth to prevent water spots.

4. Operating Instructions

Using Your Casserole:

- **For Hot Food:** Transfer freshly cooked hot food directly into the casserole. Ensure the lid is securely closed to trap heat effectively.

- **For Cold Food:** Place chilled food into the casserole. Close the lid tightly to maintain cold temperatures.
- The transparent glass lid allows you to check the food without releasing heat or cold.
- The functional and leak-proof lid can be opened or shut with a simple motion.



The casserole shown containing a meal of rice and vegetables, demonstrating its use for serving and keeping food warm.

Important Usage Notes:

- **Do Not Place on Direct Flame:** This casserole is not designed for direct heating on stovetops or open flames.
- **Not Oven Safe:** Do not use this casserole in an oven or microwave.
- Always ensure the lid is properly seated to maximize insulation.



A blue Milton Clarion Casserole containing food, with text indicating 'No Direct Flame Heating' and 'Stainless Steel Interior'.

5. Maintenance

Cleaning and Care:

- **Washing:** The casserole is dishwasher safe. Alternatively, it can be hand washed with mild soap and water.
- **Drying:** Always dry the casserole completely after washing to prevent water stains and maintain its shine.
- **Storage:** Store in a clean, dry place when not in use.
- Avoid using abrasive cleaners or scourers that could scratch the stainless steel surface or the glass lid.



An infographic illustrating some features of the casserole. *Note: For specific care instructions, please refer to the detailed specifications in this manual.*

6. Troubleshooting


Common Issues and Solutions:

Problem	Possible Cause	Solution
Food not staying hot/cold for long	Lid not sealed properly; Casserole not pre-heated/chilled; Food not hot/cold enough when placed inside.	Ensure lid is tightly closed. For best results, pre-heat with hot water or pre-chill with cold water for a few minutes before adding food. Ensure food is at desired temperature when placed in casserole.
Water spots or dull finish	Improper drying; Hard water residue.	Always dry immediately and thoroughly after washing. Use a soft cloth. For hard water spots, use a vinegar solution followed by rinsing and drying.

Problem	Possible Cause	Solution
Lid difficult to open/close	Food residue or debris in the sealing groove.	Clean the lid and the rim of the casserole thoroughly, ensuring no food particles are obstructing the seal.

7. Specifications

Detailed specifications for the Milton Clarion 2000 Stainless Steel Casserole:

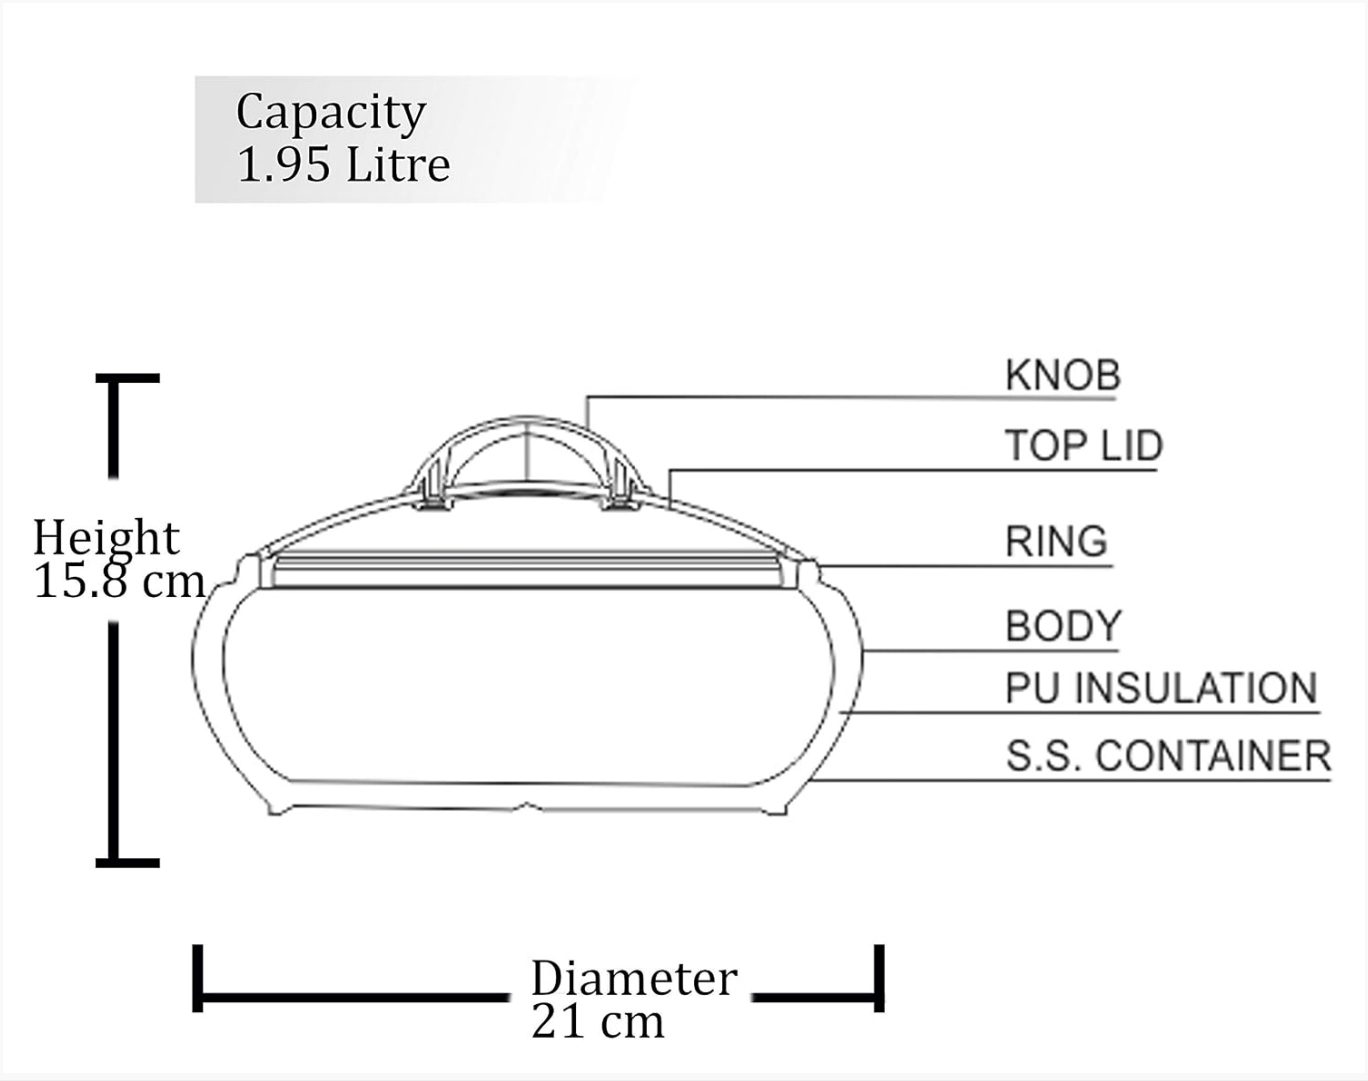

A technical diagram detailing the casserole's components (knob, top lid, ring, body, PU insulation, S.S. container) and its key dimensions: 1.95 Litre capacity, 15.8 cm height, and 21 cm diameter.

Attribute	Detail
Brand	MILTON
Model	Clarion 2000
Material	Stainless Steel (304 Quality)
Lid Material	Glass
Capacity	1950 Milliliters

Attribute	Detail
Colour	Steel Plain (with Transparent Lid)
Finish Type	Polished
Shape	Round
Item Weight	500 Grams
Product Dimensions	21D x 21W x 15.8H Centimeters
Product Care Instructions	Hand/Machine Wash
Is Oven Safe	No
Is Dishwasher Safe	Yes
Included Components	1 - Piece Clarion Casserole (1950 ml)
Country of Origin	India

8. Warranty and Support

For any warranty claims, product support, or inquiries, please contact Milton customer service directly. Refer to the product packaging or Milton's official website for the most current contact information.

Milton Official Website: www.milton.in

© 2025 MILTON. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question